



Guardian

User Guide

Legal notices

Information about the Nozomi Networks copyright and use of third-party software in the Nozomi Networks product suite.

Copyright

Copyright © 2013-2026, Nozomi Networks. All rights reserved. Nozomi Networks believes the information it furnishes to be accurate and reliable. However, Nozomi Networks assumes no responsibility for the use of this information, nor any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent, copyright, or other intellectual property right of Nozomi Networks except as specifically described by applicable user licenses. Nozomi Networks reserves the right to change specifications at any time without notice.

Third Party Software

Nozomi Networks uses third-party software, the usage of which is governed by the applicable license agreements from each of the software vendors. Additional details about used third-party software can be found at <https://security.nozominetworks.com/licenses>.

Contents

Chapter 1. Introduction.....	9
Guardian overview.....	11
Chapter 2. Sensors.....	13
List.....	16
Map.....	18
Graph.....	20
Do a force update on sensors.....	21
Allow a sensor.....	22
Export a list of sensors.....	23
Upload a map.....	24
Arc sensor configuration.....	25
Deployment settings.....	25
Configure an Arc sensor.....	34
Chapter 3. Alerts.....	39
Standard mode.....	42
Expert mode.....	43
Alert deduplication.....	44
View alerts in standard mode.....	45
View alerts in expert mode.....	45
Closing alerts.....	46
Actions menu.....	49
Open the Actions menu in standard mode.....	51
Open the Actions menu in expert mode.....	51
Configure an alert.....	52
Acknowledge an alert.....	53
Close an alert.....	53
Download a trace.....	56
Download a malicious file.....	56
Edit a note for an alert.....	57
View a diff from an alert.....	59
Navigate from an alert.....	59
Edit a playbook associated with an alert.....	60
Details page.....	61
Chapter 4. Assets.....	65
List.....	67
Diagram.....	69
Configure an asset.....	70
Generate a PDF report of an asset.....	71

Navigate from an asset.....	72
View more details for an asset.....	73
Details page.....	74
Overview.....	76
Sessions.....	77
Alerts.....	78
Software.....	79
Vulnerabilities.....	80
Variables.....	81
Network graph.....	82
Physical graph.....	83
Hardware components.....	84
Chapter 5. Queries.....	87
Data sources.....	91
Basic operators.....	94
Commands.....	96
Nodes-specific commands reference.....	102
Link-events-specific commands reference.....	104
Functions.....	105
Examples.....	109
Pie chart.....	109
Column chart.....	109
Where with multiple conditions in OR.....	110
Bucket and history.....	111
Join.....	111
Compute the availability history.....	112
Complex field types.....	113
Chapter 6. Smart Polling in Guardian.....	117
Plans.....	120
Node points.....	121
Settings.....	122
Create a Smart Polling plan in Guardian.....	123
Edit a Smart Polling plan in Guardian.....	125
Add a network node to a Smart Polling plan.....	126
Add a node from the Network page.....	128
Edit the run interval of a progressive Smart Polling plan in Guardian.....	129
Progressive mode enablement in Guardian.....	130
Enable progressive mode in Guardian.....	131
Log level customization.....	132
View the enriched information history for a node.....	133
Chapter 7. Arc in Guardian.....	135
Architecture.....	138
Arc in Guardian.....	139

Deployment.....	140
Advanced.....	141
Execution details.....	143
Deployment settings.....	143
Upstream.....	145
Endpoint.....	146
Network sensor.....	148
Other.....	151
Node points.....	153
Chapter 8. Network.....	155
Nodes.....	158
Configure a node.....	159
Show alerts for a node.....	160
Show requested traces for a node.....	160
Request a trace for a node.....	161
Manage learning for a node.....	163
Navigate from a node.....	164
Add a node to a Smart Polling plan.....	165
Links.....	168
Link events.....	168
Link availability.....	169
Configure a link.....	171
Show alerts for a link.....	172
Show requested traces for a link.....	172
Request a trace for a link.....	172
Show events for a link.....	174
Show captured URLs for a link.....	174
Manage learning for a link.....	175
Navigate from a link.....	176
Physical links.....	178
Sessions.....	179
Show requested traces for a session.....	179
Request a trace for a session.....	180
Navigate from a session.....	183
Traffic.....	184
Details page.....	185
Chapter 9. Graph.....	187
Network.....	190
Assets.....	193
Physical.....	197
Graph controls.....	201
Layout.....	201
Magic wand.....	203

Chapter 10. Process.....	205
List.....	208
Protocol connections.....	209
Settings.....	210
Configure a variable.....	211
View the details of a variable.....	214
Favorite a variable.....	216
Navigate from a variable.....	217
Chapter 11. Reports.....	219
Dashboard.....	222
Management.....	223
Generated.....	226
Scheduled.....	227
Settings.....	228
Create a report.....	229
Generate a report.....	231
Download a report.....	233
Delete a report.....	233
Add a folder.....	234
Edit a folder.....	235
Delete a folder.....	236
Import a schema.....	236
Export a schema.....	237
Upload a custom logo.....	238
Configure SMTP settings.....	240
Filter a report globally.....	242
Add a widget to a report.....	245
Filter a report with a widget.....	247
Chapter 12. Assertions.....	249
Assertion operators.....	253
Save an assertion.....	254
Customize assertion name and description.....	256
Edit an assertion.....	258
Configure an assertion.....	259
Configure an assertion on links.....	260
Configure an assertion on variables.....	262
Chapter 13. Time machine.....	265
Time machine diffs.....	269
Load a snapshot.....	271
Request a diff.....	272
Reload the diff operation progress.....	273
View a diff from an alert.....	274

Chapter 14. Vulnerabilities.....	275
Assets.....	278
List.....	279
Stats.....	280
Details page.....	281
Chapter 15. Administration.....	283
Administration page.....	285
Chapter 16. Personal settings.....	287
Other actions.....	290
Change your password.....	291
Edit an OpenAPI key.....	292
Generate an OpenAPI key.....	293
Clear your personal settings.....	295
Request a continuous trace.....	296
Request a custom trace.....	297
Show requested traces.....	299
Download a requested trace.....	300
Zone filters.....	301
Glossary.....	303



Chapter 1. Introduction



Guardian overview

Guardian is the main Nozomi Networks sensor.

Asset discovery

Guardian gives you the ability to automatically track your *industrial control systems (ICS)*, *operational technology (OT)* and *Internet of Things (IoT)/Industrial Internet of Things (IIoT)* assets.

- Highly accurate asset inventory of all communicating devices
- Extensive node information including name, type, serial number, firmware version and components
- Actionable risk assessment insights including security and reliability alerts, missing patches and vulnerabilities

Network visualization

Guardian gives you instant visibility of your entire network. This lets you:

- Have instant awareness of your *OT/IoT* networks and normal activity patterns
- Access key data such as traffic throughput, *transmission control protocol (TCP)* connections, and protocols
- Use intuitive dashboards and reports with macro and micro views, plus filtering and grouping

Automated vulnerability assessment

Guardian lets you quickly identify which *ICS*, *OT* and *IoT* devices are vulnerable. This provides:

- Efficient prioritization and remediation
- A faster response with vulnerability dashboards, drill-downs and reports
- Based on the U.S. government's *National Vulnerability Database (NVD)* for standardized naming, description and scoring

Continuously monitor your networks and automation systems. Guardian gives you:

- The ability to continuously monitor all your assets, network communications and supported protocols
- Easy access to summarized *ICS*, *OT* and *IoT* risk information
- The ability to highlight potential reliability issues, such as unusual process values

Anomaly-based detection

Guardian builds a baseline of your environment and uses that knowledge to detect threats such as transferred malware, suspicious communications, unwanted operations, or changes to the network.



Chapter 2. Sensors



The **Sensors** page lets you view all of the sensors that you have in your system.

The **Sensors** page has these three tabs:

- List
- Map
- Graph

List

The **List** page lets you view all of the sensors that you have in your system.

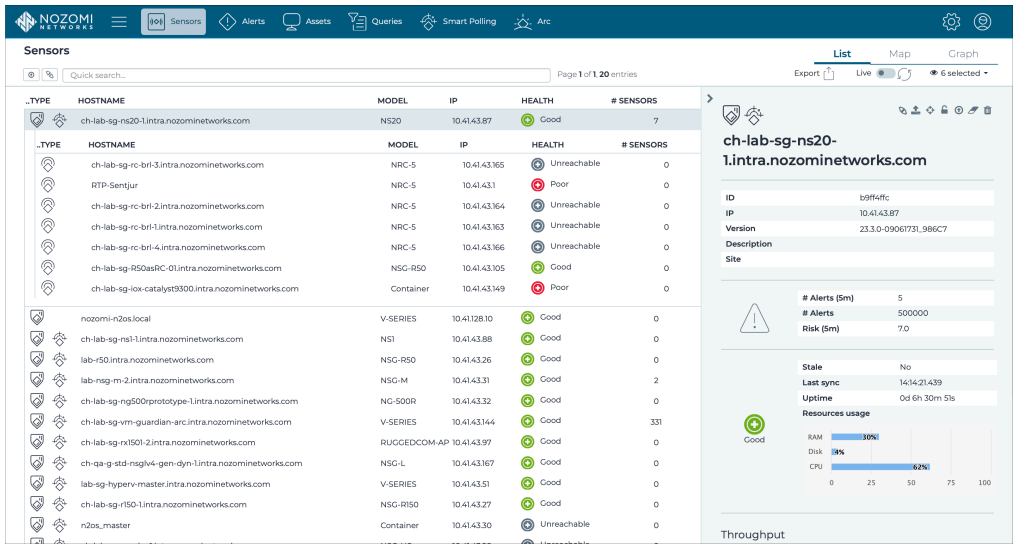


Figure 1. Sensors list

Force update

The force update  icon lets you do a force update on the selected sensors.

Allow/disallow

The allow/disallow  icon lets you allow or disallow sensors.

Quick search

The quick search field lets you easily do a search on the current page.

Export

The **Export**  icon lets you export the current list in either *comma-separated value (CSV)* or Microsoft Excel format.

Download Arc

The **Download Arc** dropdown lets you select, and download, the applicable Arc package for your *operating system (OS)* and architecture.

Live

The **Live**  toggle lets you change live view on, or off. When live mode is on, the page will refresh periodically.

Refresh

The **Refresh**  icon lets you immediately refresh the current view.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Information pane

The information pane to the right of the list of sensors shows additional information for the selected sensor.

It also lets you do these actions shown below.

Table 1. Sensors list actions

 Allow/Disallow sensor	After allowing a sensor, this icon shows:  Synchronized data coming from the sensor become part of the Environment of the Central Management Console (CMC) . Alerts coming from the sensor can be seen in the Alerts section.
 Focus on sensor	Allows to filter out only the sensor chosen data, such as Alerts and Environment.
 Go to sensor	Connect to a remote sensor directly from the CMC . Select this to open a new browser tab to the sensor selected login page. The action is hidden if the CMC isn't configured to allow this type of communication between sensors and CMC .
 Place in map	This action is used to place the sensor on the map.
 Toggle version lock	When locked, the sensor will not automatically update its software.
 Force update	Even if it is locked, the sensor will automatically update its software, with the version installed on the CMC .
 Clear sensor data on this machine	Clear all synchronized data at the CMC received from the selected sensor. Use this in combination with the clearing of the data on the sensor, and you will be able to restart the synchronization between the sensor and the CMC from an empty state
 Delete sensor	Clear all data received from the selected sensor and delete it from the list. If the sensor tries to sync with the CMC again, it shows as disallowed in the list.

Map

You can use the **Map** page to upload, and view, a map of the sensors in your environment.

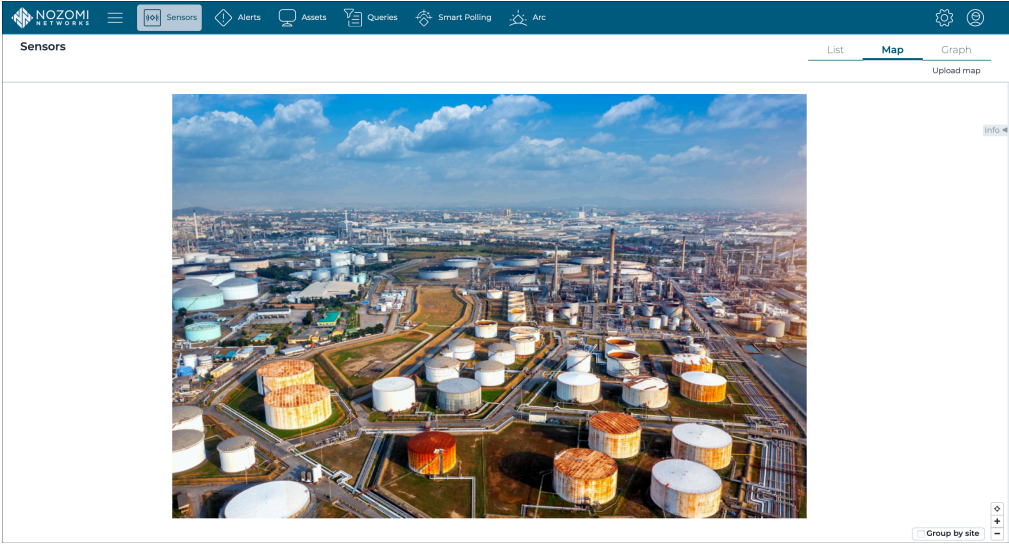


Figure 2. Sensors map

Info(rmation) pane

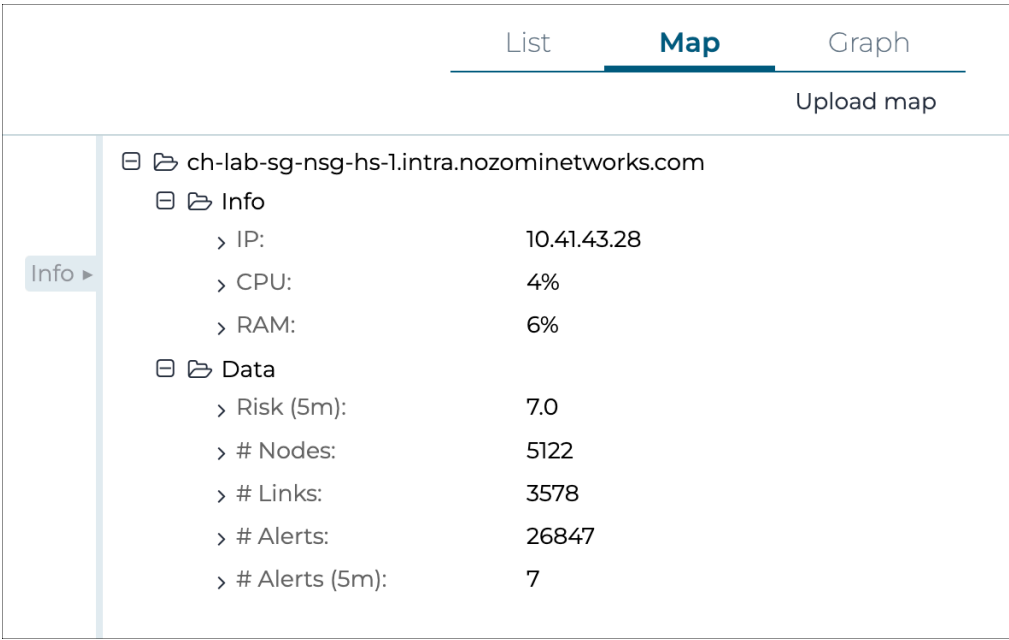


Figure 3. Info(rmation) pane

The **Info** pane lets you view information for the related sensor. The *identifier (ID)* of each sensor is used in the map to help you identify it. The marker color of the sensor relates to the risk of its alerts.

In the map view, a red indicator to the right of the sensor's *ID* shows the number of the alerts in the last five minutes. This indicator only shows if there are some alerts for the sensor. If the alerts in last 5 minutes increase, the sensor marker will blink for one minute.

If the site of the sensor has been specified in  **> System > General**, it is possible to enable the **Group by site** option, in the bottom right corner of the map view. The sensors with the same site will be grouped to deliver a simpler view of a complex installation.

**Note:**

The sensors map is also available as a widget.

Graph

The **Graph** page shows a graphical view of all the sensors in you environment.

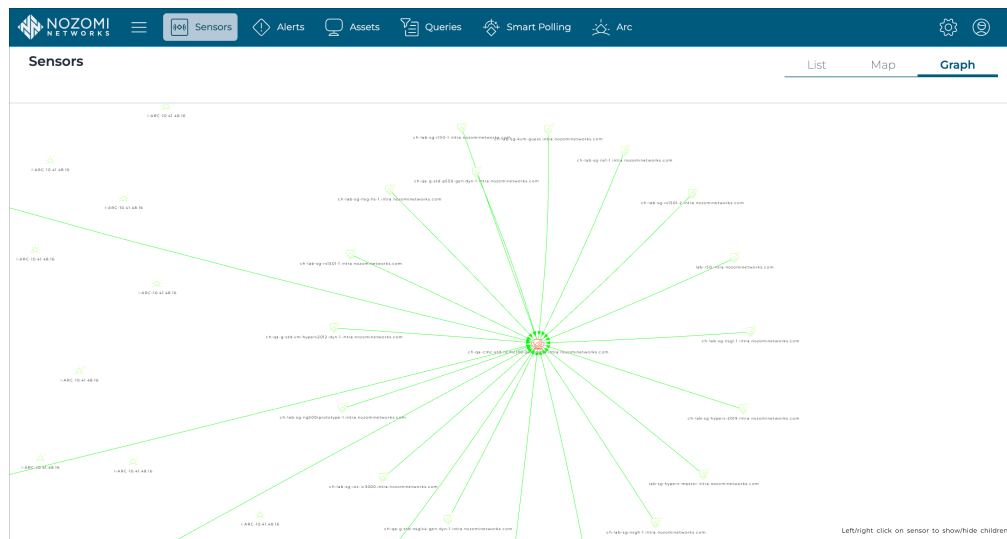


Figure 4. Sensors graph

Do a force update on sensors

If you have disabled auto updates, you can use the force update icon to do a manual update.

Procedure


1. In the top navigation bar, select **Sensors**.

Result: The **Sensors** page opens.

2. In the top left section, select .

Result: A dialog shows.

3. To confirm, select **Yes**.

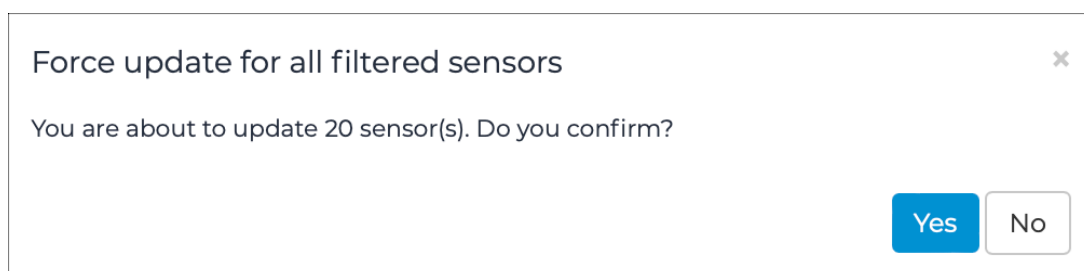

Allow a sensor

The allow icon lets you give permission for a new sensor to connect to Central Management Console (CMC).

Procedure


1. In the top navigation bar, select **Sensors**.

Result: The **Sensors** page opens.

2. In the top left section, select the  icon.

Result: A dialog shows.

3. To confirm, select **Yes**.

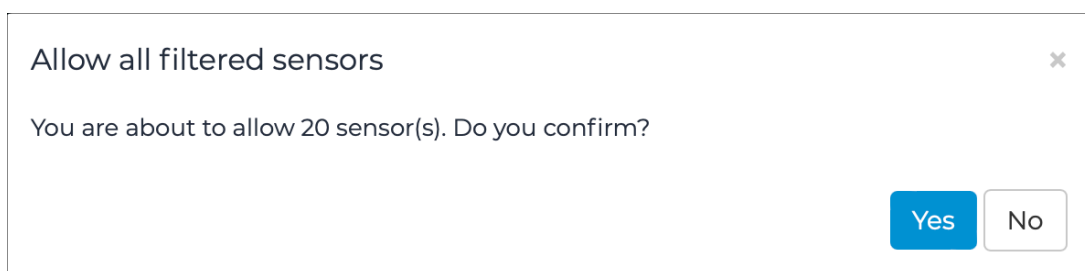

Export a list of sensors

You can export a list of the sensors from the current view.

Procedure

1. In the top navigation bar, select **Sensors**.

Result: The **Sensors** page opens.


2. In the top right section, select **Export**.

Result: A dialog shows.

3. Choose an export format:

Choose from:

- Select **CSV** to create a [CSV](#) file
- Select **Excel** to create a Microsoft Excel file

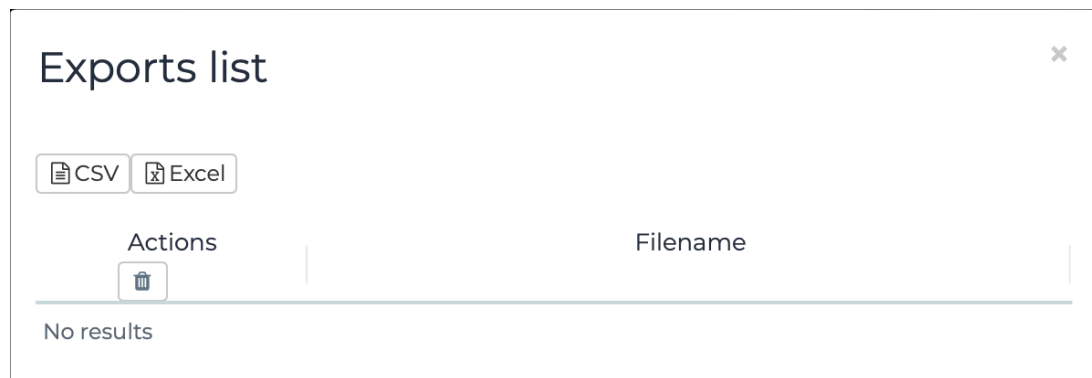

Result: The file is created and a **Exported** message shows.

4. To download the file, in the bottom-left of the dialog, select 



Results

The exported file has been downloaded.

Upload a map

The **Map** page lets you upload a map of your sensors in your environment.

Procedure

1. In the top navigation bar, select **Sensors**.
Result: The **Sensors** page opens.
2. In the top right section, select **Map**.
Result: The **Map** page opens.
3. In the top right section, select **Upload map**.
4. Select the image file that you want to upload.

Results

The map is uploaded.

Arc sensor configuration

Deployment settings

Configure Arc deployment parameters that will be included in downloaded Arc bundles. These settings define how Arc will behave when deployed from Guardian.

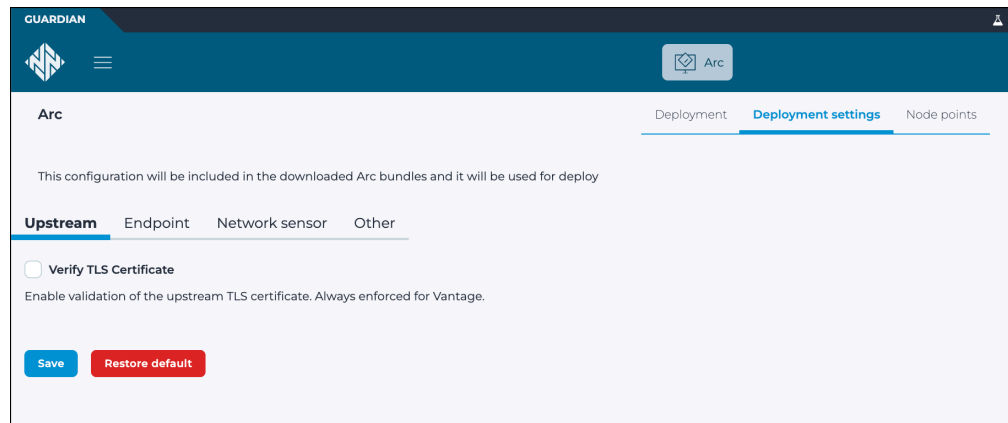


Figure 5. Deployment settings page

The **Deployment settings** page has these tabs:

- [Upstream](#) (on page 145)
- [Endpoint](#) (on page 146)
- [Network sensor](#) (on page 148)
- [Other](#) (on page 32)

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Upstream

The **Upstream** page lets you configure the settings for your Arc deployment.

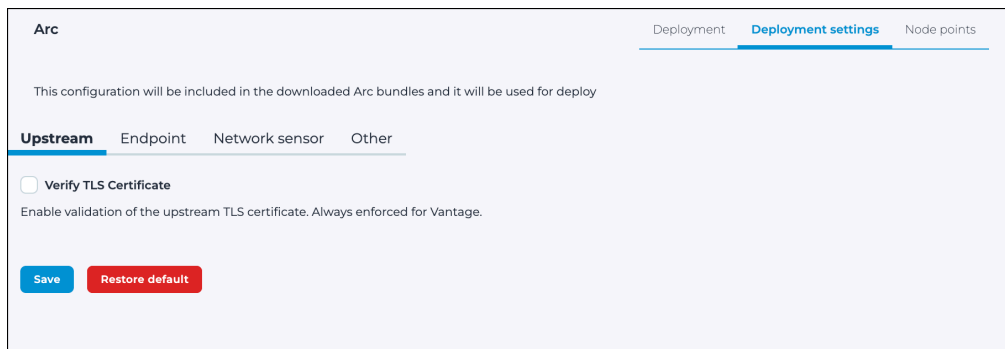


Figure 6. Upstream page

Verify TLS Certificate

Select this option to enforce verification of the upstream *transport layer security (TLS)* certificate when connecting to Guardian. When using Vantage, *TLS* certificate validation is always enforced, regardless of this setting.

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Endpoint

The **Endpoint** page lets you configure the settings for your Arc deployment.

Arc

Deployment **Deployment settings** Node points Dependencies

This configuration will be included in the downloaded Arc bundles and it will be used for deploy

Sensor mode

Full
All features are active. Network settings are available in the Network sensor tab.

Upstream **Endpoint** Network sensor Other

Select which information to detect:

- ☒ **Asset information**
Extract detailed asset information that can be plotted over time.
- ☐ CPU usage
- ☐ RAM usage
- ☐ Disk usage
- ☐ Logged-in users
- ☐ Processes with network activity
- ☐ Hotfixes
- ☒ User accounts
- ☒ DNS
- ☒ Installed softwares
- ☒ Unusual behaviors
Use Sigma indicators to monitor local events for signs of suspicious activity.
- ☒ Valid assets (using ARP)
Use the local address resolution protocol (ARP) table to confirm media access control (MAC) addresses.
 - ☒ Use static entries
User-defined (disable in case these entries are not trusted).
- ☒ USB devices
Detect the use of USB devices and malicious HID.
- ☒ Malware
Use Yara and STIX indicators to detect malicious file patterns before they get transferred over the network.

Action to perform on malware detection [New](#)

Only alert

Directory exclusions

[Save](#) [Restore default](#)

Figure 7. Endpoint page

Asset information

Enable **Asset information** to collect detailed information about the endpoint. Arc collects the following data:

- **CPU usage:** The current processor load of the endpoint.
- **RAM usage:** The amount of memory currently in use on the endpoint.
- **Disk usage:** The current disk space usage on the endpoint.
- **Logged-in users:** The users currently logged in to the endpoint.
- **Processes with network activity:** The running processes that have active network connections, including the local and remote addresses and ports.
- **Hotfixes:** The security patches and updates installed on the endpoint (Windows only).
- **User accounts:** The local user accounts configured on the endpoint.
- **DNS:** The [domain name server \(DNS\)](#) servers and configuration of the endpoint.
- **Installed software:** The software packages installed on the endpoint.

Unusual behaviors (Windows only)

This lets you enable/disable Sigma rules for local behavior analysis.

Valid assets (using ARP)

Enable this option to use the local *address resolution protocol (ARP)* table to confirm *media access control (MAC)* addresses for connected assets.

Enable **Use static entries** to include user-defined static *ARP* table entries in the validation. Only enable this if the static entries are trusted.

USB devices (Windows only)

This lets you enable/disable *universal serial bus (USB)* detections.

Malware (Windows only)

The **Malware** checkbox lets you enable protection mode and select from the **Action to perform on malware detection** dropdown. This lets you set the action that Arc will take when it finds a malicious file.

You can choose from these options:

- **Only alert:** Receive an alert with no further action
- **Quarantine:** Move the malicious file to the **quarantine** folder, which is located in the Arc installation folder
- **Delete:** Immediately delete the malicious file. Once deleted, the files cannot be recovered

You can also use the **Directory exclusions** feature to exclude specific directories from malware scanning. Select **+** to open a file browser and select a directory. You can add as many directories as needed. Arc skips the selected directories when scanning for malware.

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Network sensor

The **Network sensor** page lets you configure the settings for your Arc deployment.

Arc

Deployment **Deployment settings** Node points

This configuration will be included in the downloaded Arc bundles and it will be used for deploy

Upstream Endpoint **Network sensor** Other

Select how to monitor your network.

☒ **Discovery**
Leverage lightweight network announcements to discover neighboring devices.

☒ **Smart Polling** License required
Use surgical active queries to enrich asset data.

☒ **Traffic monitoring**
Monitor network traffic using either intermittent or continuous modes.

☐ **Enable continuous mode**

Time per notification
 seconds

Max packets per notification
 packets

Max used Memory
 MB

Global BPF filter
Applied to all network interfaces where a local BPF filter is not set. Syntactically incorrect filters will cause Traffic monitoring to stop.

Save **Restore default**

Figure 8. Endpoint page

Discovery

When enabled, this sends out unsolicited lightweight network announcements to discover neighboring nodes.

Discovery uses lightweight protocol-specific broadcast messages to identify network devices. These messages trigger a response from the devices, which includes identity information. The process is repeated at predefined intervals. At each interval, the sensor will identify the suitable network interfaces and send broadcast messages through them to discover devices on each subnetwork connected to the sensor.

Smart Polling

This lets you enable/disable the execution of Smart Polling strategies from Arc. When enabled, this sends out Smart Polling queries following remote requests coming from Guardian to poll assets that Arc can reach, or assets that have been identified with Discovery.



Note:

Smart Polling requires that a Smart Polling license is enabled upstream.

To force Smart Polling from a specific Arc sensor, even when Guardian was the first to monitor a node, you can use a [command-line interface \(CLI\)](#) command such as: `vi node 192.168.1.1 capture_device arc[1e6a174c]` In this example, `192.168.1.1` is an [internet protocol \(IP\)](#) address of a node you want to poll from a specific Arc sensor. `1e6a174c` are the first eight characters of the Arc sensor [ID](#) that you want to poll the node with. To find that sensor [ID](#), you can select the Arc sensor from the **Sensors** page of your Guardian and read the **ID** field in the right pane. To reset the behavior, you can set the `capture_device` back to the value of the Guardian interface.

Traffic monitoring

When enabled, this checkbox lets you enable/disable traffic monitoring.

Enable continuous mode

This checkbox lets you enable/disable continuous mode. For more details, see **Continuous mode**.

Arc uses two different methods for traffic monitoring:

- Intermittent mode
- Continuous mode

Intermittent mode: This is the default mode, the traffic is monitored, or sniffed, for a duration of 10 seconds at each notify. The purpose of this limitation is to preserve the resources of the host machine, which prevents excessive memory, or [central processing unit \(CPU\)](#), spikes. You can configure these options:

Continuous mode: This mode sniffs traffic continuously from the host's network interface controllers. Depending on the amount of sniffed traffic, continuous mode might utilize more [CPU](#) and memory on the host. As the traffic is processed upstream, the performance of the remote endpoint is also affected. You can configure:

- **Time [s] per notification**
- **Max packets per notification**
- **Max used Memory (MB):** this value can be tuned to allow more or less traffic buffering in case the traffic to process exceeds the Arc and network capacity to send it out

Traffic summary

This checkbox lets you enable or disable traffic summary. This option is available when traffic monitoring is enabled, and is disabled by default.

When enabled, Arc extracts only metadata from traffic for which deep packet inspection is not effective, such as encrypted or multimedia traffic. This metadata is sent upstream instead of the full payloads.

Heavy multimedia traffic, such as high-quality video feeds from security cameras or video conference software, can create a substantial load. With traffic summary enabled, this traffic is summarized as metadata, which reduces the upstream bandwidth consumption considerably without any loss of data. On the upstream appliance, the result is the same, and the data is available as usual, in the form of assets, links, and other information.

Global BPF filter

This field lets you set a Global BPF filter to apply to all the network interfaces. Filters that are applied to single interfaces will take precedence over the global one.

Network interface

This dropdown lets you select a network interface to configure. Each network interface can then be enabled, and be tuned with a monitoring filter.

If you add, remove, or edit the network interfaces on the host, Arc does not automatically add it to the list of sniffing interfaces. For example, if you add a new network card, to enable Arc to use it, you should stop Arc, and then start it again.

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Other

The **Other** page lets you configure the settings for your Arc deployment.

Arc Deployment **Deployment settings** Node points

This configuration will be included in the downloaded Arc bundles and it will be used for deploy

Upstream Endpoint Network sensor **Other**

Select event logging and endpoint space use preferences.

Log level
How much information would you like in your log files? Choose from minimal log information ('Error' will only log unexpected errors) to more comprehensive log files for debugging purposes ('Debug').

Info

Execution time
Applicable to One-shot and Offline modes, set to 0 for unlimited executions.

150 seconds

Maximum disk space
Applicable to Offline mode, minimum 5. Set to 0 for unlimited space. 1GB of free disk space is always preserved.

300 MB

Offline archive naming strategy
Select the information to be included in the name of the archive file when running Offline mode. Example: arc_data_archive_MyComputer_192.168.1.10_1761552820.zip

Choose a naming strategy

Save Restore default

Figure 9. Other page

Log level

This dropdown lets you select the verbosity level for the log files. The options are:

- Debug
- Info
- Warning
- Error

The logging system options have an increasing level of verbosity, from the least verbose to the most verbose. Error < Warning < Info < Debug.

- Error: Creates a minimalistic log, only unexpected errors are logged
- Warning: Creates extra errors that might show on some OSs, but that are generally considered as acceptable
- Info: Logs relevant successful events, it shows the program's progress (recommended)
- Debug: Logs extra events that are normally useful for debugging purposes. Given its verbosity it is best to activate it only when debugging activities are involved

**Note:**

This setting applies to:

- `arc.log.txt`
- `arc_service.log.txt`
- `sp.log.txt`

It doesn't apply to **setup.log**, which covers Arc's initialization process, before the configuration has been loaded and applied.

For more details, see Log files (on page).

Execution time

This field lets you set the time that Arc will run to collect data. This is applicable for One-shot and Offline modes.

**Note:**

When this is set to 0, the execution time is interpreted as infinite.

Maximum disk space

This field lets you control the maximum amount of disk space in *megabyte (MB)* that will be used for Offline mode.

Offline archive naming strategy

This lets you select the information that will be included in the name of archive files created while running Offline mode.

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Configure an Arc sensor

It is possible to configure an individual Arc sensor directly from the **Sensors** details page for the related sensor.

About this task

For more details on each configuration setting, see:

- [Upstream](#) (on page 145)
- [Endpoint](#) (on page 146)
- [Network sensor](#) (on page 148)
- [Other](#) (on page 32)

Procedure

1. In the top navigation bar, select **Sensors**.

Result: The **Sensors** page opens.

2. From the list, select the applicable Arc sensor.

The screenshot shows the NOZOMI Guardian web interface. The top navigation bar includes the NOZOMI logo and a 'Sensors' tab. Below the navigation bar, there's a 'Sensors' section with a search bar and a table of sensors. The table has columns for Type, Hostname, Model, IP, and Health. Two sensors are listed: 'MacBook-Pro-14-inch-2021-' (Good) and 'MacBookPro' (Unreachable). To the right of the table, the details for the selected 'MacBook-Pro-14-inch-2021-' sensor are shown. This details panel includes fields for ID, IP, and Arc version, as well as sections for Alerts, Risk, Stale, Last sync, Uptime, Resources usage (with a bar chart for RAM, Disk, CPU, and Arc CPU), and Is version locked, Is updating, and Type.

Type	Hostname	Model	IP	Health
MacBook-Pro-14-inch-2021-		ARC/MACOS		Good
MacBookPro		ARC/MACOS		Unreachable


Sensor Details: M3KXXQ6JYT-MacBook-Pro-14-inch-2021-

- ID: 5da7bc58
- IP:
- Arc version: v19.4.devel
- # Alerts (5m): 0
- # Alerts: 0
- Risk (5m):
- Stale: No
- Last sync: 16:02:31.646
- Uptime: 1d 2h 4m 54s
- Resources usage:
 - RAM: 54%
 - Disk: 35%
 - CPU: 12%
 - Arc CPU: 0%
 - Arc RAM: 0%
- Is version locked: No
- Is updating: No
- Type: Arc

3. In the top right section, select the  icon.

Result: A dialog shows.

4. In the **Upstream** page, choose the settings that you want.

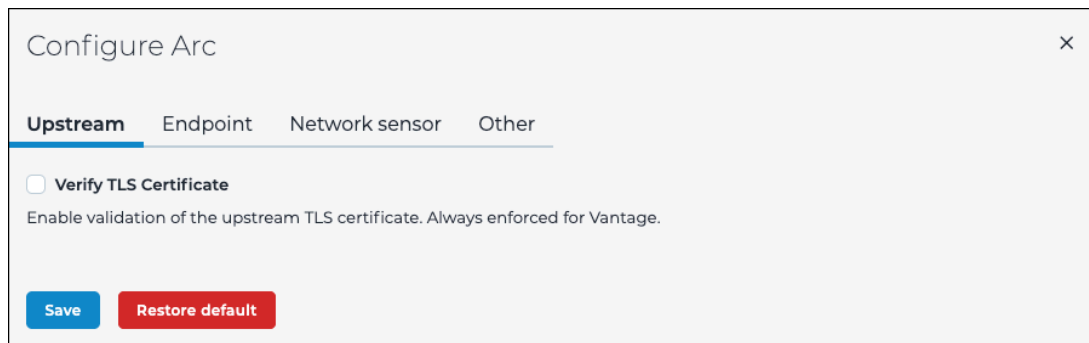


The screenshot shows the 'Configure Arc' dialog box with the 'Upstream' tab selected. The 'Verify TLS Certificate' checkbox is unchecked. Below it, a description states: 'Enable validation of the upstream TLS certificate. Always enforced for Vantage.' At the bottom, there are two buttons: 'Save' (blue) and 'Restore default' (red).

5. Select **Save**.
6. Select **Endpoint**.

Result: The **Endpoint** page shows.

7. In the **Endpoint** page, choose the settings that you want.

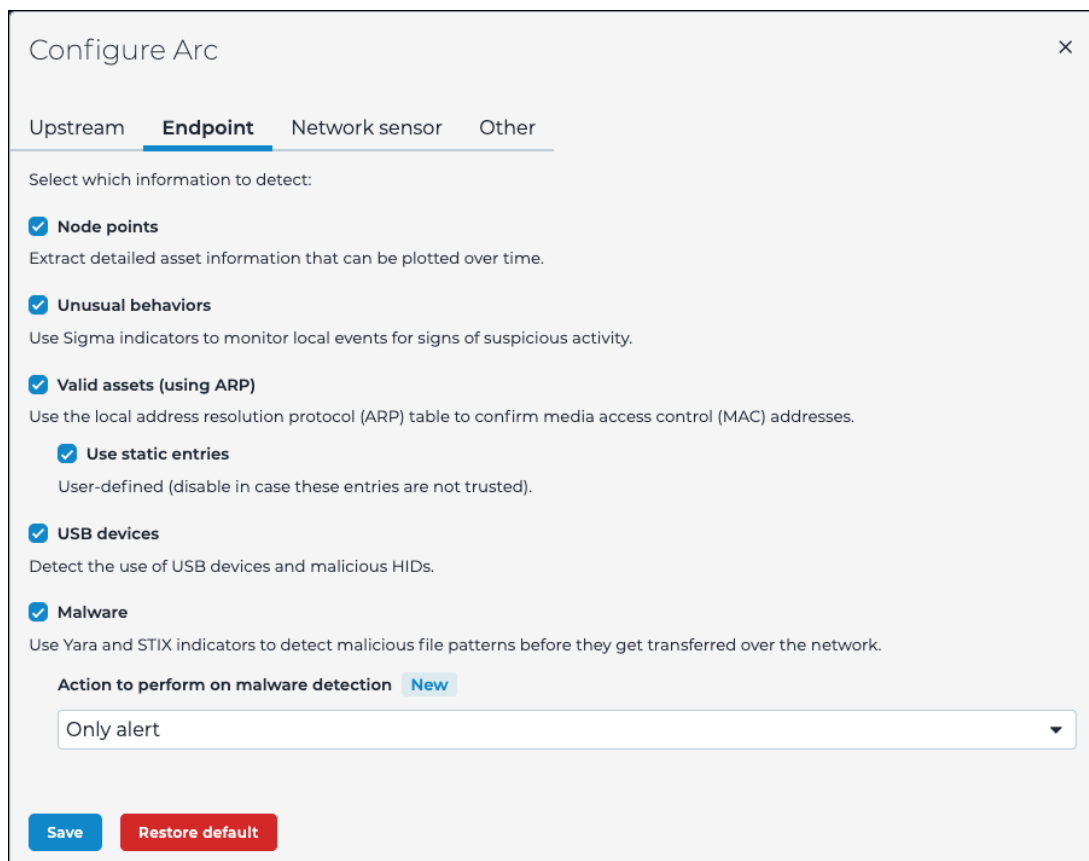

The screenshot shows the 'Configure Arc' dialog box with the 'Endpoint' tab selected. The text 'Select which information to detect:' is followed by several checked options: 'Node points' (Extract detailed asset information that can be plotted over time.), 'Unusual behaviors' (Use Sigma indicators to monitor local events for signs of suspicious activity.), 'Valid assets (using ARP)' (Use the local address resolution protocol (ARP) table to confirm media access control (MAC) addresses.), 'Use static entries' (User-defined (disable in case these entries are not trusted).), 'USB devices' (Detect the use of USB devices and malicious HID.), and 'Malware' (Use Yara and STIX indicators to detect malicious file patterns before they get transferred over the network.). Below these is a section 'Action to perform on malware detection' with a 'New' button and a dropdown menu set to 'Only alert'. At the bottom, there are two buttons: 'Save' (blue) and 'Restore default' (red).

8. Select **Save**.
9. Select **Network sensor**.

Result: The **Network sensor** page shows.

10. In the **Network sensor** page, choose the settings that you want.


The screenshot shows the 'Configure Arc' dialog box with the 'Network sensor' tab selected. The dialog has a title bar with a close button (X) and four tabs: 'Upstream', 'Endpoint', 'Network sensor' (active), and 'Other'. Below the tabs, the text 'Select how to monitor your network.' is displayed. There are three checked options: 'Discovery' (with description 'Leverage lightweight network announcements to discover neighboring devices.'), 'Smart Polling' (with a 'License required' badge and description 'Use surgical active queries to enrich asset data.'), and 'Traffic monitoring' (with description 'Monitor network traffic using either intermittent or continuous modes.'). Under 'Traffic monitoring', there is an unchecked checkbox for 'Enable continuous mode'. Below this are two input fields: 'Time per notification' set to '5' seconds and 'Max packets per notification' set to '10' packets. Further down is the 'Max used Memory' section with an input field set to '32' MB. The 'Global BPF filter' section has a description 'Applied to all network interfaces where a local BPF filter is not set. Syntactically incorrect filters will cause Traffic monitoring to stop.' and an input field containing 'e.g. tcp dst port not 443'. The 'Network interfaces' section has a description 'All interfaces are enabled by default.' and a dropdown menu labeled 'Choose a network interface to configure'. At the bottom are two buttons: 'Save' (blue) and 'Restore default' (red).

11. Select **Save**.

12. Select **Other**.

Result: The **Other** page shows.

13. In the **Other** page, choose the settings that you want.

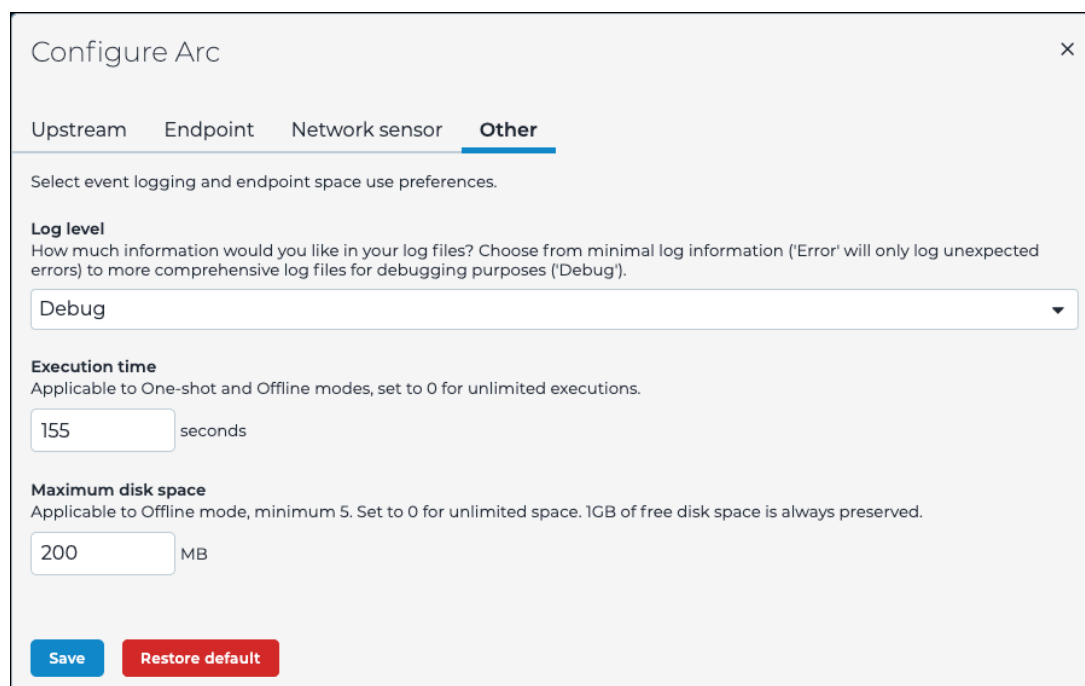

The screenshot shows a 'Configure Arc' dialog box with a close button (X) in the top right corner. It has four tabs: 'Upstream', 'Endpoint', 'Network sensor', and 'Other', with 'Other' being the active tab. Below the tabs, there is a heading 'Select event logging and endpoint space use preferences.' followed by three sections: 'Log level' with a dropdown menu set to 'Debug', 'Execution time' with a text input set to '155' and the unit 'seconds', and 'Maximum disk space' with a text input set to '200' and the unit 'MB'. At the bottom, there are two buttons: 'Save' (blue) and 'Restore default' (red).

14. Select **Save**.

Results

The Arc sensor has been configured.



Chapter 3. Alerts



The **Alerts** page shows all the latest alerts in the system. It lets you view the alerts in different modes, and carry out actions on the alerts.

**Important:**

To perform actions on alerts, the user must belong to a group with admin permissions. Non-admin users can access alerts only if at least one of the groups that they belong to has alerts permission enabled.

 


Figure 10. Alerts page menu

The top right section of the **Alerts** page has two icons that let you change between these two options:

- [Standard mode \(on page 42\)](#) 
- [Expert mode \(on page 43\)](#) 

Standard mode

You can view alerts in standard mode to give you an overview of the latest anomalies.

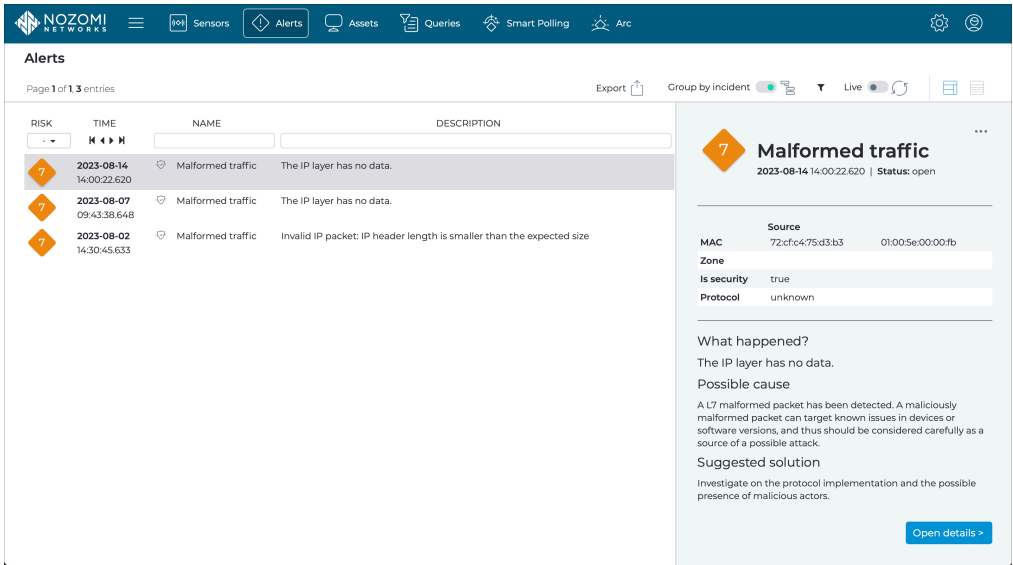


Figure 11. Standard mode

Risk

This shows the risk associated to each alert or incident.

Time

The time related to each event.

Name

The name category of the event.

Description

This shows a detailed description of the related event.

Analysis

If you can select a row, this pane will show a more detailed analysis of the alert.

Expert mode

You can view alerts in expert mode to give you a detailed view of the alerts in the system. This lets you filter, sort, and analyze the information in detail.

Expert mode shows a comprehensive table layout, with details on the alerts and incidents listed, which include:

- Addresses
- Labels
- The roles of the involved nodes, zones, protocol, and ports used in the involved transactions, and more

ACTIONS ...	RISK	TIME	ID	TYPE ID	COUNT...	DESCRIPTION	PROTOC...	IP SRC	IP DST
...	7	2023-08-14 14:00:22.620	9b3c82c8	SIGNMALFORMED-TRAFFIC	1	The IP layer has no data.			
...	7	2023-08-07 09:43:38.648	29f83285	SIGNMALFORMED-TRAFFIC	1	The IP layer has no data.			
...	7	2023-08-02 14:30:45.633	8a34431b	SIGNMALFORMED-TRAFFIC	1	Invalid IP packet: IP header length is small...			

Figure 12. Expert mode

Export

The **Export**  icon lets you export the current list in either [CSV](#) or Microsoft Excel format.

Group by incident

The **Group by incident**  icon lets you group alerts by incident. This will show incidents and hides all the alerts that belong to them.

Filter

The filter  icon opens a list of items that you let you filter the results.

Live

The **Live**  toggle lets you change live view on, or off. When live mode is on, the page will refresh periodically.

Refresh

The **Refresh**  icon lets you immediately refresh the current view.

Count by field

The **Σ Count by field** dropdown lets you select a data field on which to group and count the alerts.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Alert deduplication

Alert deduplication groups repeated alerts into one alert entry when the alert type and key values match. It helps you reduce noise and review repeated activity in context.

The system compares alert-specific key values to decide whether two alerts match.

Deduplication can help you focus on unique issues while still preserving recurrence history.

How deduplication works

When deduplication is enabled and a new alert matches an existing alert, the system updates the existing alert.

In expert view, the grouped alert shows these column values:

- **Creation time:** The timestamp of the first time this alert was triggered.
- **Time:** The timestamp of the most recent trigger.
- **Counter:** The total number of times the alert has been triggered.
- **Occurrence timeline:** The timestamps of up to 100 of the most recent occurrences.

If a matching alert occurs after you close a deduplicated alert, the alert reopens automatically.

Deduplication key

Each alert type defines its own deduplication key fields. Only alerts with matching key values are grouped together.

The alert type ID is always part of the deduplication key. Common fields also include source node, destination node, and protocol-specific attributes.

View alerts in standard mode

You can view alerts in standard mode to give you an overview of the latest anomalies.

Procedure

1. In the top navigation bar, select **Alerts**.

Result: The **Alerts** page opens.

2. In the top right corner, select the standard mode  icon.

Result: The [Standard mode \(on page 42\)](#) view opens.

View alerts in expert mode

You can view alerts in expert mode to give you a detailed view of the alerts in the system. This lets you filter, sort, and analyze the information in detail.

Procedure

1. In the top navigation bar, select **Alerts**.

Result: The **Alerts** page opens.

2. In the top right corner, select the expert mode  icon.

Result: The [Expert mode \(on page 43\)](#) view opens.

Closing alerts

When you close an alert, or incident, a dialog lets you select a reason, and specify the learning process.

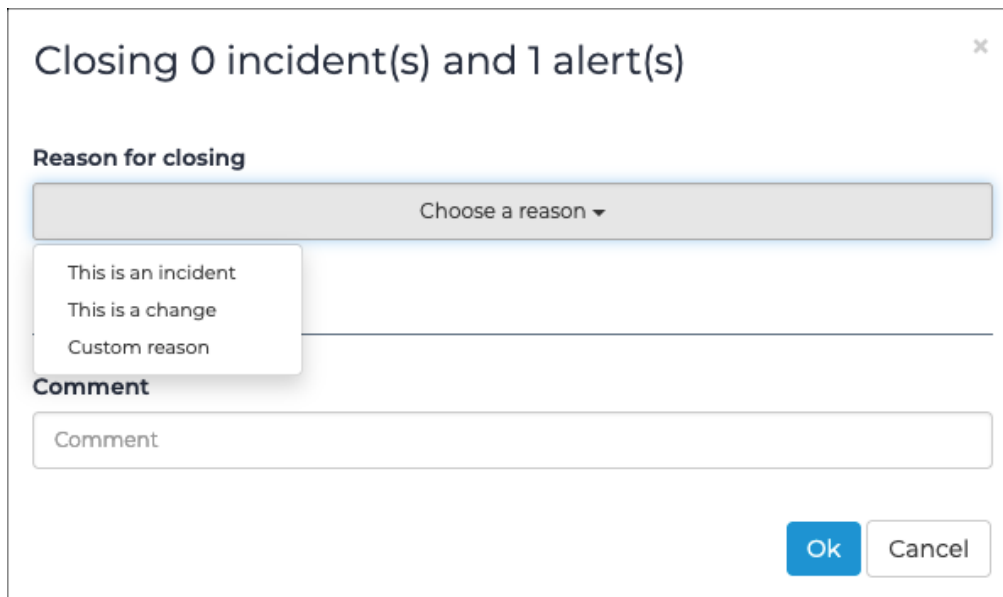
A screenshot of a dialog box titled "Closing 0 incident(s) and 1 alert(s)". The dialog has a close button (X) in the top right corner. It contains two main sections: "Reason for closing" and "Comment". The "Reason for closing" section features a dropdown menu with the text "Choose a reason" and a downward arrow. A dropdown menu is open, showing three options: "This is an incident", "This is a change", and "Custom reason". The "Comment" section has a text input field with the placeholder text "Comment". At the bottom right, there are two buttons: "Ok" (blue) and "Cancel" (white with a grey border).

Figure 13. Alerts closing dialog

The **Reason for closing** dropdown has these options:

- **This is a change:** If the cause of the alert is an intended change to the network, such as:
 - A new computer being attached
 - New communication between two nodes that were not previously communicating

Guardian can learn the change that has been detected as part of the environment baseline. When you close an alert in this way, the [intrusion detection system \(IDS\)](#) is instructed to learn the related objects. For example, when a **VI : NEW-NODE** alert is closed as a change, Guardian registers that the corresponding node is part of the environment and will not raise subsequent **VI : NEW-NODE** alerts about the same node.

- **This is a change:** If the cause of the alert is an intended change to the network, such as a new computer being attached, or a new communication between two nodes that were not talking before, the change detected by Guardian can be learned as part of the environment baseline. When closing an alert in this way, the IDS is instructed to learn the corresponding objects. For example, when a **VI:NEW-NODE** alert is closed as a change, Guardian registers that the corresponding node is part of the environment and will not raise subsequent **VI:NEW-NODE** alerts about the same node.

- **This is an incident:** If the cause of the alert is a configuration error, an attack, a malfunctioning device, or other security incident, the change is not learned as part of the environment baseline. When closing an alert in this way, the IDS is instructed to delete the corresponding objects. For example, a new node entering the network for the first time causes a VI:NEW-NODE alert. If an alert closes as an incident, reference to the new node is deleted. The VI:NEW-NODE alert is raised again in subsequent communication involving the same node.
- **Custom reason:** This lets you write a custom reason for closing an alert. You can enter a text string as the closing reason, with a request to apply one of the two described behaviors.

You are about to close 0 incident(s) and 1 alert(s) ✕

Reason for closing

Custom reason ▼

Custom reason

New controller installed

☐ Treat as incident

New incidents/alerts will be generated if a similar event happens again.

☒ Learn

Learn the change, no new incidents/alerts will be generated if a similar event happens again.

Comment

Team C will be responsible for the maintenance

Ok

Cancel

Figure 14. Closing alert for custom reason with comment

You can add a comment so that it shows in the **alert audit** log.

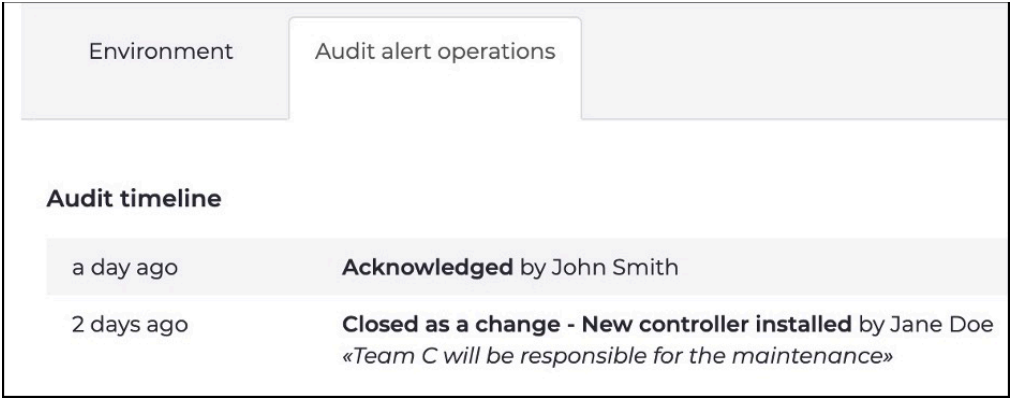


Figure 15. Audit alert operations

Actions menu

The **Actions** menu gives you access to all the actions that you can do for the related alert.

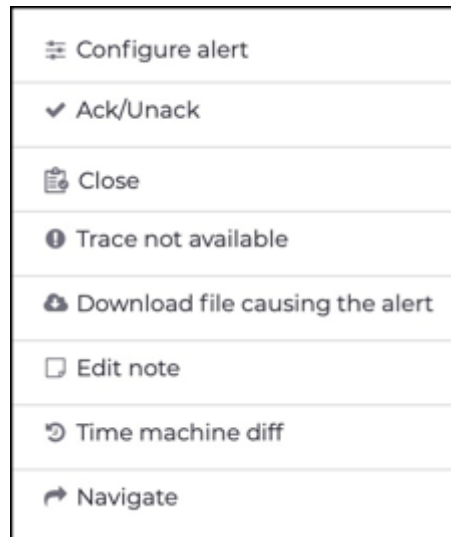


Figure 16. Actions menu



Note:

The options available in the **Actions** menu can change. The options will depend on:

- The type of alert
- The state of the sensor
- Whether the sensor is a Guardian or a [CMC](#)

Configure alert

You can use the **Configure alert** option to create a new alert rule for future events that are similar to the current one.

Ack/Unack

Once an alert or incident shows, you can mark it as acknowledged. You can also change the status back to unacknowledged again.

Close

Once an alert or incident has been addressed, you can mark it as closed, and choose the type of learning operation to perform.

Download trace

If a trace is available, you can choose to download it. The trace contains the packet that triggered the alert, along with an extract of the same session before and after that packet. Traces might be unavailable if the appliance is under stress. For detections that require multiple packets, such as **Multiple login failures**, the trace might not contain enough traffic to reproduce the alert. Incidents do not have an associated trace.

Download file causing the alert

Once a sensor has detected a malicious file, it is possible to download it for analysis. After you select this option, a dialog shows to warn the user that the file has been identified as malicious, or unwanted. To download the file, the user must acknowledge that they will do so at their own risk. In a [CMC](#), this option is only available after the applicable file has been requested, (see below).

Edit note

Once an alert or incident shows, you can write a note for it, or edit an existing one.

Time machine diff

It is possible to open a time machine diff which corresponds to the time of the alert, or incident.

Navigate

Alerts and incidents have related nodes, links, vulnerabilities, or sessions. The **Actions** menu lets you navigate to these links.

Open the Actions menu in standard mode

You can open the **Actions** menu to give you access to additional operations. When you are in standard mode, there are two different options available to open the menu.

Procedure

1. [View alerts in standard mode \(on page 45\)](#).
2. Choose a method to open the **Actions** menu.

Choose from:

- Select the applicable alert, go to the top right corner and select the **...** icon
- Select the **Open details** button. In the detailed view window, go to the top left corner and select the **...** icon

Result: The **Actions** menu opens.

Open the Actions menu in expert mode

You can open the **Actions** menu to give you access to additional operations.

Procedure

1. [View alerts in expert mode \(on page 45\)](#).
2. Choose a method to open the **Actions** menu.

Choose from:

- To the left of the applicable alert, select the **...** icon
- Select the link in the **ID** column. In the detailed view window, go to the top left corner and select the **...** icon

Result: The **Actions** menu opens.

Configure an alert

You can use the **Configure alert** option to create a new alert rule for future events that are similar to the current one.

Procedure

1. Open the **Actions** menu for the selected alert(s) with one of the these options:
 - [Open the Actions menu in standard mode \(on page 51\)](#)
 - [Open the Actions menu in expert mode \(on page 51\)](#)
2. Select **Configure alert**.

Result: A dialog shows.

The 'Configure alert' dialog box contains the following fields and sections:

- On alerts matching with:**
 - ☒ **Source IP**: 10.41.132.163 (with a link to 'IP examples')
 - ☒ **Source MAC**: 88:66:5a:3d:85:c0
 - ☐ **Match IPs and MACs in both directions**
 - ☒ **Source Zone**: Undefined
 - ☐ **Source Port**: 52237
 - ☒ **Type ID**: SIGN-MALWARE-DETECTED
 - ☒ **Protocol**: http
 - ☒ **Destination IP**: 52.216.81.251 (with a link to 'IP examples')
 - ☒ **Destination MAC**: 00:09:0f:09:00:06
 - ☒ **Destination Zone**: Internet
 - ☐ **Destination Port**: 80
 - ☒ **Trigger ID**: 6f32eec6-1aab-4db0-a89f-c1474693d83d
- Note**: A large empty text area for additional notes.
- Execute action:**
 -
 -
- Priority**: Highest: "muting" takes priority over all other possible rules matching to the same filter.
- Buttons**:

3. In each of the fields, enter the necessary details.
4. Select **Save**.

Results

The alert has been configured.

Acknowledge an alert

Once an alert or incident shows, you can mark it as acknowledged. You can also change the status back to unacknowledged again.

Procedure

1. Open the **Actions** menu for the applicable file with one of the these options:
 - [Open the Actions menu in standard mode \(on page 51\)](#)
 - [Open the Actions menu in expert mode \(on page 51\)](#)
2. Select **Ack/Unack**.

Result: After a few seconds, the tick symbol changes from grey to green.
3. If necessary, click the **Ack/Unack** option again to cancel the acknowledgment.

Result: After a few seconds, the tick symbol changes from green to grey.

Close an alert


Once an alert or incident shows, you can mark it as closed, and choose the type of learning operation to perform.

Procedure

1. Open the **Actions** menu for the applicable file with one of the these options:
 - [Open the Actions menu in standard mode \(on page 51\)](#)
 - [Open the Actions menu in expert mode \(on page 51\)](#)

2. Select **Close**.

Result: A dialog shows.

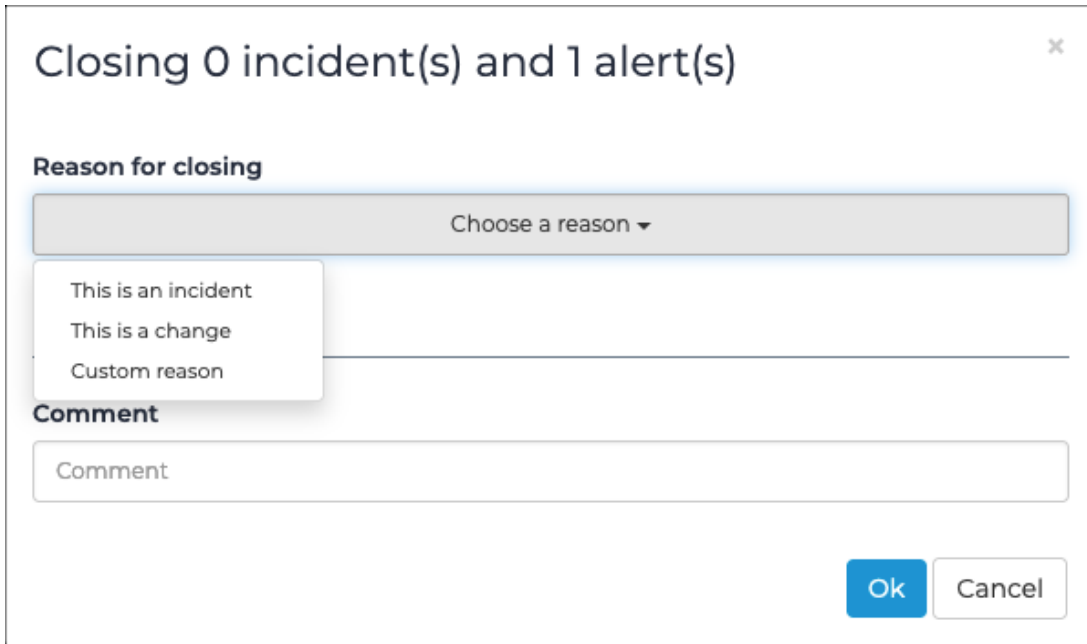

Closing 0 incident(s) and 1 alert(s)

Reason for closing

Choose a reason ▼

- This is an incident
- This is a change
- Custom reason

Comment

Comment

Ok Cancel

3. In the **Reason for closing** dropdown, choose one of these options:

Choose from:

- **This is a security incident**
- **Custom reason**

4. If you chose **Custom reason**, the dialog will extend to show more options.

Closing 0 incident(s) and 1 alert(s) ×

Reason for closing

Custom reason ▼

Custom reason

Specify the reason

☐ **Treat as incident**

New incidents/alerts will be generated if a similar event happens again.

☐ **Learn**

Learn the change, no new incidents/alerts will be generated if a similar event happens again.

Comment

Comment

Ok

Cancel

5. If you chose **Custom reason**, do the steps that follow.
- In the **Custom reason** field, enter the details as necessary.
 - Choose from one of these options:
 - **Treat as incident**
 - **Learn**
6. If necessary, enter a comment in the **Comment** field.
7. Select **Ok**.

Download a trace

If a trace is available, you can choose to download it. The trace contains the packet that triggered the alert, along with an extract of the same session before and after that packet. Traces might be unavailable if the appliance is under stress.

Procedure

1. Open the **Actions** menu for the applicable file with one of the these options:
 - [Open the Actions menu in standard mode \(on page 51\)](#)
 - [Open the Actions menu in expert mode \(on page 51\)](#)

2. Select **Download trace**.

Result: The file downloads to your downloads folder.

Download a malicious file

Once a sensor has detected a malicious file, it is possible to download it for analysis.

About this task


Only qualified personnel should download malicious files. Before you do this procedure, make sure that you have the correct permissions.

Procedure

1. Open the **Actions** menu for the applicable file with one of the these options:
 - [Open the Actions menu in standard mode \(on page 51\)](#)
 - [Open the Actions menu in expert mode \(on page 51\)](#)
2. Select **Download file causing the alert**.

A rectangular button with a light gray background and a thin border. It contains a small download icon (a cloud with a downward arrow) followed by the text "Download file causing the alert".

Result: A dialog shows.

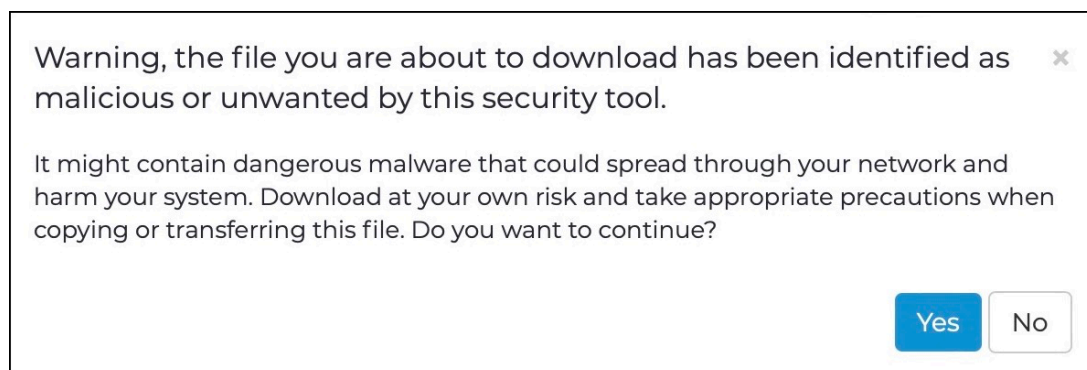


3. If you want to proceed, select **Yes**.

**Important:**


Nozomi Networks recommends that only qualified personnel download malicious, or unwanted, files. Download these files at your own risk.

Result: The file downloads to your downloads folder and a password dialog that contains a randomized, single-use password shows.

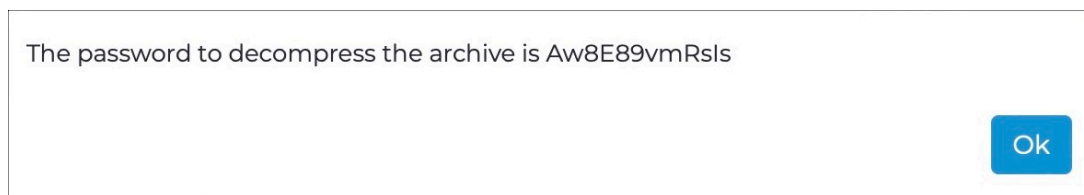

4. Copy the password, and select **Ok**.
5. Go to the folder where the file was downloaded to.
6. Double-click the [ZIP](#) file to open it.

Result: A dialog that prompts you to enter a password shows.

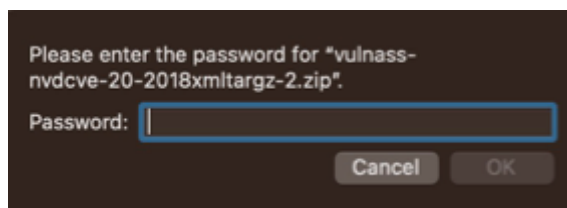

7. Paste the password into the password field and select **OK**.

Result: You can now access the file.

Edit a note for an alert

Once an alert or incident shows, you can write a note for it, or edit an existing one.

Procedure

1. Open the **Actions** menu for the applicable file with one of the these options:
 - [Open the Actions menu in standard mode \(on page 51\)](#)
 - [Open the Actions menu in expert mode \(on page 51\)](#)

2. Select **Edit note**.

Result: A note is opened with the identification of the related alert, or incident.

3. In the text field, write a note.



Note:

There is a character limit of 1000 characters.

4. Select **Save**.

Results

The note has been edited.

View a diff from an alert

This automatic feature will use the previous and subsequent snapshots according to the time of the alert.

Procedure

1. In the top navigation bar, select **Alerts**.

Result: The **Alerts** page opens.

2. Choose a method to open the actions menu.

Choose from:

- In the table, select the hyperlink to open the details page. Select **Actions**
- In the table, select the  icon

3. Select **Time machine diff**.

Result: The time diff shows.

4. To see more details on the right side of the graph, select the applicable node or link.

Navigate from an alert

Alerts and incidents have related nodes, links, vulnerabilities, or sessions. The actions menu lets you navigate to these links.

Procedure

1. Open the **Actions** menu for the applicable file with one of the these options:
 - [Open the Actions menu in standard mode \(on page 51\)](#)
 - [Open the Actions menu in expert mode \(on page 51\)](#)

2. Click the **Navigate** option.

Result: A dialog shows.

Go to [29ae764c-4328-4372-93d8-df93b22cc184](#) [source Node]

Go to [29ae764c-4328-4372-93d8-df93b22cc184 / Any / Any](#) [Link]

Go to [Any / 29ae764c-4328-4372-93d8-df93b22cc184 / Any](#) [Link]

Go to [29ae764c-4328-4372-93d8-df93b22cc184](#) [Vulnerabilities]

Go to [29ae764c-4328-4372-93d8-df93b22cc184 / Any / Any](#) [Sessions]

Go to [Any / 29ae764c-4328-4372-93d8-df93b22cc184 / Any](#) [Sessions]

3. Select the desired link.

Edit a playbook associated with an alert

A playbook associated with an alert can be modified. A change you make on the playbook only affects the playbook related to that specific alert.

About this task

You can edit a playbook associated with an alert from the **Playbook** tab in the **Alerts** page.

Procedure

1. In the top navigation bar, select **Alerts**.

Result: The **Alerts** page opens.

2. Find the alert on which to edit the assigned playbook.
3. Select the alert, then select **Playbook** at the bottom of the screen.
4. To edit the playbook, select **Edit**.

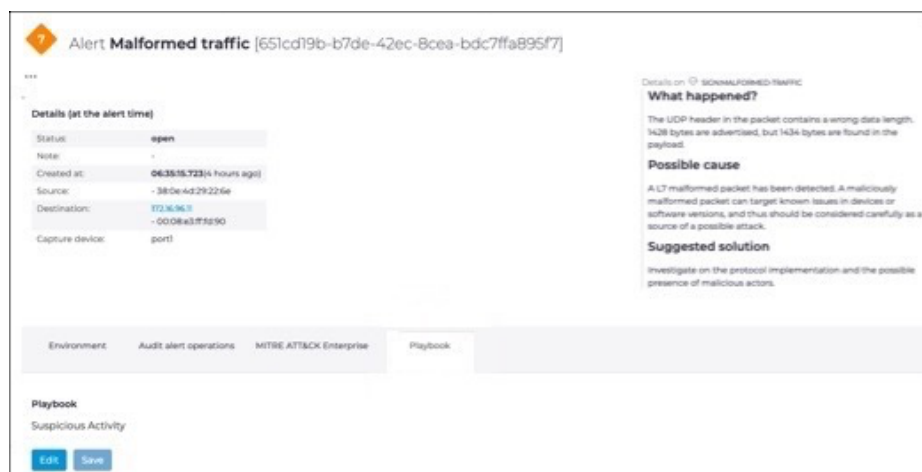


Figure 17. Playbook tab

5. Edit the playbook as necessary.
6. Select **Save**.



Note:

The playbook template from which the alert playbook was generated remains unchanged, as do all other alert playbooks generated from the same playbook template.

Details page

The **Alerts** details page provides a comprehensive view of a triggered alert, including cause, context, and recommended response. It displays communication paths, affected nodes, and relevant MITRE ATT&CK tactics. Use this page to investigate incidents and track alert handling activity.

Alert Link RST request by Producer [7572b8f4-8144-4b04-9768-199b7314ee84]

What happened
The producer 10.197.23.139 sent a RST of the connection to the consumer.

Possible cause
The link has been dropped because of a TCP RST sent by the producer.

Suggested solution
Verify that the device is working properly, no misconfigurations are in place and that network does not suffer excessive latency.

Source		Communication		Destination	
Zone	Undefined	Protocol	tcp	Zone	Undefined
Label	n.a.	Transport protocol		Label	n.a.
IP	10.197.23.182			IP	10.197.23.139
MAC	00:02:3e:99:c9:5d			MAC	00:c0:c9:30:04:f1
Port	10997			Port	2404
Roles	consumer			Roles	producer
Type	-			Type	OT_device
Users	0			Users	0

Alert Timeframe

Zoom: All

Environment Alert Path Audit alert operations

Nodes currently involved

Selection info

- appliance host: ch-qa-g-458-vrn-gen-master-lintus.nocom.networks.com
- appliance id: 68f02771564d-4493-690b-33e4779795ee
- id: 10.197.23.182
- mac address: 00:02:3e:99:c9:5d (kaly)
- mac vendor: Setra Telematics (kaly)
- zone: Undefined
- level: 1
- is 3e enriched: true
- is 5 enriched: true
- is 6 enriched: false
- is 8c enriched: false
- type: OT_device
- vendor: Setra Telematics
- product name: Setra Telematics OT Device
- is broadcast: false
- is public: false
- is compromised: false
- is confirmed: true
- is learned: true
- is fully learned: true

Details

Status	Open	Trigger type	n.a.
Created at	2026-03-17 07:53:08	Trigger ID	n.a.
Acknowledged	No	Is an Incident?	No
Threat name	n.a.	Security Alert?	No
Type ID	NET-RST-FROM-PRODUCER	Capture device	iec104_medline_minipcap

More

BPF filter

Note

What happened

Shows a summary and a list of key details for the related alert.

Possible cause

Shows a possible cause of the alert.

Suggested solution

Our recommendation on the best way to solve the problem.

Alert Timeframe

When alert deduplication is enabled, the system groups repeated alerts of the same type that share identical deduplication key values, instead of creating a new alert entry each time. The **Alert Timeframe** section shows the occurrence history for that grouped alert.

The section includes the following fields:

- **Creation time:** The timestamp of the first time this alert was triggered.
- **Time:** The timestamp of the most recent trigger.
- **Counter:** The total number of times the alert has been triggered.
- **Occurrence timeline:** The timestamps of up to 100 of the most recent occurrences.

Use the occurrence timeline to understand recurrence patterns over time. Timestamps that are close together can indicate a burst of repeated activity, while larger gaps can indicate periodic or intermittent behavior. The timeline shows only the most recent 100 occurrences, so older occurrences will not appear.

This information is also accessible through queries. If alert deduplication is disabled, this section is not shown.

Environment

Shows a graph with the logical connections for the related nodes. The **Selection info** section shows all the applicable information for the alert. It also gives you access to the actions menu.

Alert Path

The **Alert Path** view displays the physical connection path between source and destination devices involved in a triggered alert. This path is traced at the cable level, including intermediate switches and any other devices connected along the route. The alert path shows with a red line.

This view helps users assess the potential impact of response actions, such as disabling a specific switch port to isolate a device. By identifying additional assets that share the same physical infrastructure, operators can evaluate containment strategies and take targeted action directly from the alert interface.

Audit alert operations

The **Audit alert operations** section shows a timeline of user or system actions taken on a specific alert. This section helps you track how an alert is handled throughout its lifecycle.

It records these types of activity:

- Acknowledgement of the alert
- Escalation of the alert to an incident
- Changes to the alert's severity or classification
- Notes or comments that were added
- Automatic responses or triggered workflows, if the system is integrated with them

MITRE ATT&CK Enterprise

The **MITRE ATT&CK for ICS** section helps security analysts understand how the current alert maps to known tactics and techniques used by threat actors in *ICS* environments.

This section shows which tactics from the MITRE ATT&CK for ICS framework are relevant to the alert. The tactics represent different stages of an attack lifecycle, such as:

- Initial Access
- Execution
- Persistence
- Evasion
- Discovery
- Lateral Movement
- Collection
- Command and Control
- Inhibit Response Function
- Impair Process Control
- Impact

Each tactic can display one or more techniques observed in the alert. This mapping helps analysts determine the attacker's goals and possible next steps.



Chapter 4. Assets




The **Assets** page shows all the physical components and systems in the local network environment and their associated details. It also lets you perform actions on those assets. Depending on the nodes and components involved, assets can range from a simple personal computer to an operational technology (OT) device.

The top right section of the **Assets** page has these two tabs:

- [List \(on page 67\)](#)
- [Diagram \(on page 69\)](#)

List

The **List** page shows all the assets in table format.

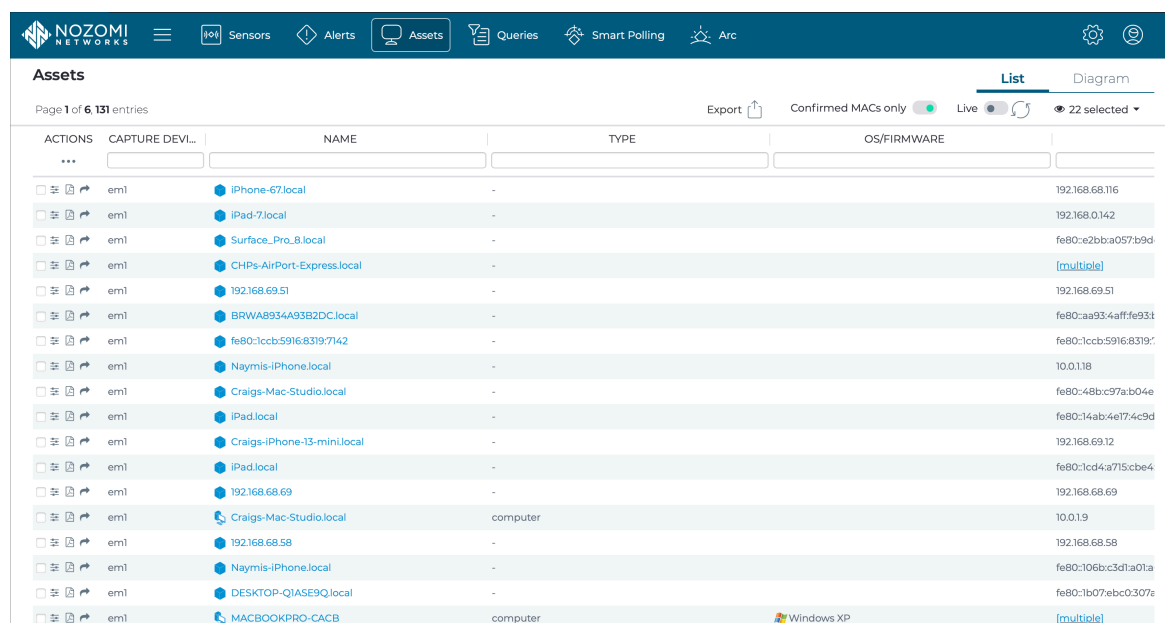

ACTIONS	CAPTURE DEVI...	NAME	TYPE	OS/FIRMWARE
☐	eml	iPhone-67.local	-	192.168.68.116
☐	eml	iPad-7.local	-	192.168.0.142
☐	eml	Surface_Pro_8.local	-	fe80:e2bba057b9d
☐	eml	CHPs-AirPort-Express.local	-	[multiple]
☐	eml	192.168.69.51	-	192.168.69.51
☐	eml	BRWA8934A93B2DC.local	-	fe80:aa93:4aff:fe93:t
☐	eml	fe80:1ccb:5916:8319:7142	-	fe80:1ccb:5916:8319:7
☐	eml	Naymis-iPhone.local	-	10.0.1.18
☐	eml	Craigs-Mac-Studio.local	-	fe80:48bc:97a:b04e
☐	eml	iPad.local	-	fe80:14ab:4e7:4c9d
☐	eml	Craigs-iPhone-13-mini.local	-	192.168.69.12
☐	eml	iPad.local	-	fe80:1cd4:a715:cbe4
☐	eml	192.168.68.69	-	192.168.68.69
☐	eml	Craigs-Mac-Studio.local	computer	10.0.1.9
☐	eml	192.168.68.58	-	192.168.68.58
☐	eml	Naymis-iPhone.local	-	fe80:106b:c3d1:a01a
☐	eml	DESKTOP-QIASE9Q.local	-	fe80:1b07:ebc0:307e
☐	eml	MACBOOKPRO-CACB	computer	Windows XP [multiple]

Export

The **Export**  icon lets you export the current list in either [CSV](#) or Microsoft Excel format.

Confirmed MACs only

The **Confirmed MACs only**  toggle lets you select only assets that have a confirmed [MAC](#) address.

Live

The **Live**  toggle lets you change live view on, or off. When live mode is on, the page will refresh periodically.

Refresh

The **Refresh**  icon lets you immediately refresh the current view.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Diagram

The **Diagram** page uses the Purdue model format to display the assets. Assets are shown in separate rows, according to their level.

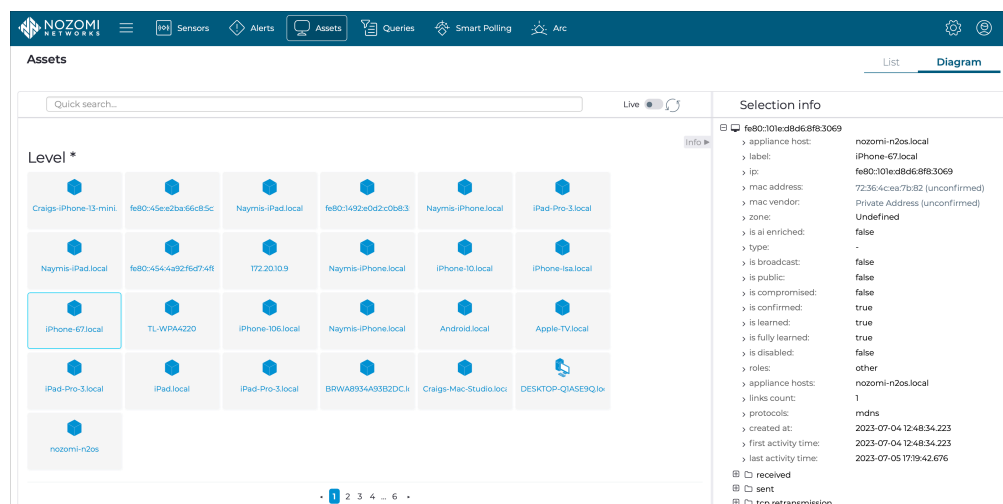


Figure 18. Diagram page

Search bar

The search bar lets you search for a specific item.

Live

The live ☒ toggle lets you immediately refresh the graph.

Refresh

The refresh  icon lets you immediately refresh the graph.

Levels section

The levels section shows an icon for each asset, and shows on which level of the Purdue model it is.

Selection info

When you select the link below an asset's icon, the **Selection info** pane shows more details for the selected asset.

Configure an asset


The **Lists** page lets you configure assets.

Procedure

1. In the top navigation bar, select **Assets**.

Result: The **Assets** page opens.

2. In the Actions column, to the left of the applicable asset, select the  icon.

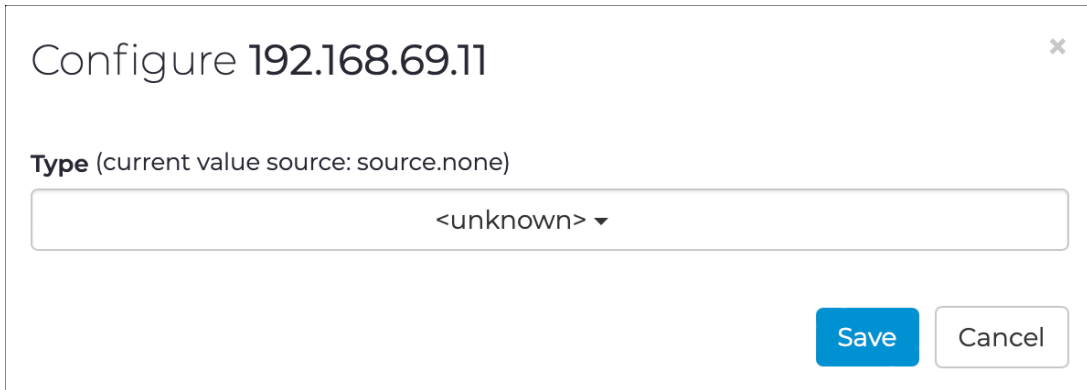

A dialog box titled "Configure 192.168.69.11" with a close button (X) in the top right corner. Below the title, it says "Type (current value source: source.none)". There is a dropdown menu showing "<unknown> ▼". At the bottom right, there are two buttons: "Save" (blue) and "Cancel" (white with blue border).

3. From the dropdown, select the applicable type.
4. Select **Save**.

Results

The asset has been configured.

Generate a PDF report of an asset

The **Lists** page lets you generate a report in portable document format (PDF).

Procedure

1. In the top navigation bar, select **Assets**.


Result: The **Assets** page opens.

2. In the Actions column, to the left of the applicable asset, select the  icon.

Result: A dialog shows.

3. **Optional:**

If necessary, select the **Include installed software found with Smart Polling** checkbox.

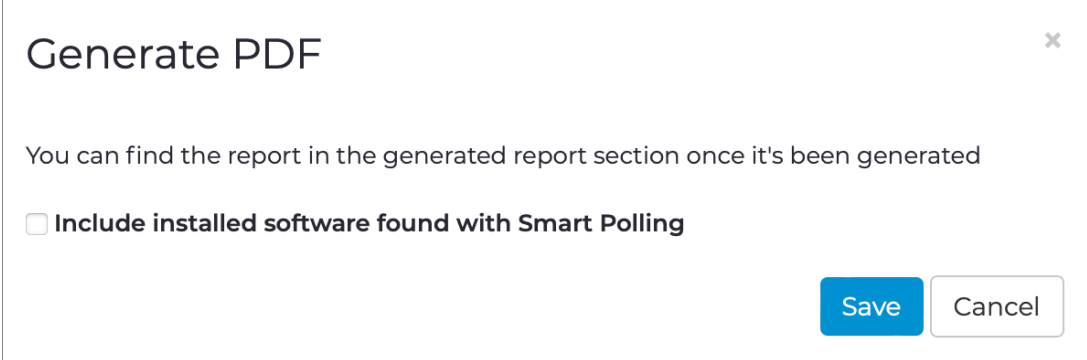

The dialog box is titled "Generate PDF" and has a close button (X) in the top right corner. The main text inside says "You can find the report in the generated report section once it's been generated". Below this text is a checkbox labeled "Include installed software found with Smart Polling". At the bottom right of the dialog are two buttons: "Save" (in blue) and "Cancel" (in white with a grey border).

4. Select **Save**.

Result: The *portable document format (PDF)* file generates in the background.

When it is ready, you can view it on the **Reports** page.

5. To view the report, go to **Reports > Generated**.

Navigate from an asset

The **Lists** page lets you use hyperlinks to navigate to entities that are related to an asset.

Procedure

1. In the top navigation bar, select **Assets**.

Result: The **Assets** page opens.

2. In the Actions column, to the left of the applicable asset, select the  icon.

Result: A list of related entities shows.

3. Select the hyperlink that you want to navigate to.

Go to [fe80::14ab:4e17:4c9d:84e9](#) [Node]

Go to [mdns](#) [Protocol]

Go to [fe80::14ab:4e17:4c9d:84e9 / Any / Any](#) [Link]

Go to [Any / fe80::14ab:4e17:4c9d:84e9 / Any](#) [Link]

Go to [fe80::14ab:4e17:4c9d:84e9](#) [Vulnerabilities]

Go to [fe80::14ab:4e17:4c9d:84e9 / Any / Any](#) [Sessions]

Go to [Any / fe80::14ab:4e17:4c9d:84e9 / Any](#) [Sessions]

Results

The entity shows in the applicable page.

View more details for an asset

Both the **Lists** and **Diagrams** pages lets you view more details for a specific asset.

Procedure

1. In the top navigation bar, select **Assets**.

Result: The **Assets** page opens.

2. In the top right section, select either **List** or **Diagram**
3. Choose a method to view more details for an asset:

Choose from:

- If you chose the **List** page, in the **NAME** column for the applicable asset, select the hyperlink
- If you chose the **Diagram** page, below the applicable asset, select the hyperlink

Results

The [Details page \(on page 74\)](#) for the asset shows.

Details page

The details page lets you view more detailed information for an assets.

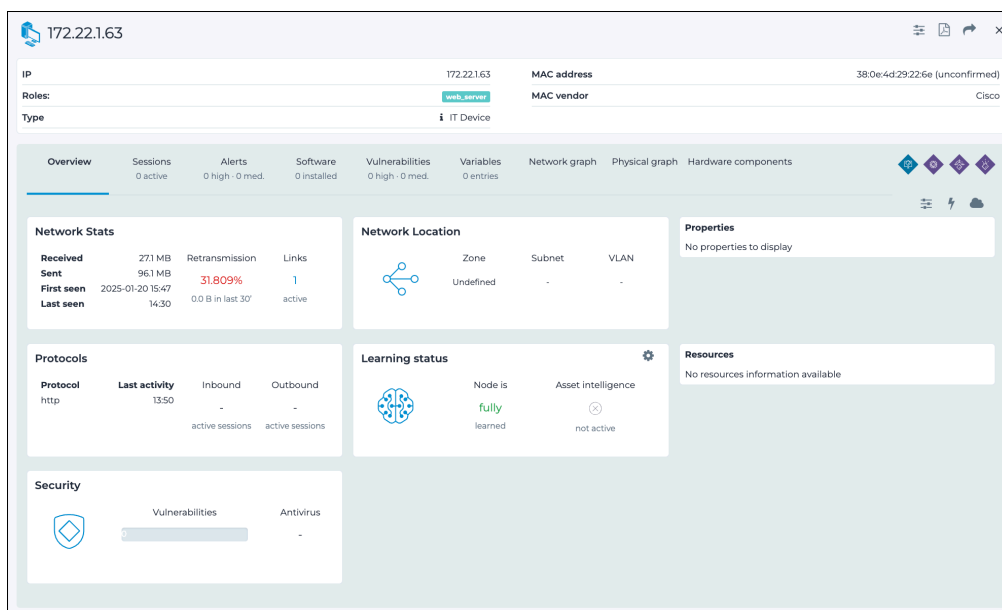


Figure 19. Asset details page

This details page shows more details for an asset.

The top section of the screen contains generic data. You can hover your mouse over the information **i** icon to display the source, granularity and confidence of the corresponding piece of data. Data includes:

- **IP** (address)
- Roles
- Vendor
- **MAC** address
- **MAC** vendor

The details window has these tabs:

- Overview (on page 76)
- Sessions (on page 77)
- Alerts (on page 78)
- Software (on page 79)
- Vulnerabilities (on page 80)
- Variables (on page 81)
- Network graph (on page 82)
- Physical graph (on page 83)
- Hardware components (on page 84)

Information icon

When you hover over the **i** icon, you can see information for:

- Source
- Granularity
- Confidence

Source

Information source	Description
manual	Information that is manually added from the configuration
imported data	Imported information
passive detection	Information from deep packet inspection
asset-kb	Information from Asset Intelligence
smart-polling	Information from Smart Polling

Granularity

Level of detailed information	Description
manual-or-import	Information manually added or imported
complete	Detailed information that has been extracted
partial	Detailed, but not complete information
generic	A family/generic value is found, but it is not detailed
unknown	Unknown

Confidence

Level of confidence in information	Description
manual-or-import	Information manually added or imported, with the highest level of confidence at this level
high	High level of confidence
good	Good level of confidence
low	Low level of confidence
unknown	Unknown confidence

Overview

The **Overview** page shows a general overview of information for items such as network statistics and location, protocols, and learning status for the related assets.

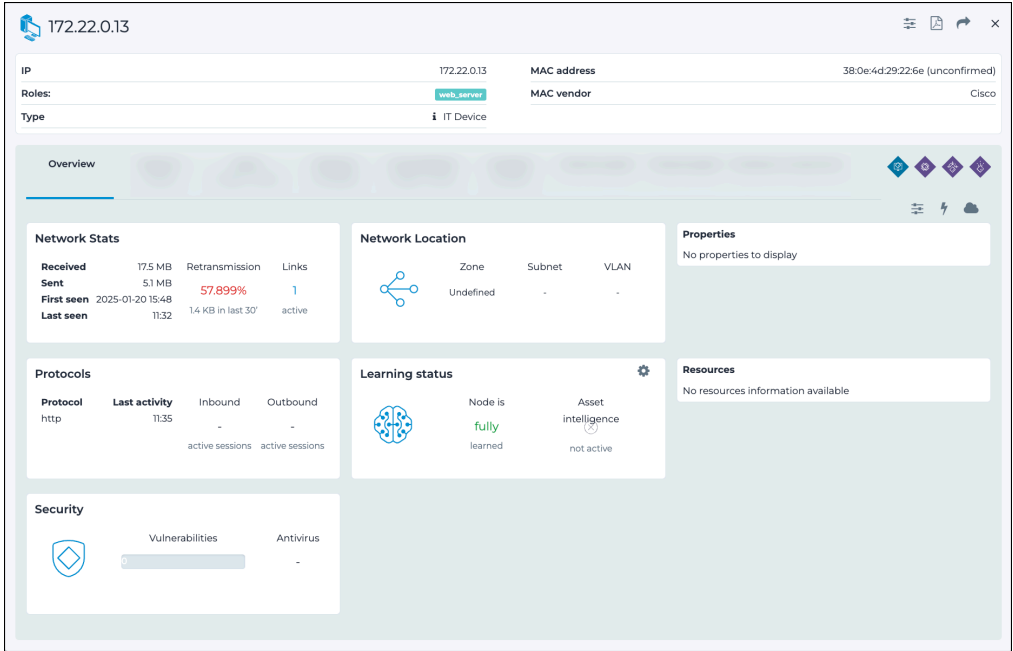


Figure 20. Overview tab

Network Stats

This shows useful statistics for the network activity for the related device.

Network Location

This shows information for the location for the related device on the network.

Properties

This shows additional information for the related device.

Protocols

This shows information for the different protocols that the related device uses.

Learning status

This shows the learning status of the related asset.

Security

This shows the security status of the related asset.

Sessions

The **Sessions** page shows detailed information for communication sessions between devices.

Acti...	Status	From	To	Protoco...	Transport proto...	From por...	To port...	Throughpu...	Transferred byte...	Transferred packet...	First activit...	Last activity
	ACTIVE	192.168.231.71	172.22.0.13	http	tcp	59959	80	0.0 b/s	706.0 B	2 pp	11:35:44.703	11:35:44.703
	CLOSED	172.22.0.13	192.168.231.71	http	tcp	80	59959	0.0 b/s	71.0 B	1 pp	11:32:53.286	11:32:53.491

Figure 21. Sessions tab

Export

The **Export** icon lets you export the current list in either [CSV](#) or Microsoft Excel format.

Live / refresh

The **Live** icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection icon lets you choose which columns to show or hide.

Alerts

The **Alerts** page shows detailed information for all the alerts that have been raised for the related assets.

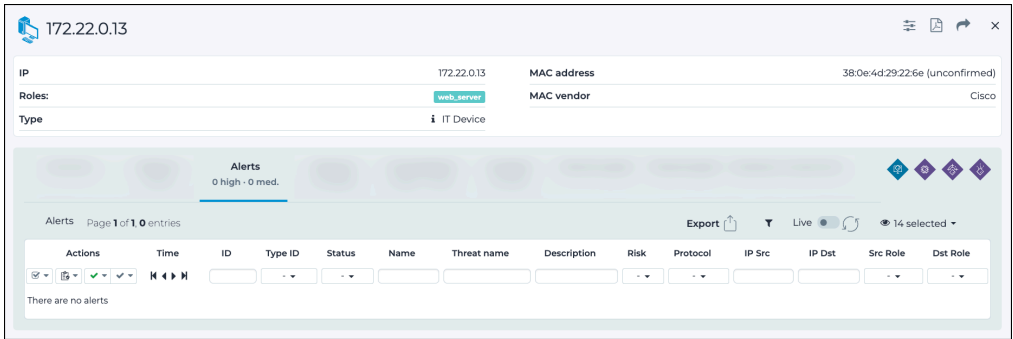


Figure 22. Alerts tab

Export

The **Export**  icon lets you export the current list in either [CSV](#) or Microsoft Excel format.

Live / refresh

The **Live**   icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Software

The **Software** page shows a list of software applications that are installed on the related assets.

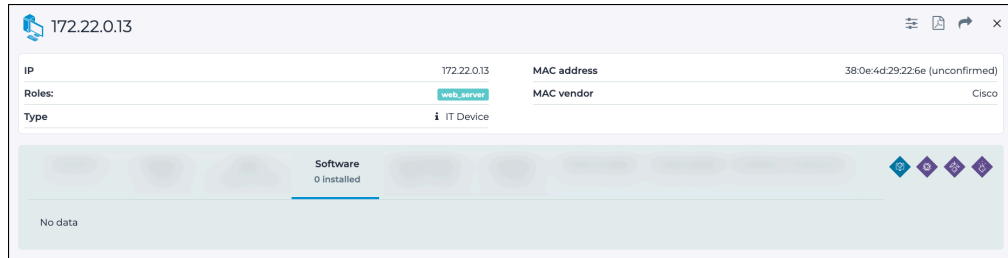


Figure 23. Software tab

Vulnerabilities

The **Vulnerabilities** page shows a list of vulnerabilities that are present on the related asset.

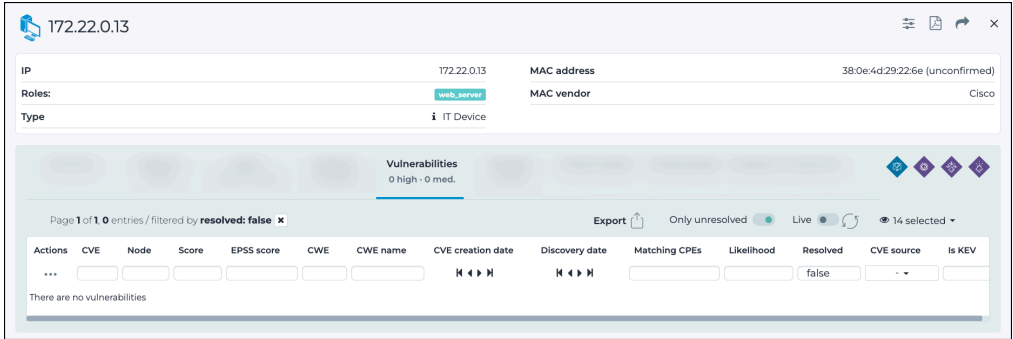


Figure 24. Vulnerabilities tab

Export

The **Export**  icon lets you export the current list in either **CSV** or Microsoft Excel format.

Only unresolved

The **Only unresolved**  toggle lets you filter the column to only show unresolved vulnerabilities.

Live / refresh

The **Live**   icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Variables

The **Variables** page shows detailed information for the variables hosted by the related asset.

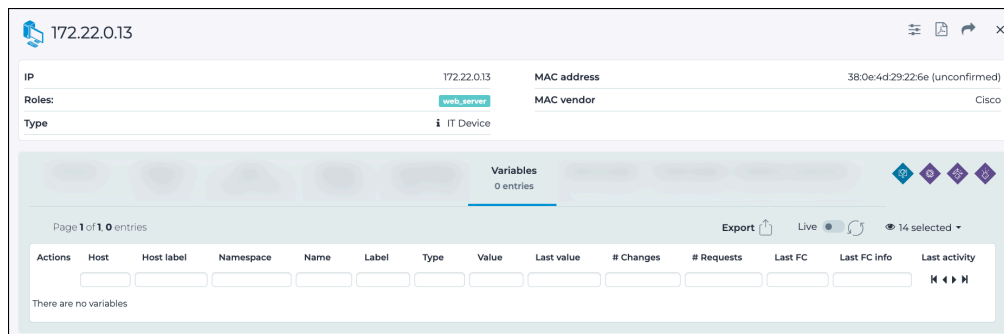


Figure 25. Variables tab

Export

The **Export**  icon lets you export the current list in either [CSV](#) or Microsoft Excel format.

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Network graph

The **Network graph** page shows how an asset communicates across the network, using real traffic data. It is ideal for uncovering lateral movement or validating expected behavior.

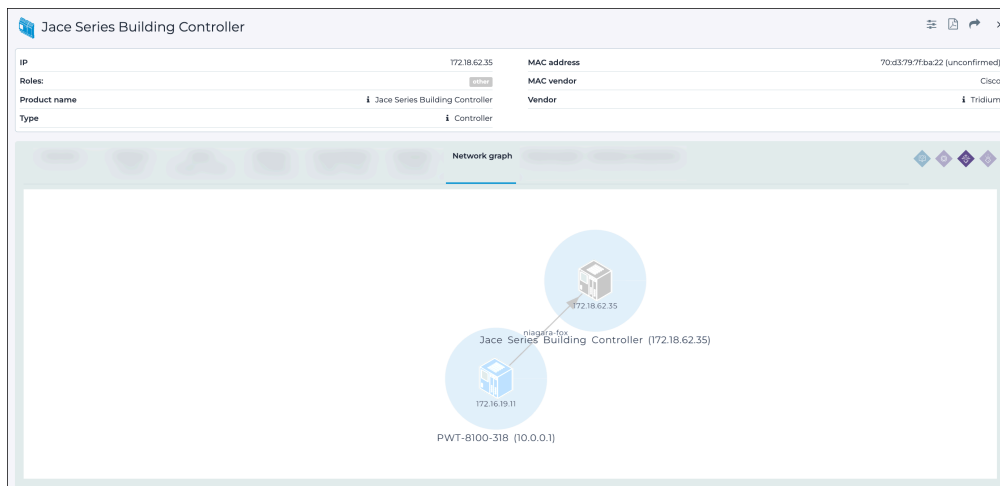


Figure 26. Network graph tab

The **Network graph** tab displays the asset's logical connections, based on observed network traffic. It shows which devices the asset communicates with, using lines between nodes to represent live or historical communication paths.

This view is useful for analyzing device behavior, identifying communication patterns, and detecting potential lateral movement. While the **Physical graph** focuses on physical connections, the **Network graph** provides visibility into traffic-based interactions, offering a complementary perspective on the asset's network role.

Physical graph

The **Physical graph** page shows the device's physical link to its switch, including port-level data. It is ideal for tracing, troubleshooting, or safely disconnecting assets.

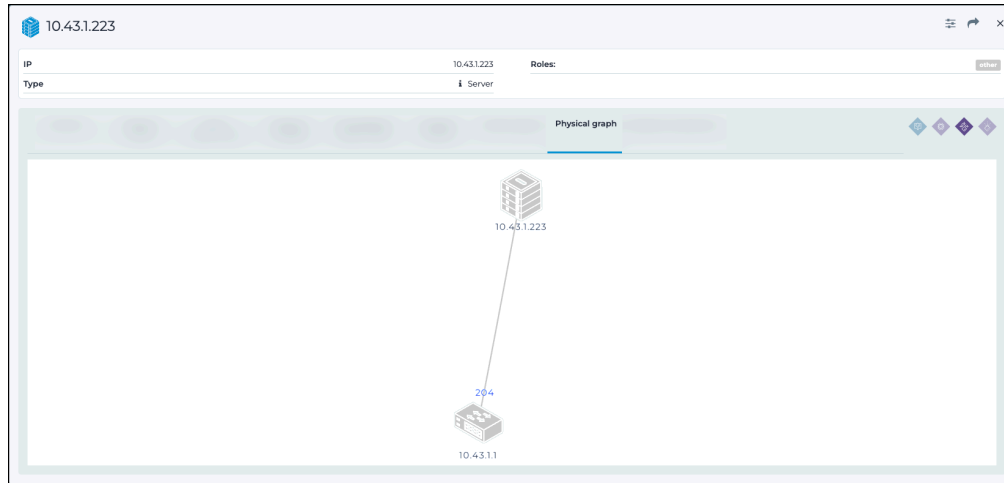


Figure 27. Physical graph tab

The **Physical graph** has a cable-level view that shows how a specific device is physically connected to the network. It shows the direct connection between the asset and its switch, including the exact port in use. This information provides clear insight into the physical location and wiring of the device.

This view supports operational tasks such as device tracing, maintenance, and isolation. Users can confirm port assignments or prepare to disconnect a device without referencing external network diagrams. The graph delivers actionable, asset-level visibility into physical connectivity.

Hardware components

The **Hardware Components** page shows a list of hardware modules installed on the same chassis as the selected controller, providing details on each component for better visibility and management of the device's physical configuration.

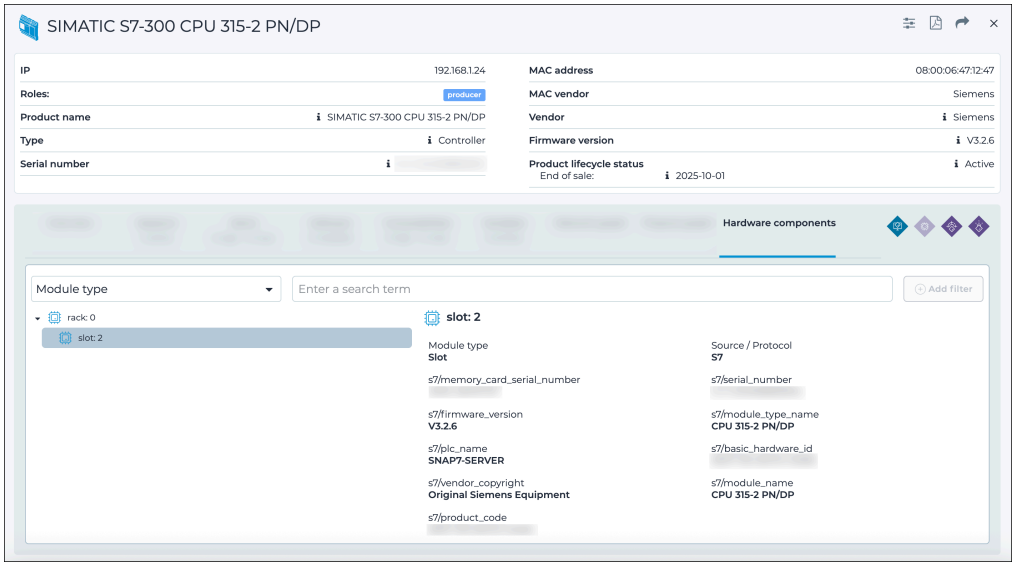


Figure 28. Hardware components tab

Choose

This dropdown lets you select from a list of attributes.

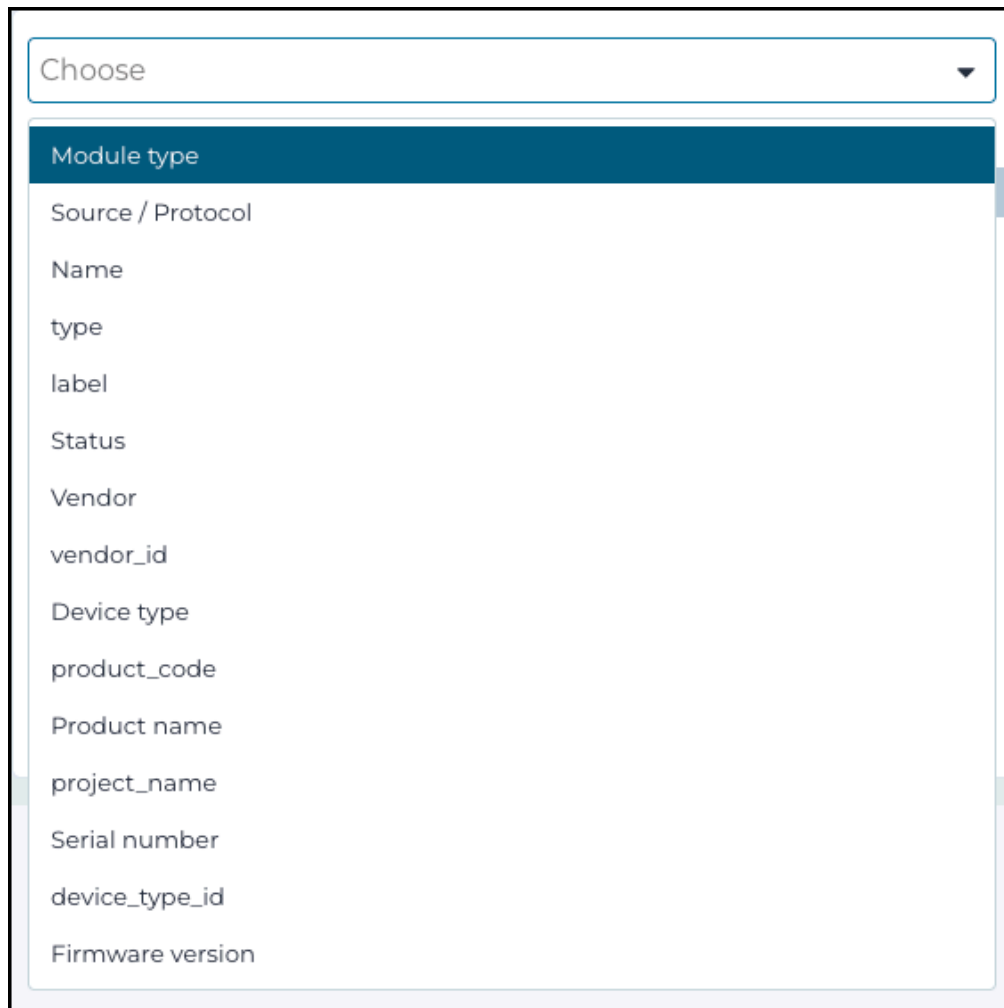


Figure 29. Choose dropdown

Search bar

The search bar lets you enter a term to filter the list.



Figure 30. Search bar

Add filter

Select this button to apply the filter in the search bar.



Figure 31. Add filter button

Chapter 5. Queries



You can use the Nozomi Networks Query Language (N2QL) syntax to create complex data processes to obtain, filter, and analyze lists of information from the Nozomi Networks software.

In [Nozomi Networks Query Language \(N2QL\)](#), queries consist of:

- [Data sources \(on page 91\)](#)
- [Commands \(on page 96\)](#)
- [Functions \(on page 105\)](#)

Data sources

Queries start by calling a data source. For example:

```
nodes | sort received.bytes desc | head
```

This query will show, in table format, the first 10 nodes that received the most bytes. If you add the **pie** command at the end of the query, the results will show in a pie chart format, where each slice has **node id** as the label and the **received.bytes** field as data.

For example:

```
nodes | sort received.bytes desc | head | pie ip received.bytes
```

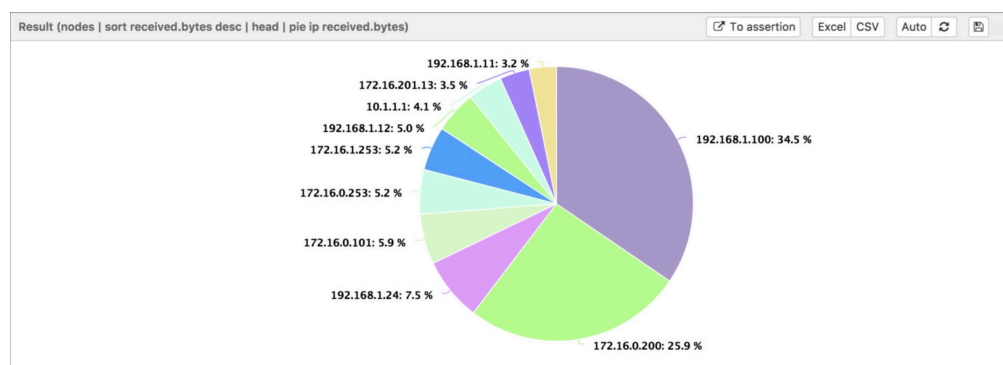


Figure 32. Queries example

Functions

You might not achieved your desired result just using queries. Consequently, query syntax supports functions. With functions, you can apply calculations to the fields and use the results as a new temporary field. For example, the query:

```
nodes | sort sum(sent.bytes, received.bytes) desc | column ip  
sum(sent.bytes, received.bytes)
```

uses the **sum** function to **sort** on the aggregated parameters, which produces a chart with the columns representing the sum of the **sent** and **received** bytes.

Prefix

The **\$** is a prefix that changes the interpretation of the right hand side (rhs) of a **where** clause. By default, the rhs is interpreted as a string. With the **\$** prefix, the interpretation of the rhs changes to a field name.

For example, in a query such as:

```
nodes | where id == 17.179.252.2
```

the right side of the == is expected to be a constant. If you create a query such as:

```
nodes | where id == id
```

the query tries to match all of the nodes having **id** equal to the string **id**.

If, however, you use the \$, the second field is interpreted as a field, not a constant:

```
nodes | where id == $id
```

and returns the full list of records.

Data sources

These are the available data sources with which you can start a query.

alerts	Raised events
appliances	Downstream connected sensors synchronizing data to this, local one
assertions	Assertions saved by the users. An assertion represents an automatic check against other query sources
assets	Identified assets. Assets represent a local (private), physical system to care about, and can be composed of one or more Nodes. Broadcast nodes, grouped nodes, internet nodes, and similar cannot be Assets accordingly
audit_log	System's log for important operational events, e.g., login, backup creation, etc.
captured_files	Files reconstructed for analysis
captured_logs	Logs captured passively over the network
captured_urls	URLs and other protocol calls captured over the network. Access to files, requests to DNS, requested URLs and other are available in this query source
cpe_items	CPE maps definitions
cve_files	CVE definitions
dhcp_leases	IP to Mac bindings due to the presence of DHCP
function_codes	Protocols' function codes used in the environment
health_log	System's Health-related events, e.g. high resource utilization or hardware-related issues or events
link_events	Events that can occur on a Link, like it being available or not
links	Identified links, defined as directional one-to-one associations with a single protocol (i.e. source, destination, protocol)
microsoft_hotfixes	Microsoft hotfix information

node_cpe_changes	Common Platform Enumeration changes identified over known nodes. On the event of update of a CPE (on hardware, operating system and software versions), an entry in this query source is created to keep track of software updates or better detection of software
node_cpes	Common Platform Enumeration identified on nodes (hardware, operating system and software versions)
node_cves	Common Vulnerability Exposures: vulnerabilities associated to identified nodes' CPEs
node_points	Data points extracted over time, via Smart Polling or via Arc, from monitored Nodes
node_points_last	node_points last samples per each included data point
nodes	Identified nodes, where a node is an L2 or L3 (and above) entity able to speak some protocol
packet_rules	Packet rules definitions
protocol_connections	Identified protocol handshakes/connections needed to decode process variables
report_files	Generated report files available for consultation
report_folders	Generated report folders
sessions	Sessions with recent network activity. A Session is a specific application-level connection between nodes. A Link can hold one or more Session at a given time
sessions_history	Archived sessions
sigma_rules	Sigma rules definitions
sp_executions	Executions of Smart Polling plans
sp_node_executions	Results of Smart Polling plans executions per node
stix_indicators	STIX definitions
subnets	Identified network subnets
threat_models	Threat Modeling definitions
trace_requests	Trace requests in processing

variable_history	Process variables' history of values
variables	Identified process variables
yara_rules	YARA rules definitions
zone_links	A list of protocols exchanged by the defined zones
zones	Defined network zones

Basic operators

Operator	(pipe, AND logical operator)
Description	Add a where clause with a logical AND, append it using the pipe character (). For example, the query below returns links that are from 192.168.254.0/24 AND going to 172.217.168.0/24.
Example	<code>links where from_in_subnet? 192.168.254.0/24 where to_in_subnet? 172.217.168.0/24</code>

Operator	OR
Description	To add a where clause with a logical OR, append it using the OR operator. For example, the query below returns links with either the http OR the https protocols.
Example	<code>links where protocol == http OR protocol == https</code>

Operator	! (exclamation point, NOT logical operator)
Description	Put an exclamation point (!) before a term to negate it. For example, the query below returns links that do NOT (!) belong to 192.168.254.0/24.
Example	<code>nodes where ip !in_subnet? 192.168.254.0/24 count</code>

Operator	->
Description	To change a column name, select it and use the -> operator followed by the new name. It is worth noting that specific suffixes are parsed and used to visualize the column content differently. For example: • _time data is shown in a timestamp format (1647590986549 becomes 2022-03-18 09:09:46.549) • _bytes adds KB or MB, as applicable (50 becomes 50.0 B) • _percent adds a percentage sign (50 becomes 50%) • _speed adds a throughput speed in Mb/s (189915 becomes 1.8 Mb/s) • _date converts numbers into a date format (2022-06-22 15:43:31.297 becomes 2022-06-22 14:24:09.280 becomes 2022-06-24 (current day)) • _packets adds pp after the number of packets (50 becomes 50 pp)
Example 1	<code>nodes select created_at created_at->my_integer where my_integer > 946684800000</code>
Example 2	<code>nodes select created_at->my_creation_time</code>

Example 3	<code>nodes select tcp_retransmission.bytes->my_retrans_bytes</code>
------------------	---

Operators	<code>==, =, <, >, <=, and >=</code>
Description	Queries support the mathematical operators listed above.

Operator	<code>"</code> (Quotation marks)
Description	Use quotation marks (<code>"</code>) to specify an empty string. Consider these two cases where this technique is useful: - Finding non-empty values. Example 1 below returns assets where the <code>os</code> field is not blank. - Specifying that a value in the query is a string (if its type is ambiguous). Example 2 below tells <code>concat</code> to treat the <code>--</code> parameter as a fixed string to use rather than as a field from the <code>alerts</code> table.
Example 1	<code>assets where os != ""</code>
Example 2	<code>alerts select concat(id_src,"--",id_dst)</code>

Operator	<code>in?</code>
Description	<code>in?</code> is only used with arrays; the field type must be an array. The query looks for the text strings you specify using <code>in?</code> and returns arrays that match one of them. The example below uses <code>in?</code> to find any node having computer or printer as elements in the array.
Example	<code>assets where type in? ["computer","printer_scanner"]</code>

Operator	<code>include?</code>
Description	The query looks for the text string you specify using <code>include?</code> and returns strings that match it. The example below uses <code>include?</code> to find assets where the <code>os</code> field contains the string Win.
Example	<code>assets where os include? Win</code>

Commands

Syntax	<code>select <field1> <field2> ... <fieldN></code>
Parameters	the list of field(s) to output
Description	The select command takes all the input items and outputs them with only the selected fields

Syntax	<code>exclude <field1> <field2> ... <fieldN></code>
Parameters	the list of field(s) to remove from the output
Description	The exclude command takes all the input items and outputs them without the specified field(s)

Syntax	<code>where <field> <== != < > <= >= in?!in?!include?!include?!exclude?!start_with?!end_with?!in_subnet?> <value></code>
Parameters	- field: the name of the field to which the operator will be applied - operator - value: the value used for the comparison. It can be a number, a string, or other data type. Advanced operators can use other data types, such as: - a list (using JSON syntax) when using the <code>in?</code> operator, for example: <code>nodes where ip in? ["172.18.41.44"]</code> - a list (using JSON syntax) when using the <code>include?</code>, <code>!include?</code>, <code>exclude?</code>, <code>start_with?</code>, <code>!start_with?</code>, <code>end_with?</code>, or <code>!end_with?</code> operators. The condition matches if <i>any</i> element in the list matches; for negated operators, it matches only if <i>none</i> of the elements match. An empty list always returns no results for positive operators and all results for negated operators. For example: <code>assets where name include? ["Switch","Router"]</code> - another property when using the '\$' symbol, for example: <code>nodes where ip != \$id</code>
Description	The where command will send to the output only the items which fulfill the specified criterion, many clauses can be concatenated using the boolean OR operator

Example	• <code>assets where vendor !in? ["VMware","Cisco"]</code> • <code>nodes where roles include? "consumer" OR zone == "office"</code> • <code>nodes where label != "" where label !include? ".net"</code> • <code>nodes where ip in_subnet? "192.168.1.0/24"</code> • <code><value></code> can also be another <code><field></code>, as in: <code>links where from_zone == \$to_zone select from_zone to_zone</code> • Match nodes whose name contains any of several substrings: <code>nodes where name include? ["Switch","Router","Firewall"]</code> • Exclude nodes whose name starts with any of the given prefixes: <code>nodes where name !start_with? ["test","lab","dev"]</code> • Find assets whose type ends with any of the given suffixes: <code>assets where type end_with? ["controller","gateway"]</code> • Exclude assets whose vendor name contains any of the listed strings: <code>assets where vendor exclude? ["unknown","generic"]</code>
----------------	--

Syntax	<code>sort <field> [asc desc]</code>
Parameters	• <code>field</code>: the field used for sorting • <code>asc desc</code>: the sorting direction
Description	The <code>sort</code> command will sort all the items according to the field and the direction specified, it automatically understands if the field is a number or a string

Syntax	<code>group_by <field> [[avg sum] [field2]]</code>
Parameters	• <code>field</code>: the field used for grouping • <code>avg sum</code>: if specified, the relative operation will be applied on <code>field2</code>
Description	The <code>group_by</code> command will output a grouping of the items using the field value. By default the output will be the count of the occurrences of distinct values. If an operator and a field2 are specified, the output will be the average or the sum of the field2 values

Syntax	<code>head [count]</code>
Parameters	• <code>count</code>: the number of items to output
Description	The <code>head</code> command will take the first count items, if count is not specified the default is 10

Syntax	<code>uniq [<field1> <field2> ... <fieldN>]</code>
Parameters	• an optional list of fields on which to calculate the uniqueness
Description	The <code>uniq</code> command will remove from the output the duplicated items

Syntax	<code>expand <field></code>
Parameters	• <code>field</code>: the field containing the list of values to be expanded
Description	The <code>expand</code> command will take the list of values contained in field and for each of them it will duplicate the original item substituting the original field value with the current value of the iteration

Syntax	<code>expand_recursive <field></code>
Parameters	• <code>field</code>: the field to be recursively expanded
Description	The <code>expand_recursive</code> command will recursively parse the content of field , expanding each array or json structure until a scalar value is found. It generates a new row for each array element or json field. For each new row, it duplicates the original item substituting the original field value with the current value of the iteration and adding a new field that represents the current iteration path from the root

Syntax	<code>sub <field></code>
Parameters	• <code>field</code>: the field containing the list of objects
Description	The <code>sub</code> command will output the items contained in field

Syntax	<code>count</code>
Parameters	
Description	The <code>count</code> command outputs the number of items

Syntax	<code>pie <label_field> <value_field></code>
Parameters	• <code>label_field</code>: the field used for each slice label • <code>value_field</code>: the field used for the value of the slice, must be a numeric field

Description	The pie command will output a pie chart according to the specified parameters
--------------------	---

Syntax	<code>column <label_field> <value_field ...></code>
Parameters	• <code>label_field</code>: the field used for each column label • <code>value_field</code>: one or more field used for the values of the columns
Description	The column command will output a histogram; for each label a group of columns is displayed with the value from the specified <code>value_field(s)</code> . The variant <code>column_colored_by_label</code> returns bars of different colors depending on their labels.

Syntax	<code>history <count_field> <time_field></code>
Parameters	• <code>count_field</code>: the field used to draw the Y value • <code>time_field</code>: the field used to draw the X points of the time series
Description	The history command will draw a chart representing an historic series of values

Syntax	<code>distance <id_field> <distance_field></code>
Parameters	• <code>id_field</code>: the field used to tag the resulting distances. • <code>distance_field</code>: the field on which distances are computed among entries.
Description	The distance command calculates a series of distances (that is, differences) from the original series of <code>distance_field</code>. Each distance value is calculated as the difference between a value and its subsequent occurrence, and tagged using the <code>id_field</code>. For example, assuming we're working with an <code>id</code> and a <code>time</code> field, entering <code>alerts distance id time</code> returns a table where each distance entry is characterised by the <code>from_id</code>, <code>to_id</code>, and <code>time_distance</code> fields that represent time differences between the selected alerts.

Syntax	<code>bucket <field> <range></code>
Parameters	• <code>field</code>: the field on which the buckets are calculated • <code>range</code>: the range of tolerance in which values are grouped

Description	The bucket command will group data in different buckets, different records will be put in the same bucket when the values fall in the same multiple of <range>
--------------------	--

Syntax	<code>join <other_source> <field> <other_source_field></code>
Parameters	• other_source: the name of the other data source • field: the field of the original source used to match the object to join • other_source_field: the field of the other data source used to match the object to join
Description	The join command will take two records and will join them in one record when <field> and <other_source_field> have the same value

Syntax	<code>gauge <field> [min] [max]</code>
Parameters	• field: the value to draw • min: the minimum value to put on the gauge scale • max: the maximum value to put on the gauge scale
Description	The gauge command will take a value and represent it in a graphical way

Syntax	<code>value <field></code>
Parameters	• field: the value to draw
Description	The value command will take a value and represent it in a textual way

Syntax	<code>reduce <field> [sum avg]</code>
Parameters	• field: the field on which the reduction will be performed • sum or avg: the reduce operation to perform, it is sum if not specified
Description	The reduce command will take a series of values and calculate a single value

Syntax	<code>size()</code>
Parameters	• field: the field to calculate the size of

Description	If the field is an array, then the size function returns the number of entries in the array. If the field contains a string, then the size function returns the number of characters in the string. Note: The size function may only be used on the following data sources: alerts, assets, captured_files, links, nodes, packet_rules, sessions, stix_indicators, subnets, variables, yara_rules, zones, and zone_links.
Example:	<code>assets where size(ip) > 1</code>

Nodes-specific commands reference

Syntax	<code>where_node <field> < == != < > <= >= in? include? exclude? start_with? end_with? > <value></code>
Parameters	• field: the name of the field to which the operator will be applied • operator • value: the value used for the comparison. It can be a number, a string or a list (using JSON syntax), the query engine will understand the semantics.
Description	The where_node command will send to the output only the items which fulfill the specified criterion, many clauses can be concatenated using the boolean OR operator. The where_node command is similar to the where command, but the output will also include all the nodes that are communicating directly with the result of the search. Note: This command is only applicable to the nodes table.

Syntax	<code>where_link <field> < == != < > <= >= in? include? exclude? start_with? end_with? > <value></code>
Parameters	• field: the name of the links table's field to which the operator will be applied. • operator • value: the value used for the comparison. It can be a number, a string or a list (using JSON syntax) the query engine will understand the semantics.
Description	The where_link command will send to the output only the nodes which are connected by a link fulfilling the specified criterion. Many clauses can be concatenated using the boolean OR operator. Note: This command is only applicable to the nodes table.

Syntax	<code>graph [node_label:<node_field>]</code> <code>[node_perspective:<perspective_name>]</code> <code>[link_perspective:<perspective_name>]</code>
---------------	--

Parameters	• <code>node_label</code>: add a label to the node, the label will be the content of the specified node field • <code>node_perspective</code>: apply the specified node perspective to the resulting graph. Valid node perspective values are: ◦ <code>roles</code> ◦ <code>zones</code> ◦ <code>transferred_bytes</code> ◦ <code>not_learned</code> ◦ <code>public_nodes</code> ◦ <code>reputation</code> ◦ <code>appliance_host</code> • <code>link_perspective</code>: apply the specified link perspective to the resulting graph. Valid link perspectives are: ◦ <code>transferred_bytes</code> ◦ <code>tcp_firewalled</code> ◦ <code>tcp_handshaked_connections</code> ◦ <code>tcp_connection_attempts</code> ◦ <code>tcp_retransmitted_bytes</code> ◦ <code>throughput</code> ◦ <code>interzones</code> ◦ <code>not_learned</code>
Description	The graph command renders a network graph by taking some nodes as input.

Link-events-specific commands reference

Syntax	<code>availability</code>
Parameters	
Description	The availability command computes the percentage of time a link is UP. The computation is based on the link events UP and DOWN that are seen for the link.

Syntax	<code>availability_history <range></code>
Parameters	• <code>range</code>: the temporal window in milliseconds to use to group the link events
Description	The <code>availability_history</code> command computes the percentage of time a link is UP by grouping the link events into many buckets. Each bucket will include the events of the temporal window specified by the <code>range</code> parameter.

Syntax	<code>availability_history_month <months_back> <range></code>
Parameters	• <code>months_back</code>: number of months to go back in regards to the current month to group the link events • <code>range</code>: the temporal window in seconds to use to group the link events
Description	The <code>availability_history</code> command computes the percentage of time a link is UP by grouping the link events into many buckets. Each bucket will include the events of the temporal window specified by the <code>range</code> and <code>months</code> parameters.

Functions

Functions are always used in conjunction with other commands, such as **select**. In the following examples, functions are shown in **bold**:

- Combining functions with **select**: `nodes | select id type color(type)`
- Combining functions with **where**: `nodes | where size(label) > 10`
- Combining functions with **group_by**: `nodes | group_by size(protocols)`

Here is the complete list of functions:

Syntax	<code>abs(<field>)</code>
Parameters	• the field on which to calculate the absolute value
Description	The abs function returns the absolute value of the field

Syntax	<code>bitwise_and(<numeric_field>,<mask>)</code>
Parameters	• numeric_field: the numeric field on which apply the mask • mask: a number that will be interpreted as a bit mask
Description	The bitwise_and function calculates the bitwise & operator between the numeric_field and the mask entered by the user

Syntax	<code>cast(<field>,<type>)</code>
Parameters	• field: the field to cast • type: one of: integer (4 bytes integer), bigint (8 bytes integer), real (4 bytes floating point number), boolean, text, json
Description	The cast function converts a field to the specified type

Syntax	<code>coalesce(<field1>,<field2>,...)</code>
Parameters	• a list of fields or string literals in the format "<chars>"
Description	The coalesce function will output the first value that is not null

Syntax	<code>color(<field>)</code>
Parameters	• field: the field on which to calculate the color
Description	The color function generates a color in the rgb hex format from a value

Note	Only available for nodes, links, variables and function_codes
-------------	---

Syntax	<code>concat(<field1>,<field2>,...)</code>
Parameters	a list of fields or string literals in the format "<chars>"
Description	The concat function will output the concatenation of the input fields or values

Syntax	<code>date(<time>)</code>
Parameters	time defined as unix epoch
Description	The date function returns a date from a raw time

Syntax	<code>day_hour(<time_field>)</code>
Parameters	time_field: the field representing a time
Description	The day_hour function returns the hour of the day plus the sensor's local time offset from UTC, i.e. a value in the range 0 through 23. Be careful when accounting for daylight saving time. Use day_hour_utc when absolute precision is desired

Syntax	<code>day_hour_utc(<time_field>)</code>
Parameters	time_field: the field representing a time
Description	The day_hour_utc function returns the hour of the day expressed in UTC for the current time field, i.e. a value in the range 0 through 23

Syntax	<code>days_ago(<time_field>)</code>
Parameters	time_field: the field representing a time
Description	The days_ago function returns the amount of days passed between the current time and the time field value

Syntax	<code>dist(<field1>,<field2>)</code>
Parameters	the two fields to compute the distance on

Description	The dist function returns the distance between field1 and field2, which is the absolute value of their difference
--------------------	---

Syntax	<code>div(<field1>,<field2>)</code>
Parameters	• field1 and field2: the two field to divide
Description	The div function will calculate the division field1/field2

Syntax	<code>hours_ago(<time_field>)</code>
Parameters	• time_field: the field representing a time
Description	The hours_ago function returns the amount of hours passed between the current time and the time field value

Syntax	<code>is_empty(field) == true false</code>
Parameters	• field: the field to check to evaluate whether it is empty or not
Description	The is_empty command takes a field as input and returns only the entries that are either empty / not empty.
Example	<code>nodes where is_empty(label) == false</code>

Syntax	<code>is_recent(<time_field>)</code>
Parameters	• time_field: the field representing a time
Description	The is_recent function takes a time field and returns true if the time is not farther than 30 minutes

Syntax	<code>minutes_ago(<time_field>)</code>
Parameters	• time_field: the field representing a time
Description	The minutes_ago function returns the amount of minutes passed between the current time and the time field value

Syntax	<code>mult(<field1>,<field2>,...)</code>
Parameters	• a list of fields to multiply

Description	The mult function returns the product of the fields passed as arguments
--------------------	---

Syntax	<code>round(<field>, [precision])</code>
Parameters	• field: the numeric field to round • precision: the number of decimal places
Description	The round function takes a number and outputs the rounded value

Syntax	<code>seconds_ago(<time_field>)</code>
Parameters	• time_field: the field representing a time
Description	The seconds_ago function returns the amount of seconds passed between the current time and the time field value

Syntax	<code>split(<field>, <splitter>, <index>)</code>
Parameters	• field: the field to split • splitter: the character used to separate the string and produce the tokens • index: the 0 based index of the token to output
Description	The split function takes a string, separates it and outputs the token at the <index> position

Syntax	<code>sum(<field>, ...)</code>
Parameters	• a list of fields to sum
Description	The sum function returns the sum of the fields passed as arguments

Syntax	<code>to_time(<field>)</code>
Parameters	• field: a time field, or a string literal in ISO-8601 format, e.g. "2024-01-15T10:30:00Z"
Description	The to_time function converts a time field, or an ISO-8601 datetime string, into the numeric timestamp (epoch milliseconds) used by time fields. If the datetime string does not specify a UTC offset, it is assumed to be UTC

Examples

Pie chart

An example on how to create a pie chart to understand the media access control (MAC) vendor distribution in a network.

We choose nodes as our query source and we start to group the nodes by mac_vendor:

```
nodes | group_by mac_vendor
```

We can see the list of the vendors in our network associated with the occurrences count. To better understand our data we can use the sort command, so the query becomes:

```
nodes | group_by mac_vendor | sort count desc
```

In the last step we use the pie command to draw the chart with the mac_vendor as a label and the count as the value.

```
nodes | group_by mac_vendor | sort count desc | pie mac_vendor count
```

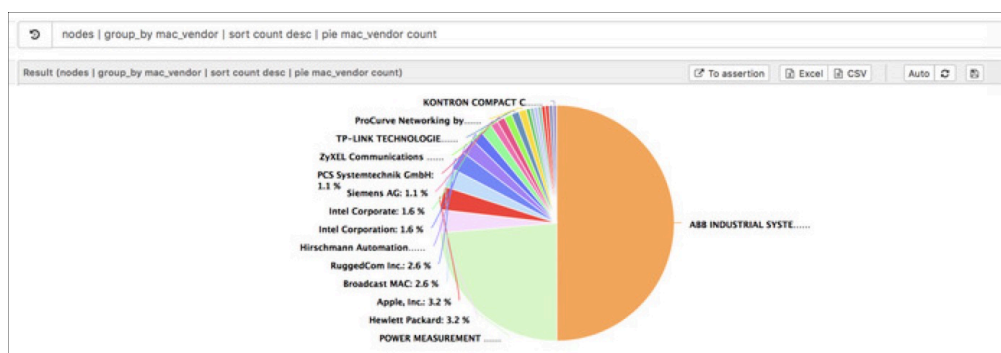


Figure 33. Pie chart example

Column chart

An example on how to create a column chart with the top nodes by traffic.

To start, you need to get the nodes and select the:

- id
- sent.bytes
- received.bytes
- sent.bytes
- received.bytes

To calculate the sum, you need to use the **sum** function. The query is:

```
nodes | select id sent.bytes received.bytes
sum(sent.bytes, received.bytes)
```

When you execute this query, the sum field has a very long name. You can rename it to be more comfortable with these commands:

```
nodes | select id sent.bytes received.bytes
      sum(sent.bytes,received.bytes)->sum
```

To obtain the top nodes by traffic, you can sort and take the first 10:

```
nodes | select id sent.bytes received.bytes
      sum(sent.bytes,received.bytes)->sum | sort sum desc | head 10
```

Finally, to display the data in a graphical way, you can use the **column** command:

```
nodes | select id sent.bytes received.bytes
      sum(sent.bytes,received.bytes)->sum | sort sum desc | head 10 | column
id sum sent_bytes received_bytes
```



Note:

You can access an inner field of a complex type with the dot syntax, in the example the dot syntax is used on the fields **sent** and **received** to access their bytes sub field.



Note:

After accessing a field with the dot syntax, it will gain a new name to avoid ambiguity; the dot is replaced by an underscore. In the example **sent.bytes** become **sent_bytes**



Figure 34. Column chart example

Where with multiple conditions in OR

An example of a query to get all the nodes with a specific role, in particular all the nodes which are web or domain name server (DNS) servers.

With the **where** command, you can separate many conditions with **OR**



Note:

Because the roles field contains a list of values, you can use the **include?** operator to check if a value was contained in the list.

```
nodes | where roles include? web_server OR roles include? dns_server |
select id roles
```



The screenshot shows a query result table with the following data:

id	roles
192.168.1.1	JSON View ["dns_server"]
172.16.0.1	JSON View ["dns_server"]

Figure 35. Where with multiple conditions in OR example

Bucket and history

An example of a query to calculate the distribution of link events towards an internet protocol (IP) address.

You can filter all the **link_events** with **id_dst** equal to **192.168.1.11** After this you can sort by time, this is a very important step because bucket and history depend on how the data are sorted.

Then you can use **bucket** to group the data by time. The final step is to use the **history** command to draw a chart, we pass **count** as a value for the Y axis and **time** for the X axis.

The **history** command is particularly suited for displaying a big amount of data, in the image below we can see that there are many hours of data to analyze.

```
link_events | where id_dst == 192.168.1.11 | sort time asc | bucket time
36000 | history count time
```

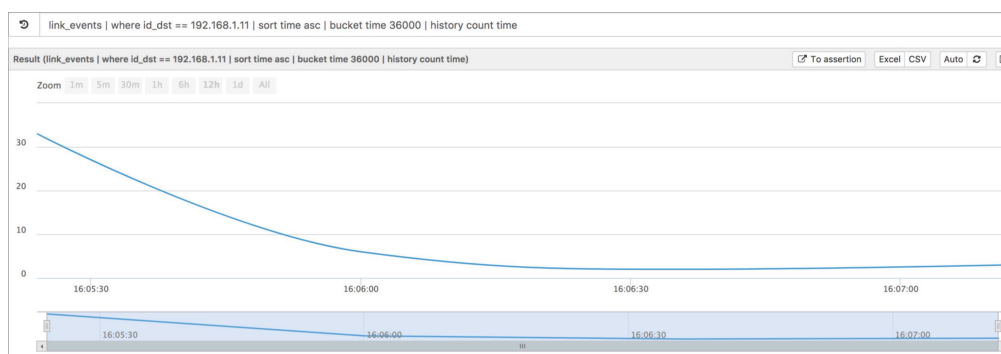


Figure 36. Bucket and history example

Join

An example query to join two data sources to obtain a new data source with more information. In particular, how to list the links with the labels for the source and destination nodes.

You can match the **from** field of the links with the **id** field of the nodes to ask for the links, and join them with the nodes:

```
links | join nodes from id
```


After executing the query above you will get all the links fields, plus a new field called **joined_node_from_id**, it contains the node which satisfies the **link.from == node.id** condition. You can use the dot syntax to access the sub fields of **joined_node_from_id**

Because we also want to get the labels for the **to** field of the **links** you add another **join** and exclude the empty labels of the node referred by **to** to get more interesting data:

```
links | join nodes from id | join nodes to id | where
  joined_node_to_id.label != ""
```

This will obtain a huge amount of data, which is difficult to understand. To only get the relevant information, you can use a **select**:

```
links | join nodes from id | join nodes to id | where
  joined_node_to_id.label != "" | select from joined_node_from_id.label to
  joined_node_to_id.label protocol
```

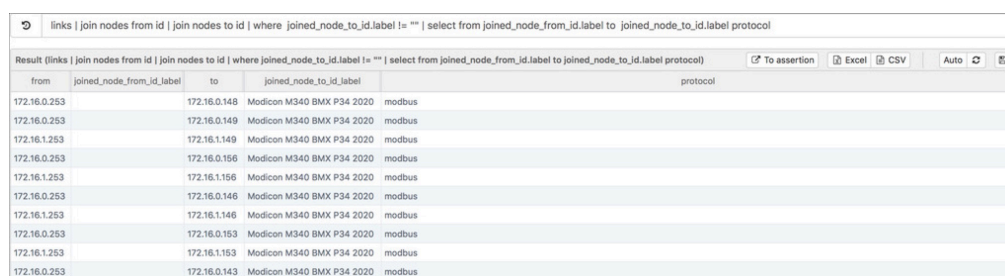

The screenshot shows a query execution interface with a table of results. The query is: `links | join nodes from id | join nodes to id | where joined_node_to_id.label != "" | select from joined_node_from_id.label to joined_node_to_id.label protocol`. The table has columns: **from**, **joined_node_from_id.label**, **to**, **joined_node_to_id.label**, and **protocol**. The data shows multiple rows of links between nodes, all with a **modbus** protocol.

from	joined_node_from_id.label	to	joined_node_to_id.label	protocol
172.16.0.253		172.16.0.148	Modicon M340 BMX P34 2020	modbus
172.16.0.253		172.16.0.149	Modicon M340 BMX P34 2020	modbus
172.16.1.253		172.16.1.149	Modicon M340 BMX P34 2020	modbus
172.16.0.253		172.16.0.156	Modicon M340 BMX P34 2020	modbus
172.16.1.253		172.16.1.156	Modicon M340 BMX P34 2020	modbus
172.16.0.253		172.16.0.146	Modicon M340 BMX P34 2020	modbus
172.16.1.253		172.16.1.146	Modicon M340 BMX P34 2020	modbus
172.16.0.253		172.16.0.153	Modicon M340 BMX P34 2020	modbus
172.16.1.253		172.16.1.153	Modicon M340 BMX P34 2020	modbus
172.16.0.253		172.16.0.143	Modicon M340 BMX P34 2020	modbus

Figure 37. Join example

Compute the availability history

An example query to compute the availability history for a link.

In order to achieve a reliable availability, it is recommended to enable the **Track availability** feature on the desired link.

Start from the **link_events** data source, filtered by source and destination ip in order to precisely identify the target link. Consider also filtering by protocol to achieve a higher degree of precision.

```
link_events | where id_src == 10.254.3.9 | where id_dst == 172.31.50.2
```

The next step is to sort the events by ascending time of creation. Without this step the **availability_history** might produce meaningless results, such as negative values. Then, to compute the **availability_history** with a bucket of 1 minute (60000 milliseconds), you can complete query is as follows:

```
link_events | where id_src == 10.254.3.9 | where id_dst == 172.31.50.2 |
  sort time asc | availability_history 60000
```

Queries	
link_events where id_src == 10.254.3.9 where id_dst == 172.31.50.2 sort time asc availability_history 60000	
Result (link_events where id_src == 10.254.3.9 where id_dst == 172.31.50.2 sort time asc avail: To assertion Excel Copy)	
availability	time
100	09:01:00.000
34.075	09:02:00.000
21.41167	09:04:00.000
79.805	09:05:00.000
0	09:06:00.000
74.47167	09:08:00.000
25.78833	09:09:00.000
0	09:10:00.000
29.11167	09:11:00.000
71.36167	09:12:00.000

Figure 38. Availability history example

**Note:**

By default, `link_events` generation is disabled. To enable it, you can use the configuration rule described in **Configure links**.

Complex field types

Single scalar values

To query single scalar values, apply the commands that are explained in this section.

Objects

Objects show in braces: {object}

```
{
  "source": "ARP",
  "likelihood": 1,
  "likelihood_level": "confirmed"
}
```

An example on how to query only **confirmed** **MAC** addresses.



Note:

Possible values are:

- **confirmed**
- **likely**
- **not confirmed**

Since `mac_address:info` is an object, you can access subfields like `mac_address:info.likelihood_level` to apply the **where** condition:

```
nodes | select mac_address:info mac_address:info.likelihood_level | where
mac_address:info.likelihood_level == confirmed
```

Since N2OS 24.1 is possible to access complex objects with a different syntax that is compatible with Vantage, using the `/` operator, the query specified above becomes:

```
nodes | select mac_address:info/likelihood_level | where
mac_address:info.likelihood_level == "confirmed"
```

Note that also the **"confirmed"** literal can now be quoted and the query can be executed in Vantage without any change.

Arrays



Note:

For example, a **parent** in the alerts table.

Arrays show in braces: {array}

```
[
"5b867836-2b41-4c15-ab6f-4ae5f0251e30"
]
```

An example on how to only query alerts that have a parent incident, with a known incident id with the value: **d36d0**

Since the **parents** field is an array, you can use **expand** first to get an entry for each parent, then apply your condition:

```
alerts | expand parents | where expanded_parents include? d36d0
```

Object arrays



Note:

For example, **function_codes** in the links table.

Object arrays are a combination of the above examples. Therefore, they show an object included in a `[{..},{..},.. ]` :

```
[
{
  "name": "M-SEARCH",
  "is_learned": true,
  "is_fully_learned": true
}
```

An example on how to query learned function codes.

Since `function_codes` is an object array, you can use `expand` first, to get an entry for each function code, then use the `.` operator (`function_code.is_learned`) to apply your `where` condition:

```
links | select from to protocol function_codes | expand function_codes |
  where expanded_function_codes.is_learned == true
```



Chapter 6. Smart Polling in Guardian



The **Smart Polling** page lets you view and manage Smart Polling.

Smart Polling has these tabs:

- [Plans \(on page 120\)](#)
- [Node points \(on page 121\)](#)
- [Settings \(on page 122\)](#)

**Note:**

Arc sensors execute Smart Polling when Guardian requests it. Enable execution in the Arc local UI under **Execution options**.

Active sensor

Smart Polling on Guardian selects the sensor or sensors for execution based on the **capture_devices** field of the polled node. Smart Polling will engage the corresponding sensors. When at least one successful execution occurs from a sensor, Smart Polling remembers to use that sensor in future executions. If a future execution fails, or Smart Polling records no executions for more than a week, it reverts to the sensors in the **capture_devices** field.

To add a sensor to the applicable sensors for a node, you can use the Guardian [CLI](#) to modify the **capture_devices** field. For example, to add an Arc to the applicable sensors for a node, use `vi node 192.168.1.1 capture_device arc[1e6a174c]`, where `192.168.1.1` is the node [ID](#) and the value in brackets is the first eight characters of the Arc sensor's [ID](#). The manually added sensor is then added to the node's **capture_devices** list, and may be chosen according to the algorithm described above. If a node is only visible to Arc sensors but you want to use Guardian instead, use `vi node 192.168.1.1 capture_device guardian`.

The [OS](#) of the sensor that polls the node decides which network interface to use based on the routing table. All Smart Polling strategies are based on the [IP](#), which means that all routing decisions are delegated to the [OS](#).

Plans

The **Plans** page shows a list of Smart Polling plans and lets you manage plans and add new ones.

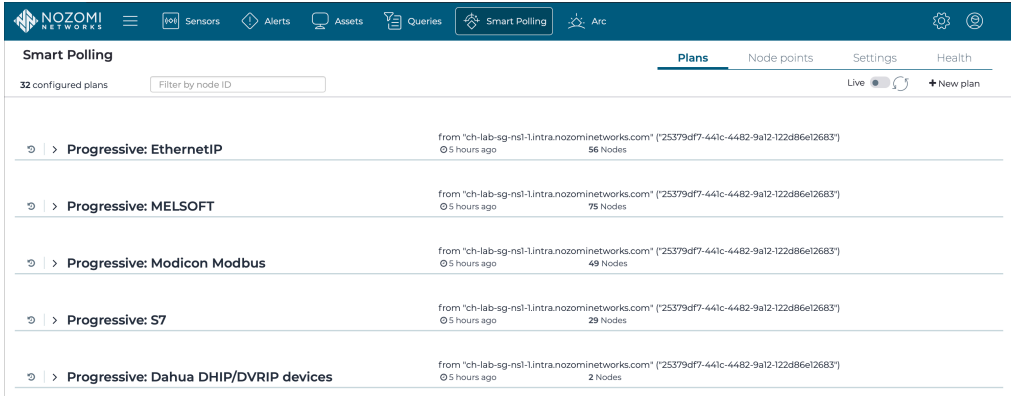


Figure 39. Plans page

**Important:**

Once a progressive plan is centralized in Vantage, you can no longer edit or delete it from the connected sensors.

Filter by node ID

The Filter by node ID field lets you use the node *ID* to filter the results.

Live / refresh

The **Live**   icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

New plan

The **+ New plan** icon lets you add a new plan.

Node points

The **Node points** page shows all of the node points.

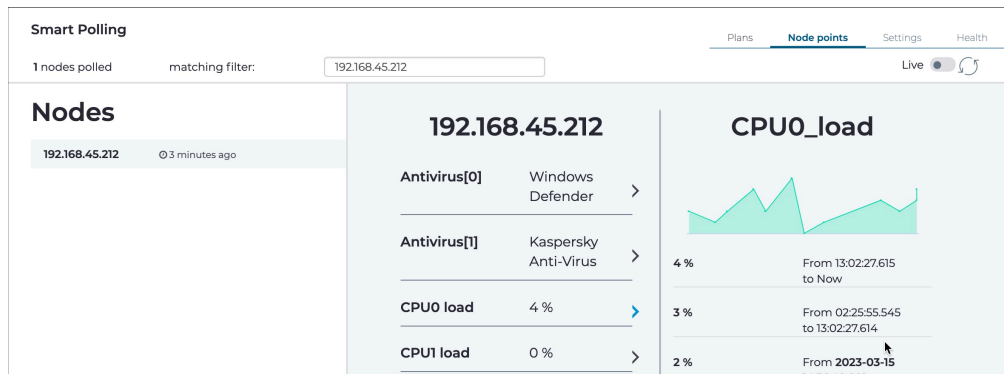


Figure 40. Node points page

Settings

The **Settings** page lets you configure the Smart Polling settings.

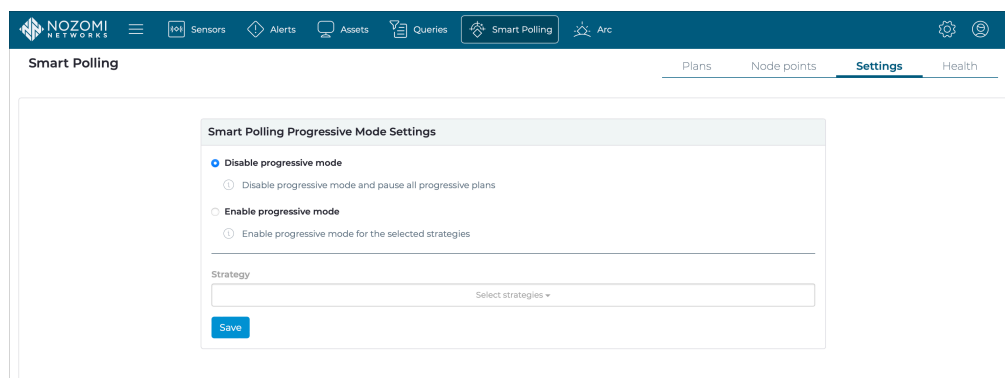


Figure 41. Settings page

Disable progressive mode

You can select this to disable all progressive mode and pause all progressive plans.

Enable progressive mode

You can select this to enable progressive mode for selected strategies.

Strategy

This dropdown is only enabled when the Enable progressive mode checkbox is selected. The dropdown lets you select from a list of strategies.

Create a Smart Polling plan in Guardian

The **Plans** page in Guardian lets you create a new Smart Polling plan.

About this task

Some of the options that follow depend on which strategy that you choose. Not all options apply to all strategies.

Procedure

1. In the top navigation bar, select **Smart Polling**.

Result: The **Smart Polling** page opens.

2. In the top right, select **Plans**.

Result: The **Plans** page opens.

3. In the top right, select **New plan**.

Result: A dialog shows.

4. In the **Label** field, enter a name for the plan.

The screenshot shows a 'Plan configuration' dialog box. It has a title bar with 'Plan configuration' and a close button 'X'. The dialog contains the following fields and controls:

- Label:** A text input field.
- Strategy:** A dropdown menu with the text 'Choose a strategy'.
- Host to test:** A text input field containing 'e.g. 192.168.1.1' and a 'Check connection' button.
- Schedule:** A text input field with the placeholder text 'Run interval in seconds'.
- Query:** A text input field.
- Buttons:** 'New plan' and 'Cancel' buttons at the bottom right.

5. In the **Strategy** dropdown, select a strategy.



Note:

You can use the **Credentials manager** to add credentials to the nodes that the plan targets.

6. In the **Schedule** field, enter a value (seconds) for the run interval.

7. If applicable, in the **Target** section, select an option:

Choose from:

- **Use identities**
 - **Use query**
- a. **Optional:** If you chose **Use identities**, choose the applicable credentials. To do this, select them from the list on the left and add them to the list on the right.
- b. **Optional:** If you chose **Use query**, the result of the query determines the list of node points. If necessary, use the **Credentials manager** to add credentials to the nodes targeted by the plan.
8. If applicable, from the **Data to be collected** dropdown, select the specific items to collect for the selected strategy.



Note:

The items shown are a generic list. The options available will vary depending on the specific target [OS](#) version, or the local configuration.

9. Verify that Smart Polling can connect correctly to a given node.

- a. In the **Host to test** field, enter an [IP](#) address of the node that you want to check.
- b. Select **Check connection**.

Result: If the connection check is successful, a green tick will show.

10. View the results to determine if the Smart Polling plan is correct. You can also troubleshoot potential problems, such as incorrect credentials, or Guardian being unable to reach plan nodes.

Edit a Smart Polling plan in Guardian

You can edit a Smart Polling plan in Guardian.

Procedure

1. In the top navigation bar, select **Smart Polling**.

Result: The **Smart Polling** page opens.

2. In the top right, select **Plans**.

Result: The **Plans** page opens.

3. To the left of the name of the applicable plan, select the  icon.

Result: A dialog shows.

4. In the **Strategy** field, note the existing strategy.



Note:

When you edit a plan, you cannot change its strategy. For strategies that require credentials, you will need to use the **Credentials manager** to add credentials to the set of nodes to be polled when using a query.

5. In the **Schedule** field, enter a value in seconds.

6. In the **Target** section, select an option:

Choose from:

- **Use identities**
- **Use query**

7. **Optional:** If you chose **Use identities**, choose the identities corresponding to the targeted nodes from the list on the left.

8. **Optional:** If you chose **Use query**, the result of the query determines the list of node points. Use the **Credentials manager** to add credentials to the nodes targeted by the plan.

9. Select **Edit plan**.

Add a network node to a Smart Polling plan

After you have created a plan, you can add a node, or multiple nodes, to it.

Procedure

1. In the top navigation bar, select **Smart Polling**.

Result: The **Smart Polling** page opens.

2. In the top right, select **Plans**.

Result: The **Plans** page opens.


3. To the left of the name of the applicable plan, select the **>** icon.

Result: The details for the plan show.

4. Select **+** **Add nodes to plan**.

Result: A dialog shows.

5. In the dialog, enter an *IP* address. If you want to add more than one *IP* address, enter each one on a new line.

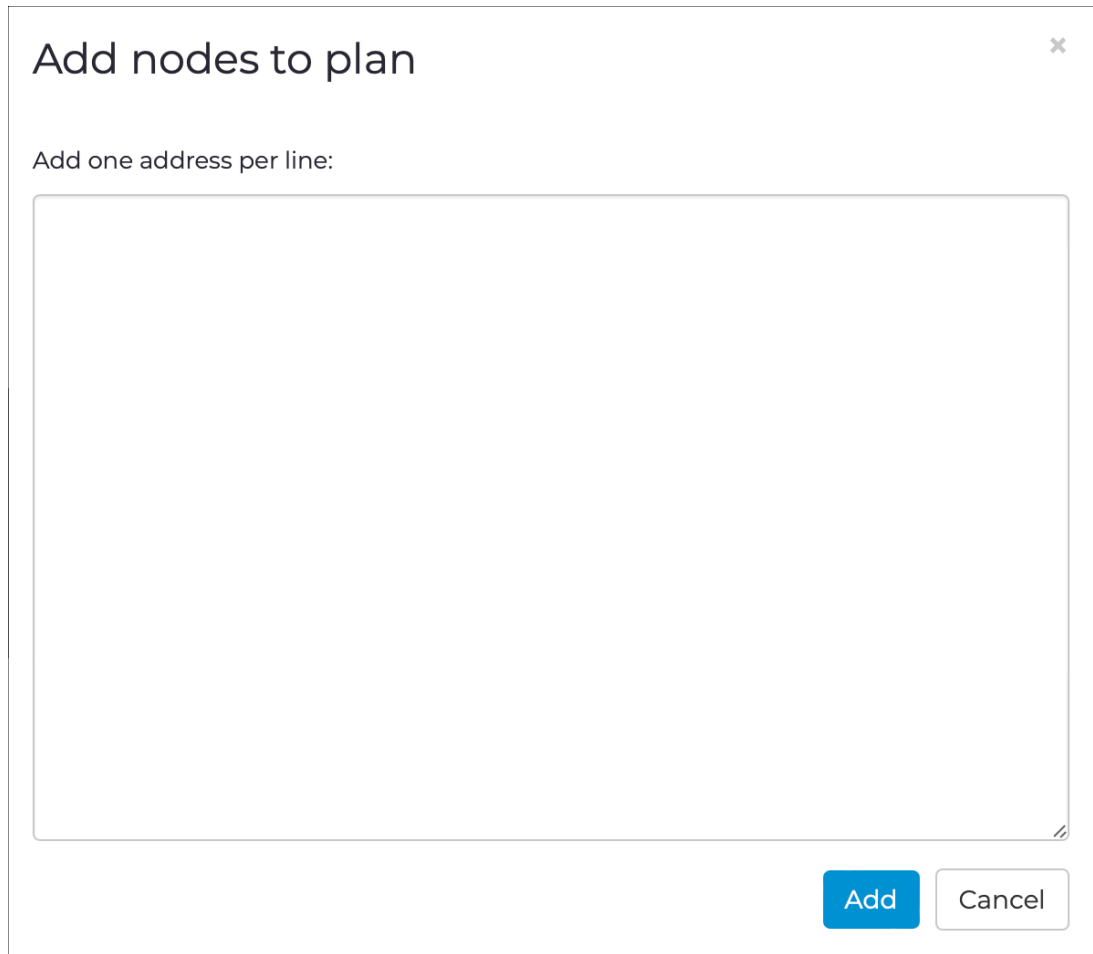

The screenshot shows a dialog box titled "Add nodes to plan" with a close button (X) in the top right corner. Below the title, the text "Add one address per line:" is displayed. A large, empty text input area occupies the center of the dialog. At the bottom right, there are two buttons: a blue "Add" button and a white "Cancel" button with a grey border.

6. Select **Add**.

Results

The node(s) has (have) been added to the Smart Polling plan.

Add a node from the Network page

Once you have created a Smart Polling plan, you can add arbitrary nodes to the target from the Network page. The Smart Polling plan will poll these nodes even if the plan's query does not return them.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. In the top right, select **Nodes**.

Result: The **Nodes** page opens.

3. To the left of the name of the applicable plan, select the  icon.

Result: A dialog shows.

4. From the **Select an existing plan to add the node to** dropdown, select the plan you want to add the selected node to.



Note:

Fields that are not modified in this dialog are automatically populated with the plan-configured values.

Result: A dialog shows.

5. Edit the field(s) as necessary to change the parameter(s) of the existing plan.
6. Select **Add**.

Results

The node(s) has (have) been added to the Smart Polling plan.

Edit the run interval of a progressive Smart Polling plan in Guardian

You can adjust some aspects of Progressive mode plans in Guardian. By default, each plan runs every 24 hours, but you can adjust this interval.

Procedure

1. In the top navigation bar, select **Smart Polling**.

Result: The **Smart Polling** page opens.

2. In the top right, select **Plans**.

Result: The **Plans** page opens.

3. To the left of the title of the plan that you would like to edit, select the  icon.

Result: A dialog opens.

4. In the **Schedule** field, edit the value (seconds) as necessary.



Note:

The default value is 86400 (seconds) or 24 hours.

5. To save your changes, select **Edit plan**.

Progressive mode enablement in Guardian

You can enable Progressive mode in Guardian to increase visibility.

Progressive mode is a Smart Polling option that increases visibility. To do this it automates plan creation and execution, and polls the correct nodes with the correct parameters based on asset information that has been detected passively.

Smart Polling automatically identifies the optimal target for polling. For example, only nodes that the query in the related strategy identifies will be polled.

You can select the Smart Polling strategies that you want to create a Progressive Smart Polling plan. Enabled Progressive Smart Polling plans show in the **Plans** tab.



Important:

Once a progressive plan is centralized in Vantage, you can no longer edit or delete it from the connected sensors.

Enable progressive mode in Guardian

You can enable Progressive mode in Guardian to increase visibility.

Procedure

1. In the top navigation bar, select **Smart Polling**.

Result: The **Smart Polling** page opens.

2. In the top right, select **Settings**.

Result: The **Settings** page opens.

3. In the **Smart Polling Progressive Mode Settings** section, select **Enable progressive mode**.

Smart Polling Progressive Mode Settings

☐ **Disable progressive mode**

Disable progressive mode and pause all progressive plans

☒ **Enable progressive mode**

Enable progressive mode for the selected strategies

Strategy

8 selected ▼

All None

- BACNet
- Dahua DHIP/DVRIP devices
- EthernetIP
- MELSOFT
- Modicon Modbus
- S7



Note:

If you select **Disable progressive mode** the progressive mode Smart Polling plans that have been newly created, will stop executing. Also, they will be, grayed-out in the **Plans** tab.

Results

Progressive mode has been enabled.

Log level customization

Smart Polling logs self-diagnostic information about its operations and activities during execution.

When Smart Polling logs self-diagnostic information, the logs are collected in these files:

- `/data/log/n2os/n2ossp.log`
- `/data/log/n2os/n2os_strategist.log`

To change the level of detail in the logs, you can run this command in the [CLI](#):

```
conf.user configure sp log_level <LEVEL>
```

The change applies immediately. You don't need to edit any files or restart any services. where `<LEVEL>` is one of the following values (in increasing order of verbosity):

- **FATAL**
- **ERROR**
- **WARN**
- **INFO**
- **DEBUG**



Note:

The default value is **INFO**.



Note:

The values are ordered from the most to the least important, and the configured level is the minimum to be printed. For example:

- **ERROR** will print log lines for both **ERROR** and **FATAL** messages
- **FATAL** will print log lines only for **FATAL** messages

To configure Smart Polling to only produce **ERROR** and **FATAL** messages, use this [CLI](#) rule:

```
conf.user configure sp log_level ERROR
```


View the enriched information history for a node

The **Node points** page lets you view the enriched information history for a node.

Procedure


1. In the top navigation bar, select **Smart Polling**.

Result: The **Smart Polling** page opens.

2. In the top right, select **Node points**.

Result: The **Node points** page opens.

3. In the left column, select a node point.

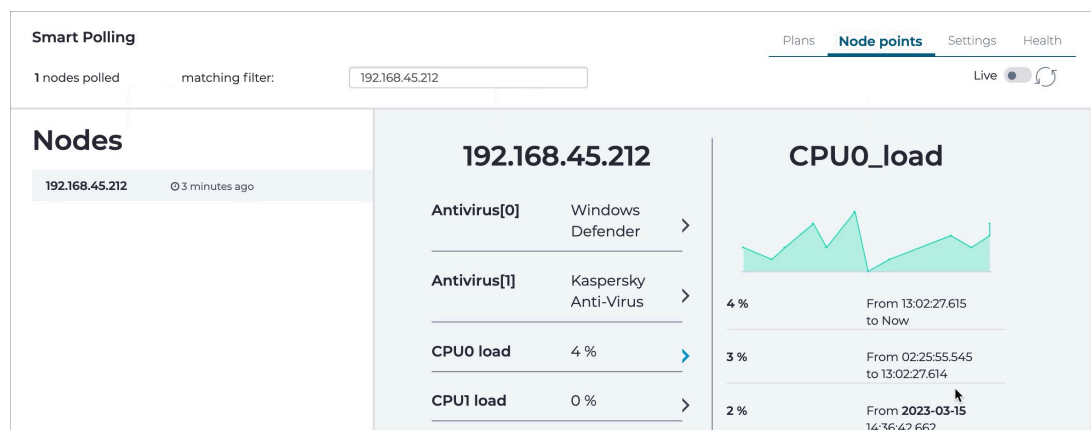

Result: The second and third columns show an increased level of detail for the extracted information for that node point



Chapter 7. Arc overview



Arc™ is a host-based sensor that detects and defends against malicious or compromised endpoints, and insider attacks. You can use Arc sensors to aggregate data for analysis and reports, either on-premises, or in the Vantage cloud.

General

When detecting cyberthreats, identifying vulnerabilities, or analyzing anomalies in your processes, it is critical to have as much detailed network and system information as possible. More accurate and timely access to data leads to better diagnostics and a faster time to repair.

Arc gives you enhanced endpoint data collection and asset visibility for your networks. This enhanced visibility gives you more:

- Vulnerability assessment capabilities
- Endpoint protection
- Traffic analysis capabilities
- Accurate diagnostics of in-progress threats and anomalies

Arc lets you easily identify compromised hosts that have:

- Malware
- Rogue applications
- Unauthorized [USB](#) devices
- Suspicious user activity

Operating Systems (OS)

Arc sensors are endpoint executables that run on hosts on these [OSs](#):

- Microsoft Windows
- Linux
- Apple macOS

The data that is collected can be sent to either Guardian or Vantage.

Use cases and deployment scenarios

Arc lets you:

- Incorporate air-gapped devices into the analysis and reporting system
- Gain deeper intelligence or insight on critical endpoint devices
- Continuously monitor and protect endpoints
- Automatically deploy sensors across thousands of devices
- Use a low-impact process to scan air-gapped networks
- Deploy with [mobile device management \(MDM\)](#) solutions

Continuous monitoring

Because the Arc sensor is on the host, it can monitor traffic continuously, even when the device is not sending or receiving traffic.

User-specific activity monitoring

With more access to endpoint data, Arc lets you connect network traffic and anomalies with specific users. This helps to identify potential insider threats and makes corrective actions both easier and quicker.

Local behavioral analysis (Sigma rules)

Sigma is a common open-source standard that lets you analyze log files to identify malicious events. They are not necessarily related to network artifacts, and as such, would not be detected without residing on a machine. Nozomi Networks Labs curates all the Sigma rules that are loaded into Arc. A [Threat Intelligence \(TI\)](#) active license is needed to receive curated rules from the upstream Nozomi Networks endpoint.

Temporary deployment

It is not necessary to keep the Arc executable on a host after you have collected information. This means that you can remove it after data has been collected to conserve host resources, and maintain a clean host environment.

Threat prevention

Starting with v2.0, Arc enforces actions to prevent threats in addition to monitoring.

Architecture

It is important to understand the different architecture possibilities that are available with Arc.

You can connect Arc:

- To Guardian
- To Vantage

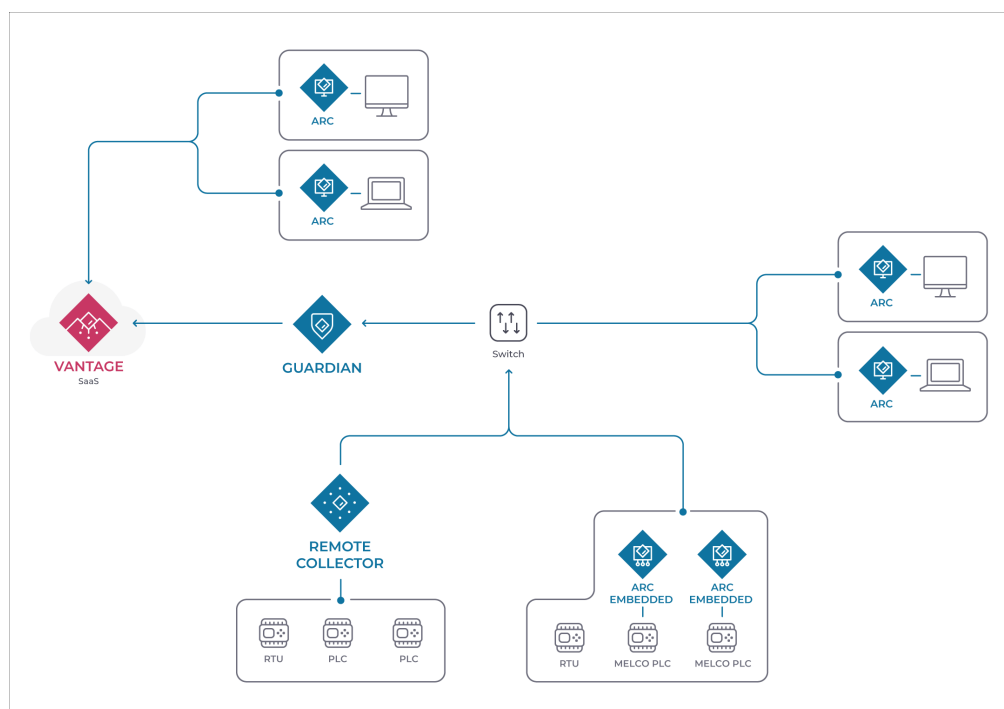


Figure 42. Arc architecture example

Arc in Guardian

The **Arc** button in the Guardian Web UI lets you access the different pages for Arc.



Figure 43. Arc button in Guardian Web UI



Figure 44. Arc button in Guardian Web UI (not connected to Vantage)

When you select **Arc** in the Guardian Web *user interface (UI)*, you get access to these pages:

- **Deployment**
- **Deployment settings**
- **Node points**
- **Dependencies** (only for Guardians that are not connected to Vantage)

Configure an Arc sensor

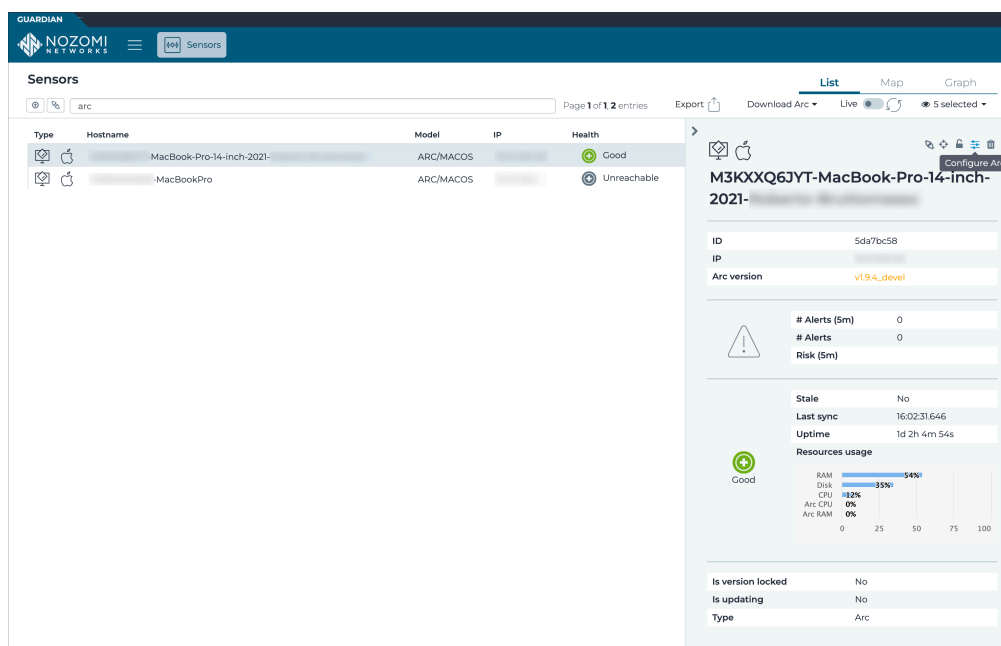


Figure 45. Configure an Arc sensor

You can configure an individual Arc sensor directly from Guardian. To do this, you can select the applicable Arc sensor from the **Sensors** list, and select the  icon.

Deployment

The **Deployment** page shows a table of all the devices available for Arc deployment. The table only shows machines which have an **OS** that matches one that Arc supports. As Guardian detects the installed **OS**, the correct Arc package will be automatically deployed.

GUARDIAN

LIVE

HOST

ch-qa-g-st-d-vm-gen-master-1.intra.nozomi-networks.com

24.2.0-04130908.6f1219

TIME

11:36:53.542

DISK

510 used / 120 free

LICENSEE

Nozomi Engineering

UPDATES

11

AI

✓

Arc

English

Sensors

Alerts

Assets

Queries

Smart Polling

Arc

Arc

Deployment

Deployment settings

Node points

Page 1 of 8,194 entries

Automated deploy works only with Arc >= 1.6.0

Advanced

Live

Actions	Deployed version	Operating system	Name	IP	Vendor	Product name	Type
☐		Windows 7	172.18.235.34	172.18.235.34			computer
☐		Windows 7	172.16.44.92	172.16.44.92			computer
☐		Windows 7	172.16.44.134	172.16.44.134			computer
☐		Windows 7	172.16.45.255	172.16.45.255			computer
☐		macOS	Mac Series	192.168.179.198	Apple	Mac Series	computer
☐	v1.710	Windows 8.1 Update 1	LSPW8	10.41.50.18, fe80::5efea3...	VMware	Virtual Machine	computer
☐		macOS	Apple M1-based Computr	192.168.180.73	Apple	Apple M1-based Comput...	computer
☐		Windows 8.1 Update 1	ENG-WMI-TEST	192.168.45.212, 192.168.4...	VMware	Virtual Machine	computer
☐		Windows 10	NUC	169.254.23.208		Intel(R) Client Systems	computer
☐		Windows Server 2022	LSPW2022	10.41.50.17, fe80::4259fc...	VMware	Virtual Machine	computer
☐		Windows 7 SPI	LSPW7	10.41.50.23, fe80::100:7f...	VMware	Virtual Machine	computer
☐		Windows 7	172.30.68.31	172.30.68.31			computer
☐		Windows 7 SPI / Serve...	172.16.46.69	172.16.46.69			computer
☐	v1.4.2	Ubuntu Linux 22.04	ch-int-snmp-ubuntu-22.0	10.41.48.102, fe80::2505...	VMware	Virtual Machine	computer
☐		Ubuntu Linux 21.04	ch-lab-raspdocker02	10.41.43.55, fe80::dea63...	Raspberry Pi Foundation	Raspberry Pi SBC	computer
☐		macOS	Apple M1-based Computr	192.168.178.129	Apple	Apple M1-based Comput...	computer
☐		macOS	Apple M1-based Computr	192.168.175.25	Apple	Apple M1-based Comput...	computer
☐		Windows 10	NUC	169.254.181.84	Intel	Intel(R) Client Systems	computer

Figure 46. Deployment page

Advanced

The **Advanced** button lets you access the **Advanced** page. For more details, see [Advanced \(on page 141\)](#).

Execution details

The **Execution details** lets you access the **Activity Log**. For more details, see [Execution details \(on page 143\)](#).

Live toggle

The **Live** toggle lets you change live view on, or off. When live mode is on, the page will refresh periodically.

Refresh

The  icon lets you immediately refresh the current view.

Actions

The **ACTIONS** column has a checkbox for each row in the table. This lets you select multiple nodes before you then apply an action to them.

The **ACTIONS** menu icon  gives you access to these options:

- Select all in current page
- Select none in current page
- Invert selection in current page
- Deploy Service mode: this installs Arc in Service mode for the selected devices
- Remove Service mode: this removes the Arc previously installed in Service mode for the selected devices

Operating System

The **OPERATING SYSTEM** column shows the **OS** for each of the Arc sensors in the table. The field at the top of the column lets you use the **OS** to filter the table.

IP

The **IP** column shows the *IP* for each of the Arc sensors in the table. The field at the top of the column lets you use the *IP* to filter the table.

Vendor

The **VENDOR** column shows the vendor name for each of the Arc sensors in the table. The field at the top of the column lets you use the vendor name to filter the table.

Product name

The **PRODUCT NAME** column shows the product name for each of the Arc sensors in the table. The field at the top of the column lets you use the product name to filter the table.

Type

The **TYPE** column shows the device type for each of the Arc sensors in the table. The field at the top of the column lets you use the device type to filter the table.

Advanced

The **Advanced** page lets you interact with nodes that have no operating system (OS) detected, or do not show on the same page in the table.

The default table view only shows nodes that have had their **OS** detected. Also, if you select multiple nodes, actions will only be applied to a single page of nodes. To overcome these limitations, you can use the **Advanced** button to go to the **Advanced** page. This will let you interact with a:

- Set of nodes that cannot be shown on a single page
- Set of nodes that have no OS detected

Strategy

Automate *

☐ Dynamic strategy based on existing OS information. It uses WinRM (Windows Remote Management), port 5985(5986) and SMB (Server Message Block), port 445) on Windows hosts and SSH on Unix hosts. Hosts without any OS information will be ignored.

Dynamic

Remove

Query

[info] queries [button] refresh icon

☐ nodes | where ip in \$(\$AZURE_IP) | where os ne \$include? windows OR ne \$include? Linux OR ne \$include? macos | exclude links

☐ Credentials are read from the Credential Manager. If identities for the nodes in scope are already present, no further action is needed.

Timeout (seconds)

30

Cancel

Apply

Figure 47. Advanced page

Strategy

Automatic: This selection will use the [OS](#) that has been detected on the node to automatically choose a deployment strategy. You can select multiple nodes that have a different [OS](#). This strategy will ignore a host if it has no [OS](#).

SSH (Linux): This selection will force the [secure shell \(SSH\)](#) strategy, regardless of the [OS](#), and deploy the correct Arc package for Linux.

Query

This field lets you create and execute queries on the nodes. This lets you filter and selectively install packages.

Timeout (seconds)

The **Timeout** dropdown lets you set the amount of time that Arc will try to communicate with a host machine before it skips it and goes to the next one.

Execution details

The **Execution details** button gives you access to the **Activity Log**.

The **Activity Log** lets you troubleshoot the results of the executed deployments. When you select an execution on the left side of the page, you can analyze the selection.

You can use the **Filter by node ID** to focus on a single issue, such as:

- Credential missing, or
- Wrong credentials

Activity Log - Arc operations Live 

5 executions of the plan

2023-03-21 13:02:07.337	1 nodes
2023-03-21 13:01:36.990	1 nodes
2023-03-21 13:00:21.120	1 nodes
2023-03-21 12:58:56.541	1 nodes
2023-03-21 12:58:35.902	1 nodes

Filter by node ID

Execution details

Started at: 2023-03-21 13:02:07.337.
Lasted 7195 milliseconds.
1 nodes polled.

10.41.48.16 7149 ms

Steps	Node points
✓ Fetching credentials	
✓ Using credentials from Credentials Manager for node: [10.41.48.16]	
✓ Establishing connection	
✓ Fetching remote host architecture	
✓ Fetching Arc status	
✓ Arc uninstalled	

Live toggle

The **Live** toggle lets you change live view on, or off. When live mode is on, the page will refresh periodically.

Refresh

The  icon lets you immediately refresh the current view.

Deployment settings

Configure Arc deployment parameters that will be included in downloaded Arc bundles. These settings define how Arc will behave when deployed from Guardian.

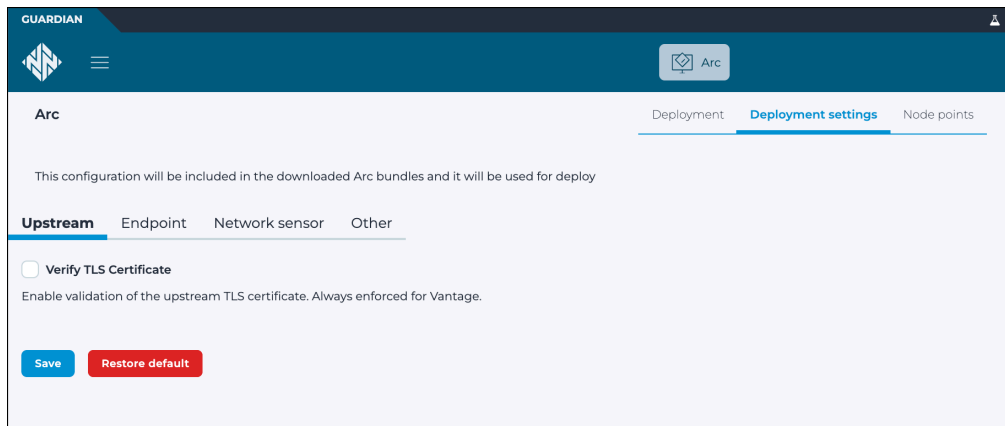


Figure 48. Deployment settings page

The **Deployment settings** page has these tabs:

- [Upstream](#) (on page 145)
- [Endpoint](#) (on page 146)
- [Network sensor](#) (on page 148)
- [Other](#) (on page 32)

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Upstream

The **Upstream** page lets you configure the settings for your Arc deployment.

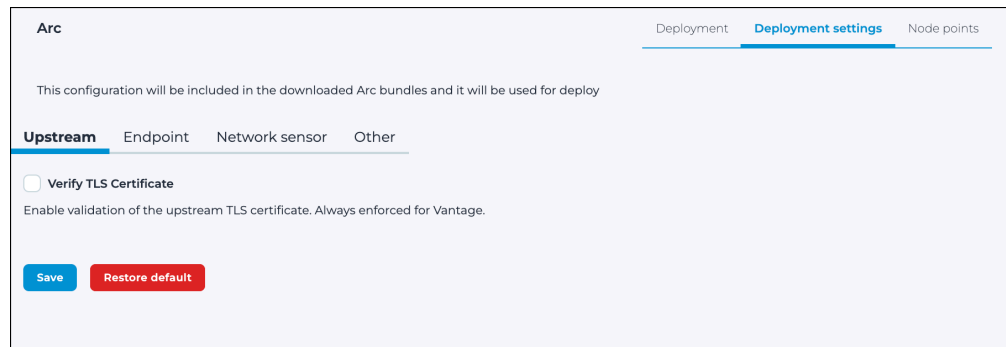


Figure 49. Upstream page

Verify TLS Certificate

Select this option to enforce verification of the upstream *TLS* certificate when connecting to Guardian. When using Vantage, *TLS* certificate validation is always enforced, regardless of this setting.

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Endpoint

The **Endpoint** page lets you configure the settings for your Arc deployment.

Arc

Deployment **Deployment settings** Node points Dependencies

This configuration will be included in the downloaded Arc bundles and it will be used for deploy

Sensor mode

Full
All features are active. Network settings are available in the Network sensor tab.

Upstream **Endpoint** Network sensor Other

Select which information to detect:

☒ **Asset information**
Extract detailed asset information that can be plotted over time.

☐ CPU usage

☐ RAM usage

☐ Disk usage

☐ Logged-in users

☐ Processes with network activity

☐ Hotfixes

☒ User accounts

☒ DNS

☒ Installed softwares

☒ Unusual behaviors
Use Sigma indicators to monitor local events for signs of suspicious activity.

☒ Valid assets (using ARP)
Use the local address resolution protocol (ARP) table to confirm media access control (MAC) addresses.

☒ Use static entries
User-defined (disable in case these entries are not trusted).

☒ USB devices
Detect the use of USB devices and malicious HID.

☒ Malware
Use Yara and STIX indicators to detect malicious file patterns before they get transferred over the network.

Action to perform on malware detection **New**

Only alert

Directory exclusions +

Save Restore default

Figure 50. Endpoint page

Asset information

Enable **Asset information** to collect detailed information about the endpoint. Arc collects the following data:

- **CPU usage:** The current processor load of the endpoint.
- **RAM usage:** The amount of memory currently in use on the endpoint.
- **Disk usage:** The current disk space usage on the endpoint.
- **Logged-in users:** The users currently logged in to the endpoint.
- **Processes with network activity:** The running processes that have active network connections, including the local and remote addresses and ports.
- **Hotfixes:** The security patches and updates installed on the endpoint (Windows only).
- **User accounts:** The local user accounts configured on the endpoint.
- **DNS:** The [DNS](#) servers and configuration of the endpoint.
- **Installed software:** The software packages installed on the endpoint.

Unusual behaviors (Windows only)

This lets you enable/disable Sigma rules for local behavior analysis.

Valid assets (using ARP)

Enable this option to use the local **ARP** table to confirm **MAC** addresses for connected assets.

Enable **Use static entries** to include user-defined static **ARP** table entries in the validation. Only enable this if the static entries are trusted.

USB devices (Windows only)

This lets you enable/disable **USB** detections.

Malware (Windows only)

The **Malware** checkbox lets you enable protection mode and select from the **Action to perform on malware detection** dropdown. This lets you set the action that Arc will take when it finds a malicious file.

You can choose from these options:

- **Only alert:** Receive an alert with no further action
- **Quarantine:** Move the malicious file to the **quarantine** folder, which is located in the Arc installation folder
- **Delete:** Immediately delete the malicious file. Once deleted, the files cannot be recovered

You can also use the **Directory exclusions** feature to exclude specific directories from malware scanning. Select **+** to open a file browser and select a directory. You can add as many directories as needed. Arc skips the selected directories when scanning for malware.

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Network sensor

The **Network sensor** page lets you configure the settings for your Arc deployment.

Arc

Deployment **Deployment settings** Node points

This configuration will be included in the downloaded Arc bundles and it will be used for deploy

Upstream Endpoint **Network sensor** Other

Select how to monitor your network.

☒ **Discovery**
Leverage lightweight network announcements to discover neighboring devices.

☒ **Smart Polling** License required
Use surgical active queries to enrich asset data.

☒ **Traffic monitoring**
Monitor network traffic using either intermittent or continuous modes.

☐ **Enable continuous mode**

Time per notification
 seconds

Max packets per notification
 packets

Max used Memory
 MB

Global BPF filter
Applied to all network interfaces where a local BPF filter is not set. Syntactically incorrect filters will cause Traffic monitoring to stop.

Save **Restore default**

Figure 51. Endpoint page

Discovery

When enabled, this sends out unsolicited lightweight network announcements to discover neighboring nodes.

Discovery uses lightweight protocol-specific broadcast messages to identify network devices. These messages trigger a response from the devices, which includes identity information. The process is repeated at predefined intervals. At each interval, the sensor will identify the suitable network interfaces and send broadcast messages through them to discover devices on each subnetwork connected to the sensor.

Smart Polling

This lets you enable/disable the execution of Smart Polling strategies from Arc. When enabled, this sends out Smart Polling queries following remote requests coming from Guardian to poll assets that Arc can reach, or assets that have been identified with Discovery.



Note:

Smart Polling requires that a Smart Polling license is enabled upstream.

To force Smart Polling from a specific Arc sensor, even when Guardian was the first to monitor a node, you can use a [CLI](#) command such as: `vi node 192.168.1.1 capture_device arc[1e6a174c]` In this example, `192.168.1.1` is an [IP](#) address of a node you want to poll from a specific Arc sensor. `1e6a174c` are the first eight characters of the Arc sensor [ID](#) that you want to poll the node with. To find that sensor [ID](#), you can select the Arc sensor from the **Sensors** page of your Guardian and read the **ID** field in the right pane. To reset the behavior, you can set the `capture_device` back to the value of the Guardian interface.

Traffic monitoring

When enabled, this checkbox lets you enable/disable traffic monitoring.

Enable continuous mode

This checkbox lets you enable/disable continuous mode. For more details, see **Continuous mode**.

Arc uses two different methods for traffic monitoring:

- Intermittent mode
- Continuous mode

Intermittent mode: This is the default mode, the traffic is monitored, or sniffed, for a duration of 10 seconds at each notify. The purpose of this limitation is to preserve the resources of the host machine, which prevents excessive memory, or [CPU](#), spikes. You can configure these options:

Continuous mode: This mode sniffs traffic continuously from the host's network interface controllers. Depending on the amount of sniffed traffic, continuous mode might utilize more [CPU](#) and memory on the host. As the traffic is processed upstream, the performance of the remote endpoint is also affected. You can configure:

- **Time [s] per notification**
- **Max packets per notification**
- **Max used Memory (MB):** this value can be tuned to allow more or less traffic buffering in case the traffic to process exceeds the Arc and network capacity to send it out

Traffic summary

This checkbox lets you enable or disable traffic summary. This option is available when traffic monitoring is enabled, and is disabled by default.

When enabled, Arc extracts only metadata from traffic for which deep packet inspection is not effective, such as encrypted or multimedia traffic. This metadata is sent upstream instead of the full payloads.

Heavy multimedia traffic, such as high-quality video feeds from security cameras or video conference software, can create a substantial load. With traffic summary enabled, this traffic is summarized as metadata, which reduces the upstream bandwidth consumption considerably without any loss of data. On the upstream appliance, the result is the same, and the data is available as usual, in the form of assets, links, and other information.

Global BPF filter

This field lets you set a Global BPF filter to apply to all the network interfaces. Filters that are applied to single interfaces will take precedence over the global one.

Network interface

This dropdown lets you select a network interface to configure. Each network interface can then be enabled, and be tuned with a monitoring filter.

If you add, remove, or edit the network interfaces on the host, Arc does not automatically add it to the list of sniffing interfaces. For example, if you add a new network card, to enable Arc to use it, you should stop Arc, and then start it again.

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Other

The **Other** page lets you configure the settings for your Arc deployment.

The screenshot shows the 'Other' tab of the 'Deployment settings' page. At the top, there are tabs for 'Deployment', 'Deployment settings' (which is active), and 'Node points'. Below the tabs, a message states: 'This configuration will be included in the downloaded Arc bundles and it will be used for deploy'. The 'Other' tab is selected, and it contains the following settings:

- Upstream**, **Endpoint**, **Network sensor**, and **Other** (selected).
- Select event logging and endpoint space use preferences.**
- Log level**: A dropdown menu showing 'Info'. The text below it says: 'How much information would you like in your log files? Choose from minimal log information ('Error' will only log unexpected errors) to more comprehensive log files for debugging purposes ('Debug').'
- Execution time**: A text input field with '150' and a 'seconds' label. The text below it says: 'Applicable to One-shot and Offline modes, set to 0 for unlimited executions.'
- Maximum disk space**: A text input field with '300' and a 'MB' label. The text below it says: 'Applicable to Offline mode, minimum 5. Set to 0 for unlimited space. 1GB of free disk space is always preserved.'
- Offline archive naming strategy**: A dropdown menu showing 'Choose a naming strategy'. The text below it says: 'Select the information to be included in the name of the archive file when running Offline mode. Example: arc_data_archive_MyComputer_192.168.1.10_1761552820.zip'
- At the bottom, there are two buttons: 'Save' (blue) and 'Restore default' (red).

Figure 52. Other page

Log level

This dropdown lets you select the verbosity level for the log files. The options are:

- Debug
- Info
- Warning
- Error

The logging system options have an increasing level of verbosity, from the least verbose to the most verbose. Error < Warning < Info < Debug.

- Error: Creates a minimalistic log, only unexpected errors are logged
- Warning: Creates extra errors that might show on some [OSs](#), but that are generally considered as acceptable
- Info: Logs relevant successful events, it shows the program's progress (recommended)
- Debug: Logs extra events that are normally useful for debugging purposes. Given its verbosity it is best to activate it only when debugging activities are involved

**Note:**

This setting applies to:

- `arc.log.txt`
- `arc_service.log.txt`
- `sp.log.txt`

It doesn't apply to **setup.log**, which covers Arc's initialization process, before the configuration has been loaded and applied.

For more details, see Log files (on page).

Execution time

This field lets you set the time that Arc will run to collect data. This is applicable for One-shot and Offline modes.

**Note:**

When this is set to 0, the execution time is interpreted as infinite.

Maximum disk space

This field lets you control the maximum amount of disk space in **MB** that will be used for Offline mode.

Offline archive naming strategy

This lets you select the information that will be included in the name of archive files created while running Offline mode.

Restore default

Once the settings have been saved, you can use this button to restore the default configuration.

Node points

The **Node points** page shows data points that are collected over time, and represent the state of the target machine.

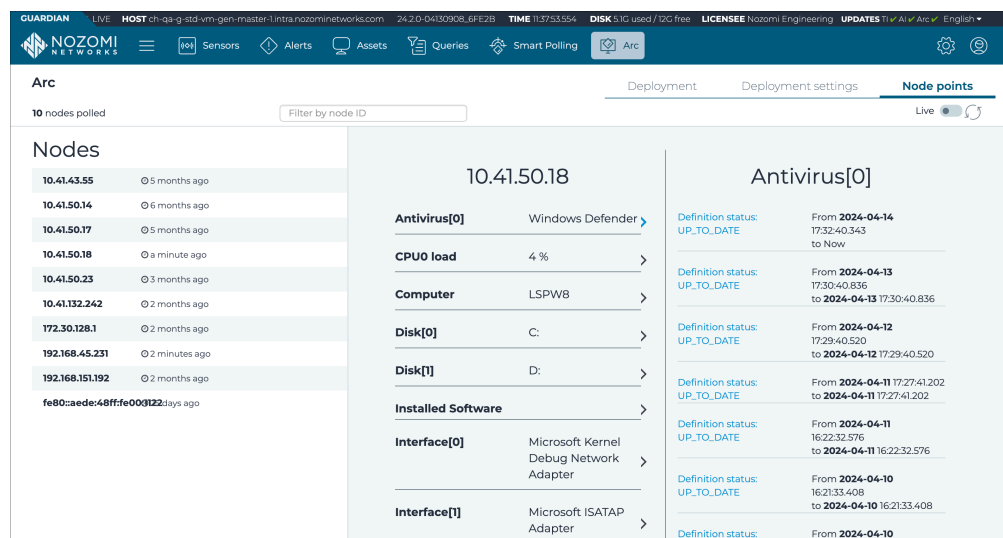


Figure 53. Node points page in Guardian

Node points count

This shows the number of the nodes polled.

Filter by node ID

This field lets you use the node *ID* to filter the nodes.

Live toggle

The **Live** toggle lets you change live view on, or off. When live mode is on, the page will refresh periodically.

Refresh

The  icon lets you immediately refresh the current view.

Nodes

The list of nodes that show at least one node point.



Chapter 8. Network



The **Network** page gives you access to multiple pages that show nodes, links, sessions in tabular format and graphs and traffic in a graphical format.

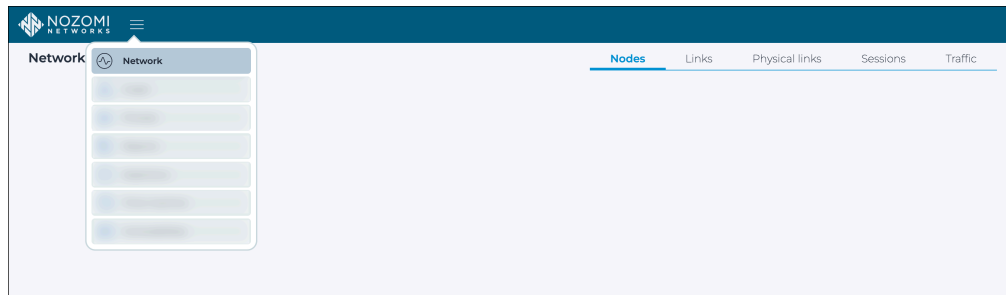


Figure 54. Network page

The **Network** page has these tabs:

- [Nodes \(on page 158\)](#)
- [Links \(on page 168\)](#)
- [Physical links \(on page 178\)](#)
- [Sessions \(on page 179\)](#)
- [Traffic \(on page 184\)](#)

Nodes

The **Nodes** page lets you view all the network nodes in your environment and perform actions on them.

Network

NodesLinksPhysical linksSessionsTraffic

Page 1 of 471 11757 entries

ExportLive9 selected

Actions	Address	Roles	MAC address	Sent byte...	Received byte...	TCP retrans...	# Links...	Protocols
	10.43.1.201	other	-	0.0 B	0.0 B	0.0%	1	mms
	10.43.1.202	other	-	0.0 B	0.0 B	0.0%	0	
	10.43.1.203	other	-	0.0 B	0.0 B	0.0%	1	mms
	10.43.1.224	other	-	0.0 B	0.0 B	0.0%	1	mms
	10.43.1.223	other	-	0.0 B	0.0 B	0.0%	0	
	10.16.1.214	other	-	0.0 B	0.0 B	0.0%	1	mms
	10.43.1.1	other	-	0.0 B	0.0 B	0.0%	0	
	10.30.1.1	other	-	0.0 B	0.0 B	0.0%	0	
	172.17.229.31	other	00:08:a3:f1:d9:0	1.3 MB	0.0 B	0.0%	0	
	10.16.1.102	other	-	0.0 B	0.0 B	0.0%	0	
	10.16.1.101	other	-	0.0 B	0.0 B	0.0%	3	http, modbus
	10.16.1.1	other	-	0.0 B	0.0 B	0.0%	1	http
	10.16.1.103	other	-	0.0 B	0.0 B	0.0%	1	http
	10.16.1.114	other	-	0.0 B	0.0 B	0.0%	1	modbus
	172.16.39.113	other	00:50:56:94:78:00	60.1 MB	23.5 MB	8.1%	1	ms-sql-server
	172.30.147.75	other	00:08:a3:f1:e0:8	267.3 MB	301.6 MB	28.7%	2	other
	172.17.73.36	other	00:08:a3:f1:d9:0	4.8 MB	0.0 B	8.5%	1	https
	172.22.1.32	web_server	38:0e:4d:29:22:6e	119.0 MB	25.2 MB	40.8%	1	http
	10.64.45.23	other	00:08:a3:f1:#20	12.6 MB	22.6 MB	0.0%	0	
	172.22.2.223	web_server	38:0e:4d:29:22:6e	22.4 MB	11.3 MB	11.1%	1	http
	34.237.73.95	web_server	38:0e:4d:29:22:6e	12.6 MB	9.2 MB	2.7%	5	https, ssh, telnet
	172.28.1.8	other	00:26:99:a6:e2:f9	2.1 MB	0.0 B	0.0%	1	dns
	74.6.34.27	web_server	38:0e:4d:29:22:6e	7.6 MB	24.0 MB	15.9%	3	https
	172.16.38.170	db_server	00:50:56:94:22:b4	51.3 MB	41.4 MB	19.0%	2	https, ms-sql-server
	172.30.1.54	other	00:08:a3:f1:d9:0	2.1 MB	0.0 B	0.0%	0	

1234567... 471

Figure 55. Nodes page

Export

The **Export**  icon lets you export the current list in either **CSV** or Microsoft Excel format.

Live / refresh

The **Live**   icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Configure a node

The **Nodes** page lets you configure nodes.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Nodes**.


Result: The **Nodes** page opens.

3. To the left of the applicable node, select the configure  icon.

Result: A dialog shows.

4. **Optional:**

To make the node(s) invisible in network graph view, select **Is disabled**.

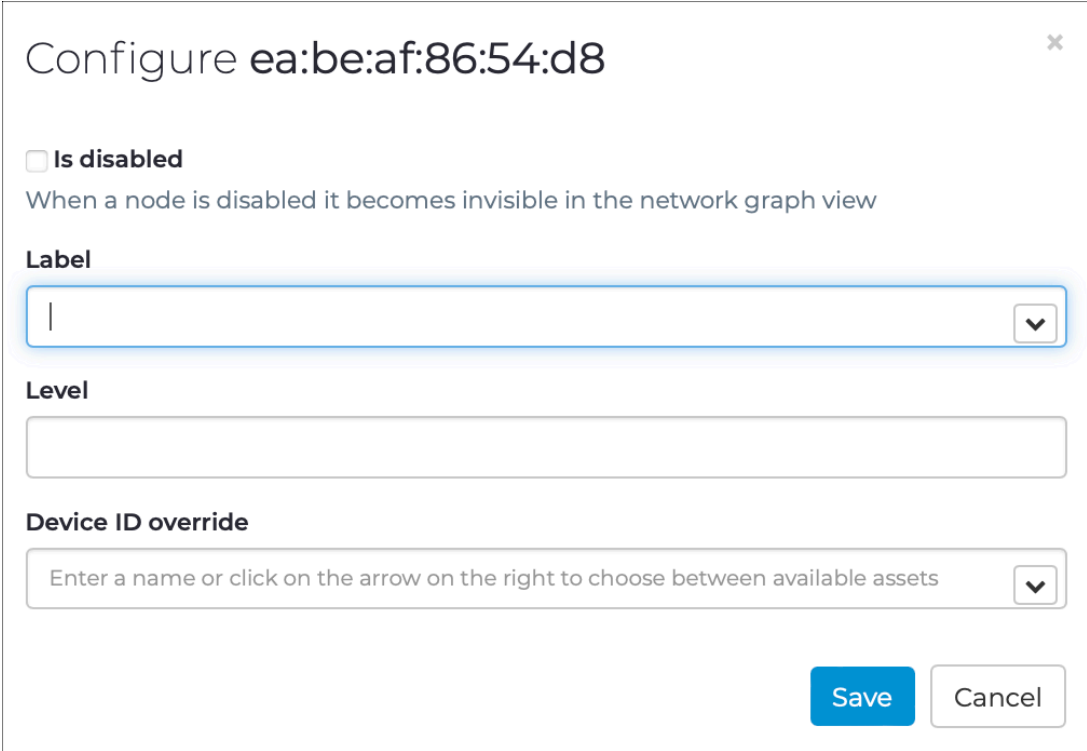

Configure ea:be:af:86:54:d8

☐ **Is disabled**
When a node is disabled it becomes invisible in the network graph view

Label

Level

Device ID override

Enter a name or click on the arrow on the right to choose between available assets

Save **Cancel**

5. From the **Label** dropdown, select an asset and assign the node to it.
6. In the **Level** field, enter a level in accordance with the Purdue model classification.
7. From the **Device ID override** dropdown, remove or re-assign Device ID to overwrite the automatically assigned **Device ID**.
8. Select **Save**.

Results

The node has been configured.

Show alerts for a node

The **Nodes** page lets you show alerts for a selected node.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Nodes**.

Result: The **Nodes** page opens.

3. To the left of the applicable node, select the  icon.

Result: A list of all the requested traces for the node shows.

Show requested traces for a node

The **Nodes** page lets you show requested traces for a selected node.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Nodes**.

Result: The **Nodes** page opens.

3. To the left of the applicable node, select the  icon.

Result: A list of all the requested traces for the node shows.

Request a trace for a node

The **Nodes** page lets you request a trace for a selected node.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Nodes**.

Result: The **Nodes** page opens.

3. To the left of the applicable node, select the  icon.

Result: A dialog shows.

4. To set the maximum packet size, in the **Trace max size (packets)** field, enter a value.

Request a trace

Trace max size (packets)

5000

Trace max duration (seconds)

60

Packet filter

[BPF syntax help](#) [BPF examples](#) ▼

ip host 192.168.68.65

Send trace request

Cancel

**Note:**

The default size is 5000 packets.

5. To set the maximum duration of the trace, in the **Trace max duration (seconds)** field, enter a value.

**Note:**

The default value is 60 seconds.

6.

**Note:**

The **Packet filter** field is automatically populated with a [Berkeley Packet Filter \(BPF\)](#) that captures the packets to/from the selected node, but you can customize this.

If necessary, customize this field.

**Note:**

You can select **BPF syntax help** to show more information on [BPF](#) syntax.

**Note:**

You can select **BPF examples** to see some examples.

7. Select **Send trace request**.

Results

The trace has been requested.

Manage learning for a node

The **Nodes** page lets you manage the learning for a selected node.

About this task

The **Manage Learning** dialog lets you learn and delete the entire node and its individual details, such as *IP* or *MAC* address.

**Note:**

The icon adjacent to the node shows its status. When the node details are:

- A green icon shows when the node details have been entirely learned
- An orange icon shows when the node details are only partially learned
- A red icon shows when the node details have not been learned

Individual details have either a green or red icon, depending on whether they are learned or not. When you learn, or delete a node, all of its details are affected in the same way. When you learn, or delete, an individual detail, only that detail's learning status changes.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Nodes**.

Result: The **Nodes** page opens.

3. To the left of the applicable node, select the  icon.

Result: A dialog shows.

4. Optional:

Select an item(s) to delete.

Manage Learning 192.168.68.65

Delete

Learn

Save

Discard

Nodes

192.168.68.65

IP: 192.168.68.65

MAC Address: 84:e3:42:dd:29:5f

Choose from:

- To delete the **IP** address, select the checkbox to the left.
- To delete the **MAC** address, select the checkbox to the left.
- To delete the node, and both the **IP** and **MAC** addresses, select the checkbox to the left.

- Select  **Delete** to delete the selected item(s).

5. Optional: Select an item(s) to learn.

Choose from:

- To learn the **IP** address, select the checkbox to the left.
- To learn the **MAC** address, select the checkbox to the left.
- To learn the node, and both the **IP** and **MAC** addresses, select the checkbox to the left.

- Select  **Learn** to learn the selected item(s).

6. Select **Save**.

Navigate from a node

The **Nodes** page lets you navigate to related entities from a selected node.

Procedure

- In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

- Select **Nodes**.

Result: The **Nodes** page opens.

164

guardian-user v26.5.0 2026-10-01

3. In the Actions column, to the left of the applicable node, select the  icon.

Result: A list of related entities shows.

4. Select the hyperlink that you want to navigate to.

Go to [fe80::14ab:4e17:4c9d:84e9](#) [Node]
Go to [mdns](#) [Protocol]
Go to [fe80::14ab:4e17:4c9d:84e9 / Any / Any](#) [Link]
Go to [Any / fe80::14ab:4e17:4c9d:84e9 / Any](#) [Link]
Go to [fe80::14ab:4e17:4c9d:84e9](#) [Vulnerabilities]
Go to [fe80::14ab:4e17:4c9d:84e9 / Any / Any](#) [Sessions]
Go to [Any / fe80::14ab:4e17:4c9d:84e9 / Any](#) [Sessions]

Results

The entity shows in the applicable page.

Add a node to a Smart Polling plan

The **Nodes** page lets you add a node to an existing Smart Polling plan.

About this task

The Smart Polling icon only shows if Smart Polling is present.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Nodes**.

Result: The **Nodes** page opens.

3. To add a node to a plan with an optionally different configuration from the plan's original one, in the Actions column, to the left of the applicable node, select the  icon.

Result: A dialog shows.

4. From the **Select an existing plan to add the node to** dropdown, select an existing plan to that you would like to add the node to.

Smart polling configuration for **172.18.249.104** ✕

Select an existing plan to add the node to

My WinRM Plan ▼

Data to be collected

15 selected ▼

Specific Vulnerabilities Detection ▼

Username

nozomi

Password

Password

Timeout (seconds)

30

☐ Use SSL

i Fill in the fields for which you want to override the plan's configuration

Poll node immediately ☒

Add **Cancel**

5. **Optional:** In the **Timeout (seconds)** field, enter a value to override the value in the current plan.
6. **Optional:** To poll the node immediately, set the **Poll node immediately** toggle to on.

**Note:**

If you do not set the **Poll node immediately** toggle to on, the node will be polled at the next execution of the selected plan.

Links

The **Links** page shows all the links in your environment.

Network

NodesLinksPhysical linksSessionsTraffic

Page 1 of 431 10762 entries

ExportLive11 selected

Actions	From	To	Proto...	Last activi...	# Alerts	Throughput	Transferred bytes	Transferred packets	TCP retrans. %	Is learned
	772.24.77176	772.16.39.52	https	11:22:24.891	0	0.0 b/s	39.3 MB	154 Kpp	76.4%	true
	10.161.101	10.161.103	http	never	0	0.0 b/s	0.0 B	0 pp	0.0%	true
	10.161.101	10.161.1	http	never	0	0.0 b/s	0.0 B	0 pp	0.0%	true
	10.161.101	10.161.134	modbus	never	0	0.0 b/s	0.0 B	0 pp	0.0%	true
	10.161.214	10.431.203	mms	never	0	0.0 b/s	0.0 B	0 pp	0.0%	true
	10.431.201	10.431.224	mms	never	0	0.0 b/s	0.0 B	0 pp	0.0%	true
	0008x3f7f990g172	10.319.32	other	2025-06-06 21:12	0	0.0 b/s	58.0 B	1 pp	0.0%	true
	772.1717.47	52.96.8.778	https	11:23:12.006	0	0.0 b/s	4.8 MB	35 Kpp	46.7%	true
	772.30.12.86	772.29.6.8	smb	11:26:28.647	0	0.0 b/s	4.0 MB	31 Kpp	31.1%	true
	10.36.0.50	224.0.0.10	other	11:24:41.052	0	0.0 b/s	7.3 MB	98 Kpp	0.0%	true
	772.24.77176	23.54.162.210	http	11:12:47.172	0	0.0 b/s	106.3 MB	180 Kpp	75.1%	true
	772.24.77176	772.16.36.79	smb	11:26:03.783	0	0.0 b/s	37.8 MB	262 Kpp	44.7%	true
	772.24.77176	772.16.51.10	dns	11:12:10.673	0	0.0 b/s	7.5 MB	39 Kpp	0.0%	true
	135.89.151.245	10.34.77.2	snmp	11:26:32.066	0	0.0 b/s	175.0 B	1 pp	0.0%	true
	10.3.3.233	10.5.6.4	snmp	11:26:37.493	0	0.0 b/s	1.8 KB	21 pp	0.0%	true
	772.1795.77	191.101.194.2	tcp443	11:26:28.893	0	0.0 b/s	66.0 B	1 pp	0.0%	true
	10.41.43.187	191.101.194.2	tcp443	11:26:29.417	0	0.0 b/s	66.0 B	1 pp	0.0%	true
	772.18.161.68	772.16.161.90	other	11:26:11.625	0	0.0 b/s	66.0 B	1 pp	0.0%	true
	772.16.711	10.8.18.182	http	11:26:23.984	0	0.0 b/s	58.0 B	1 pp	0.0%	true
	772.16.39.62	772.17.81.27	other	11:26:10.913	0	0.0 b/s	66.0 B	1 pp	0.0%	true
	772.16.37.102	772.17.109.39	other	11:26:22.422	0	0.0 b/s	132.0 B	2 pp	0.0%	true
	772.19.25.29	772.16.36.101	other	11:20:35.098	0	0.0 b/s	18.4 KB	371 pp	0.0%	true
	772.16.36.117	772.22.3.53	http	11:26:17.843	0	0.0 b/s	62.0 B	1 pp	0.0%	true
	772.30.23.172	209.53.113.5	http	11:26:29.658	0	0.0 b/s	132.0 B	2 pp	0.0%	true
	772.16.711	772.21.13.21	dce-rpc	11:26:08.544	0	0.0 b/s	216.0 B	4 pp	0.0%	true

 
2 3 4 5 6 7 ... 431

Figure 56. Links page

Export

The **Export**  icon lets you export the current list in either **CSV** or Microsoft Excel format.

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Link events

Link events are shown in a graphical format.

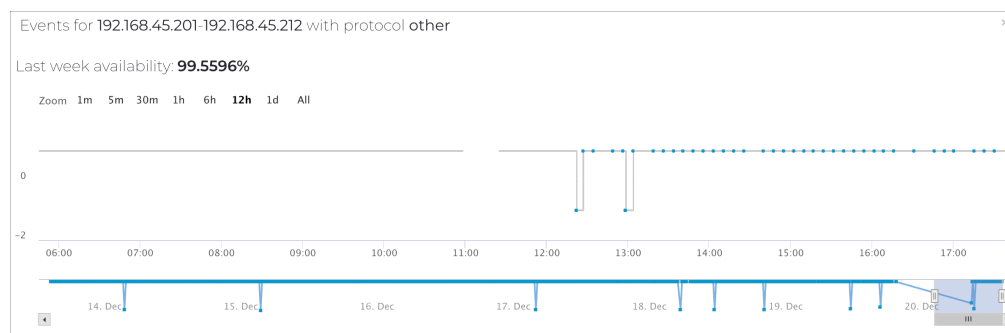


Figure 57. Link events

Availability

Link availability is based on UP and DOWN events.

Time span

You can use the time span control to view only the events in the specified time range. The available options are:

- Zoom
- 1m(inute)
- 5m
- 30m
- 1h(our)
- 6h
- 12h
- 1d(ay)
- All

Graphical history

A point with a value of 1 represents an UP event, a value -1 represents a DOWN event.

Link availability

A history of events is stored for each link.

Two events are of particular interest for computing availability:

- UP - This occurs when an activity is detected on an inactive link
- DOWN - This occurs when an active link stops its activity

Each event has a timestamp to track the precise moment of its occurrence.

Guardian computes the total downtime of a link by taking into consideration the history of events within a finite time window. Then, it sums the time spans of all events starting with a DOWN event and ending with an UP event. All links are considered active by default. Therefore, the availability of the link is 100% minus the percentage of the total downtime.

Track availability

The **Track availability** feature allows an accurate computation of availability. It enables the monitoring of activity on a link at regular intervals, generating extra UP and DOWN events, depending on the detected activity on both sides of the link during the last interval.

We recommend that you select a value greater than the expected link polling time to avoid checks that are too frequent and are likely to produce spurious DOWN events.

link_events generation is disabled by default. To enable it, see the configuration rule shown in **Configuration**.

Configure a link

The **Links** page lets you configure links.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Links**.

Result: The **Links** page opens.

3. To the left of the applicable link, select the configure  icon.

Result: A dialog shows.

4. **Optional:**

To raise an alert when a new **TCP** handshake is detected on the link, select **Is persistent**.

Configure 172.20.10.1-224.0.0.251/mdns 

☐ **Is persistent**

Raise an alert when a new TCP handshake is detected on this link

☐ **Alert on SYN**

Raise an alert when a TCP SYN packet is detected on this link

☐ **Track availability (seconds)**

Notify the link events when the link communication is interrupted or resumed

☐ **Last activity check (seconds)**

Raise an alert when the link become inactive for more than the specified amount of seconds

Save

Cancel

5. **Optional:** To raise an alert when a **TCP** SYN packet is detected on the link, select **Alert on SYN**.
6. **Optional:** To notify the link events when the link communication is interrupted or resumed., select **Track availability (seconds)** and enter a value.

7. **Optional:** To raise an alert when the link becomes inactive for more than the specified number of seconds, select **Last activity check (seconds)** and enter a value.
8. Select **Save**.

Results

The link has been configured.

Show alerts for a link

The **Links** page lets you show alerts for a selected link.

Procedure

1. In the top navigation bar, select  **icon > Network**.
Result: The **Network** page opens.
2. Select **Links**.
Result: The **Links** page opens.
3. To the left of the applicable link, select the  icon.
Result: A list of all the requested traces for the link shows.

Show requested traces for a link

The **Links** page lets you show requested traces for a selected link.

Procedure

1. In the top navigation bar, select  **icon > Network**.
Result: The **Network** page opens.
2. Select **Links**.
Result: The **Links** page opens.
3. To the left of the applicable link, select the  icon.
Result: A list of all the requested traces for the link shows.

Request a trace for a link

The **Links** page lets you request a trace for a selected link.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Links**.

Result: The **Links** page opens.

3. To the left of the applicable link, select the  icon.

Result: A dialog shows.

4. To set the maximum packet size, in the **Trace max size (packets)** field, enter a value.

Request a trace 

Trace max size (packets)

Trace max duration (seconds)

Packet filter

[BPF syntax help](#) [BPF examples](#) 

**Note:**

The default size is 5000 packets.

5. To set the maximum duration of the trace, in the **Trace max duration (seconds)** field, enter a value.

**Note:**

The default value is 60 seconds.

6.

**Note:**

The **Packet filter** field is automatically populated with a **BPF** that captures the packets to/from the selected link, but you can customize this.

If necessary, customize this field.

**Note:**

You can select **BPF syntax help** to show more information on **BPF** syntax.

**Note:**

You can select **BPF examples** to see some examples.

7. Select **Send trace request**.

Results

The trace has been requested.

Show events for a link

The **Links** page lets you show requested traces for a selected link.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Links**.

Result: The **Links** page opens.

3. To the left of the applicable link, select the  icon.

Result: A list of all the events for the link shows.

Show captured URLs for a link

The **Links** page lets you show captured URLs for a selected link.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Links**.

Result: The **Links** page opens.

3. To the left of the applicable link, select the  icon.

Result: A list of all the captured *uniform resource locator (URL)*s from the analyzed traffic for the link shows.

Manage learning for a link

The **Links** page lets you manage the learning for a selected node.

About this task

The **Manage Learning** dialog lets you learn and delete the entire node and its individual details, such as *IP* or *MAC* address.



Note:

The icon adjacent to the node shows its status. When the node details are:

- A green icon shows when the node details have been entirely learned
- An orange icon shows when the node details are only partially learned
- A red icon shows when the node details have not been learned

Individual details have either a green or red icon, depending on whether they are learned or not. When you learn, or delete a node, all of its details are affected in the same way. When you learn, or delete, an individual detail, only that detail's learning status changes.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Links**.

Result: The **Links** page opens.

3. To the left of the applicable node, select the  icon.

Result: A dialog shows.

4. Optional:

If necessary, select one, or more, items and select  **Delete**.

Manage Learning 192.168.68.65 ×

 Delete
  Learn
 Save Discard

☐  Nodes

☐  192.168.68.65

☐  IP: 192.168.68.65
 ☐  MAC Address: 84:e3:42:dd:29:5f

5. **Optional:** If necessary, select one, or more, items and select  **Learn**.

6. Select **Save**.

Navigate from a link

The **Links** page lets you navigate to related entities from a selected node.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Links**.

Result: The **Links** page opens.

3. In the Actions column, to the left of the applicable node, select the  icon.

Result: A list of related entities shows.

4. Select the hyperlink that you want to navigate to.

Go to [fe80::14ab:4e17:4c9d:84e9](#) [Node]
Go to [mdns](#) [Protocol]
Go to [fe80::14ab:4e17:4c9d:84e9 / Any / Any](#) [Link]
Go to [Any / fe80::14ab:4e17:4c9d:84e9 / Any](#) [Link]
Go to [fe80::14ab:4e17:4c9d:84e9](#) [Vulnerabilities]
Go to [fe80::14ab:4e17:4c9d:84e9 / Any / Any](#) [Sessions]
Go to [Any / fe80::14ab:4e17:4c9d:84e9 / Any](#) [Sessions]

Results

The entity shows in the applicable page.

Physical links

The **Physical links** page lets you view all the physical links in your environment and perform actions on them. Smart Polling captures and displays the physical connections between the nodes in the physical graph. For switches, the graph also shows the physical port that maps each connection.

Network

NodesLinksPhysical linksSessionsTraffic

Page 1 of 240 entries

ExportLive8 selected

 
Act...	Node 1	Port 1	Node 2	Port 2	Terminations	First seen	Last seen
						H ↔ H	H ↔ H
4.4.4.2	0	4.4.4.0	4	4.4.4.20-4.4.4.0.4	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
10.16.1114	unknown	10.16.11	203	10.16.1114-unknown-10.16.11.203	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
2.2.2.0	0	111.0	0	2.2.2.0-111.0.0	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
7.7.7.5	0	7.7.7.0	6	7.7.7.5-7.7.7.0.6	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
172.20.65.25	0	111.0	10	172.20.65.25-0-111.0.10	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
10.16.11	204	10.16.1214	unknown	10.16.11.204-10.16.1214-unknown	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
10.43.11	200	10.43.1.201	unknown	10.43.11.200-10.43.1.201-unknown	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
6.6.6.0	2	6.6.6.1	0	6.6.6.0-2-6.6.6.1.0	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
2.2.2.0	3	4.4.4.0	0	2.2.2.0-3-4.4.4.0.0	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
7.7.7.2	0	7.7.7.0	3	7.7.7.2-7.7.7.0.3	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
5.5.5.0	0	4.4.4.0	1	5.5.5.0-0-4.4.4.0.1	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
10.41.252.103	6	10.41.43.53	2	10.41.252.103-6-10.41.43.53.2	2025-06-23 13:38:16.067	2025-06-23 13:38:31.066	
10.43.11	201	10.43.1.202	unknown	10.43.11.201-10.43.1.202-unknown	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
10.30.11	aa	10.16.11	a	10.30.11aa-10.16.11a	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
7.7.7.6	0	7.7.7.0	7	7.7.7.6-7.7.7.0.7	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
10.43.11	204	10.43.1.223	unknown	10.43.11.204-10.43.1.223-unknown	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
4.4.4.1	0	4.4.4.0	3	4.4.4.1-0-4.4.4.0.3	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
10.43.11	202	10.43.1.203	unknown	10.43.11.202-10.43.1.203-unknown	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
7.7.7.0	10	192.168.1.88	0	7.7.7.0-10-192.168.1.88.0	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
7.7.7.0	5	7.7.7.4	0	7.7.7.0-5-7.7.7.4.0	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
5.5.5.0	2	5.5.5.1	0	5.5.5.0-2-5.5.5.1.0	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
6.6.6.0	1	7.7.7.0	1	6.6.6.0-1-7.7.7.0.1	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
2.2.2.0	4	2.2.2.1	0	2.2.2.0-4-2.2.2.1.0	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
10.16.11	202	10.16.1.103	unknown	10.16.11.202-10.16.1.103-unknown	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	
111.0	1	111.1	0	111.0-1-111.1.0	2025-06-30 08:54:14.000	2025-06-30 08:54:14.000	

Figure 58. Physical links page

Export

The **Export**  icon lets you export the current list in either **CSV** or Microsoft Excel format.

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Sessions

A session is established at a certain point in time, and later turned down. An established communication session might involve more than one message in each direction.

Network										
Nodes Links Physical links Sessions Traffic										
Page 1 of 923 23052 entries										
Export Live 13 selected										
Actions	Status	From	To	Protocol	Transport proto...	From por...	To port...	Throughpu...	Transferred byte...	Transferred packet...
	ACTIVE	172.17.39.132	172.16.36.37	other	tcp	49282	445	0.0 b/s	66.0 B	1 pp
	ACTIVE	166.159.61.11	172.16.153.54	http	tcp	80	52940	0.0 b/s	15.0 MB	14 Kpp
	ACTIVE	172.16.45.3	52.22.248.114	https	tcp	52204	443	0.0 b/s	8.8 KB	21 pp
	ACTIVE	172.17.239.111	172.16.51.10	dns	tcp	53950	53	0.0 b/s	330.0 B	5 pp
	ACTIVE	172.16.137.48	40.97.120.242	http	tcp	55750	80	0.0 b/s	372.0 B	6 pp
	ACTIVE	172.16.66.90	172.16.36.30	netbios-ns	udp	137	137	0.0 b/s	110.0 B	1 pp
	ACTIVE	172.16.36.30	172.16.66.90	icmp	icmp			0.0 b/s	404.0 B	3 pp
	ACTIVE	10.36.26.34	10.3.19.32	other	tcp	50206	2000	0.0 b/s	58.0 B	1 pp
	ACTIVE	172.16.8.191	239.1.1.1	vlan	udp	43015	4789	0.0 b/s	853.0 B	1 pp
	ACTIVE	192.168.179.116	184.24.102.94	https	tcp	62090	443	0.0 b/s	3.2 KB	12 pp
	ACTIVE	172.16.40.4	172.30.34.33	other	tcp	53579	50000	0.0 b/s	7.5 KB	15 pp
	ACTIVE	172.16.8.191	239.1.1.1	vlan	udp	44092	4789	0.0 b/s	582.0 B	1 pp
	ACTIVE	172.30.9.58	172.16.44.254	other	udp	4172	4172	0.0 b/s	240.0 KB	2 Kpp
	ACTIVE	172.17.108.177	52.113.194.131	other	tcp	63528	443	116.0 b/s	58.0 B	1 pp
	ACTIVE	172.16.36.90	172.16.56.43	oracle-tns	tcp	62841	1521	0.0 b/s	497.0 B	2 pp
	ACTIVE	172.16.8.191	239.1.1.1	vlan	udp	42745	4789	1.5 kb/s	1.7 KB	7 pp
	ACTIVE	10.64.89.21	10.24.0.34	capwap	udp	64993	5247	0.0 b/s	2.3 KB	11 pp
	ACTIVE	172.16.67.69	172.22.0.82	http	tcp	57513	80	0.0 b/s	3.5 KB	5 pp
	ACTIVE	172.16.8.191	239.1.1.1	vlan	udp	39839	4789	0.0 b/s	365.6 KB	1 Kpp
	ACTIVE	172.16.8.191	239.1.1.1	vlan	udp	45265	4789	0.0 b/s	1.2 KB	3 pp
	ACTIVE	172.17.18.49	40.97.120.194	other	tcp	53776	443	0.0 b/s	54.0 B	1 pp
	ACTIVE	172.16.8.191	239.1.1.1	vlan	udp	51570	4789	0.0 b/s	208.0 B	2 pp
	ACTIVE	172.16.7.11	172.24.1.113	icmp	icmp			0.0 b/s	60.0 B	1 pp
	ACTIVE	10.41.43.197	172.16.134.64	smb	tcp	64770	445	0.0 b/s	55.0 B	1 pp
	ACTIVE	172.16.8.191	239.1.1.1	vlan	udp	36091	4789	0.0 b/s	251.0 B	1 pp

Figure 59. Sessions page

Export

The **Export**  icon lets you export the current list in either **CSV** or Microsoft Excel format.

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Show requested traces for a session

The **Sessions** page lets you show requested traces for a selected node.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Sessions**.

Result: The **Sessions** page opens.

3. To the left of the applicable node, select the  icon.

Result: A list of all the requested traces for the session shows.

Request a trace for a session

*The **Sessions** page lets you request a trace for a selected node.*

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Sessions**.

Result: The **Sessions** page opens.

3. To the left of the applicable node, select the  icon.

Result: A dialog shows.

4. To set the maximum packet size, in the **Trace max size (packets)** field, enter a value.

Request a trace

Trace max size (packets)

5000

Trace max duration (seconds)

60

Packet filter

[BPF syntax help](#) [BPF examples](#)

ip host 192.168.68.65

Send trace request

Cancel

**Note:**

The default size is 5000 packets.

5. To set the maximum duration of the trace, in the **Trace max duration (seconds)** field, enter a value.

**Note:**

The default value is 60 seconds.

6.

**Note:**

The **Packet filter** field is automatically populated with a [BPF](#) that captures the packets to/from the selected node, but you can customize this.

If necessary, customize this field.

**Note:**

You can select **BPF syntax help** to show more information on [BPF](#) syntax.

**Note:**

You can select **BPF examples** to see some examples.

7. Select **Send trace request**.

Results

The trace has been requested.

Navigate from a session

The **Sessions** page lets you navigate to related entities from a selected node.

Procedure

1. In the top navigation bar, select  icon > **Network**.
Result: The **Network** page opens.
2. Select **Sessions**.
Result: The **Sessions** page opens.
3. In the Actions column, to the left of the applicable node, select the  icon.
Result: A list of related entities shows.
4. Select the hyperlink that you want to navigate to.


Go to [fe80::14ab:4e17:4c9d:84e9](#) [Node]
Go to [mdns](#) [Protocol]
Go to [fe80::14ab:4e17:4c9d:84e9 / Any / Any](#) [Link]
Go to [Any / fe80::14ab:4e17:4c9d:84e9 / Any](#) [Link]
Go to [fe80::14ab:4e17:4c9d:84e9](#) [Vulnerabilities]
Go to [fe80::14ab:4e17:4c9d:84e9 / Any / Any](#) [Sessions]
Go to [Any / fe80::14ab:4e17:4c9d:84e9 / Any](#) [Sessions]

Results

The entity shows in the applicable page.

Traffic

The **Traffic** page shows charts with information about throughput, protocols, and open transmission control protocol (TCP) connections.

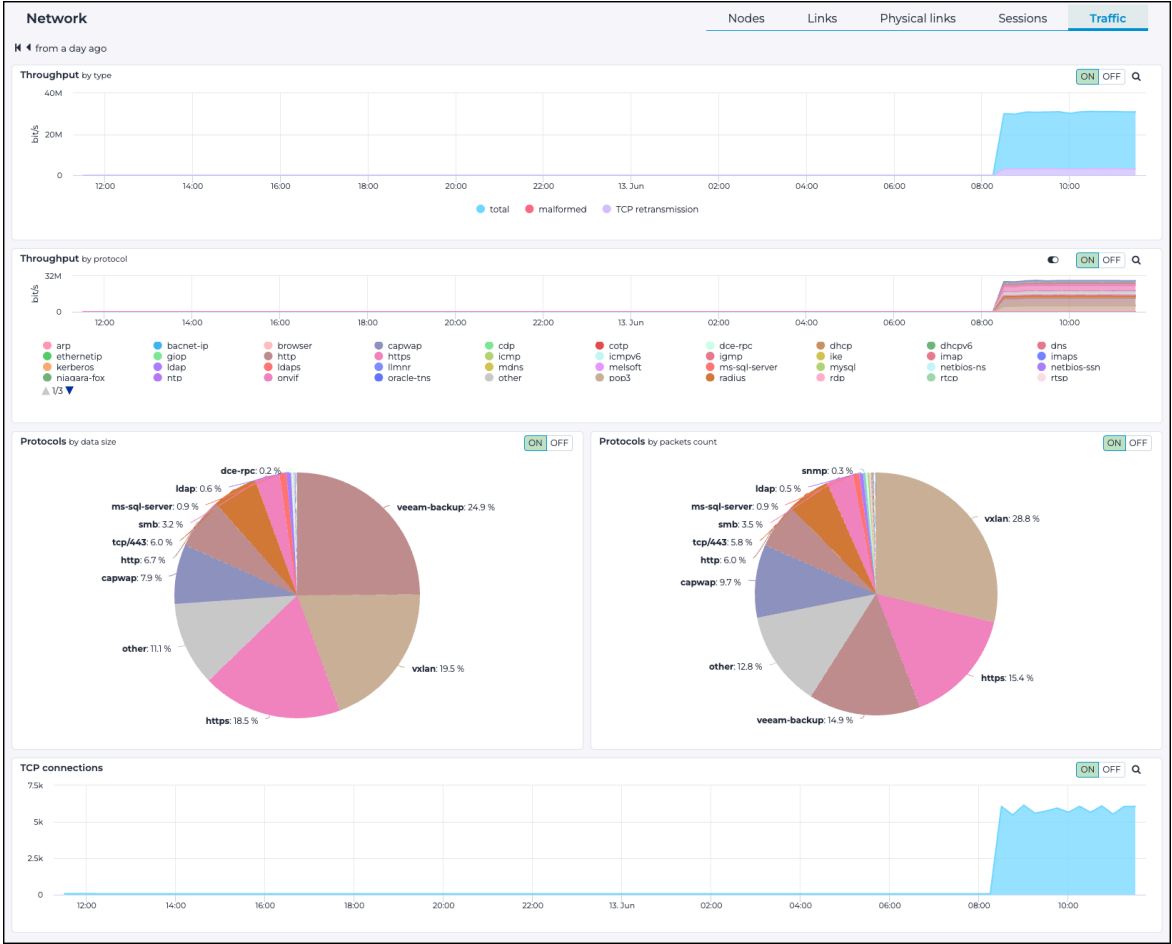

Throughput by type

This section shows traffic by macro category.

Throughput by protocol

This section shows traffic by protocol.

Protocols by data size

This section shows the proportion of packets sent by protocol, in pie chart format.

Protocols by packets count

This section shows the proportion of traffic generated by protocol, in pie chart format.

TCP connections

This section shows the number of open **TCP** connections.

Details page

The details page lets you view more detailed information for a network.

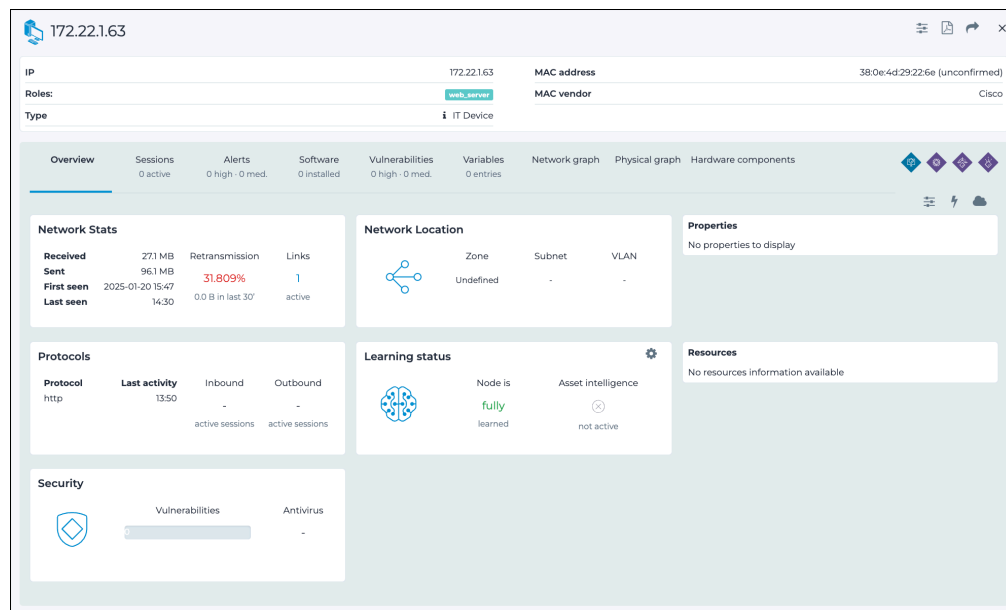


Figure 60. Network details page

This details page shows more details for a network.

The top section of the screen contains generic data. You can hover your mouse over the information **i** icon to display the source, granularity and confidence of the corresponding piece of data. Data includes:

- IP (address)
- Roles
- Vendor
- MAC address
- MAC vendor

The details window has these tabs:

- Overview (on page 76)
- Sessions (on page 77)
- Alerts (on page 78)
- Software (on page 79)
- Vulnerabilities (on page 80)
- Variables (on page 81)
- Network graph (on page 82)
- Physical graph (on page 83)
- Hardware components (on page 84)



Chapter 9. Graph



The **Graph** pages gives a graphical representation of the nodes in the environment.

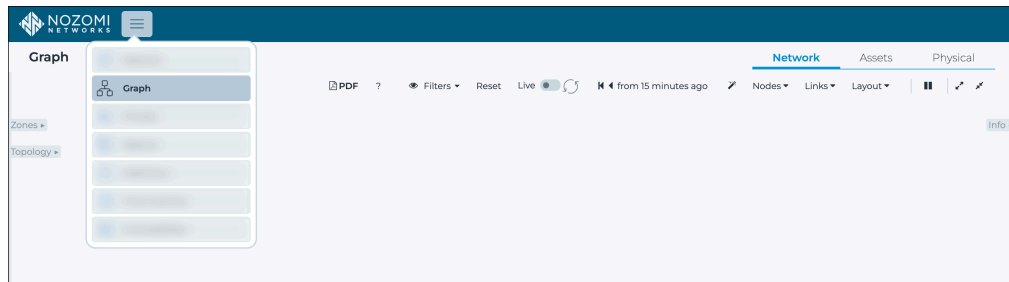


Figure 61. Graph page

The **Graph** page has these tabs:

- [Network \(on page 190\)](#)
- [Assets \(on page 193\)](#)
- [Physical \(on page 197\)](#)

Network

The **Network** page displays a live graph of connected assets, links, and filters in your network. You can apply filters, adjust the layout, and select node and link perspectives. Interactive options let you customize the visualization and export reports.

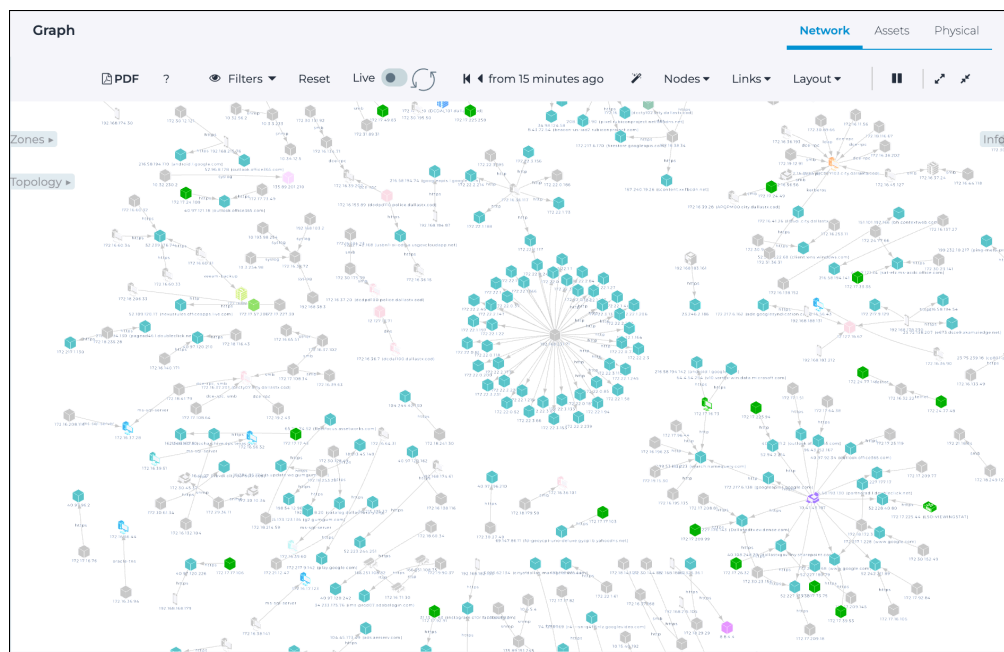


Figure 62. Network page

Generate PDF report

The generate PDF  icon lets you create a [PDF](#) report of the selected item, which will show in the **Reports** page when it is ready.

Filters

This indicates active graph filtering, when present. Filters can be from the filter bar (see R and S below), or activated from the zone/topology graph when you select a link/node in the zone/topology graphs. Once a filter is enabled with a value, the graph is automatically updated. If more than one filter is enabled, then a logical and criteria is applied. Only nodes that satisfy all of the specified filters are shown.



Note:

If a node passes the filters, then all of the directly connected nodes are shown in the graph. For example if a specific [IP](#) filter is used, then the specified node is shown along with all the nodes connected to it.

Reset


This resets customizations and reloads the data.

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Time


These icons let you select an activity time range.

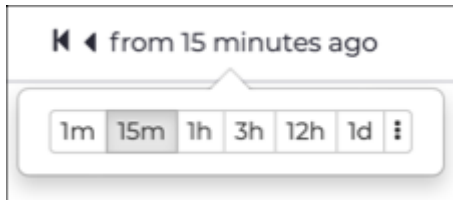


For more details, [Magic wand \(on page 203\)](#).

Nodes

This dropdown lets you select node visualization configuration options.

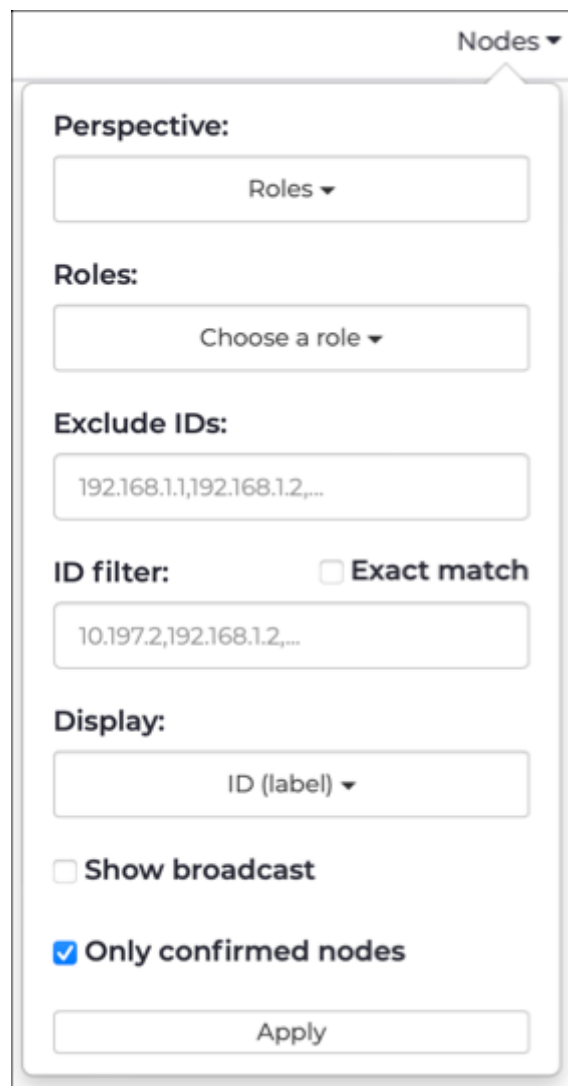A screenshot of a "Nodes" configuration dropdown menu. The menu is titled "Nodes" with a downward arrow. It contains several sections: "Perspective:" with a "Roles" dropdown; "Roles:" with a "Choose a role" dropdown; "Exclude IDs:" with a text input field containing "192.168.1.1,192.168.1.2,..."; "ID filter:" with a text input field containing "10.197.2,192.168.1.2,..." and an "Exact match" checkbox; "Display:" with an "ID (label)" dropdown, a "Show broadcast" checkbox, and a checked "Only confirmed nodes" checkbox; and an "Apply" button at the bottom.

Links

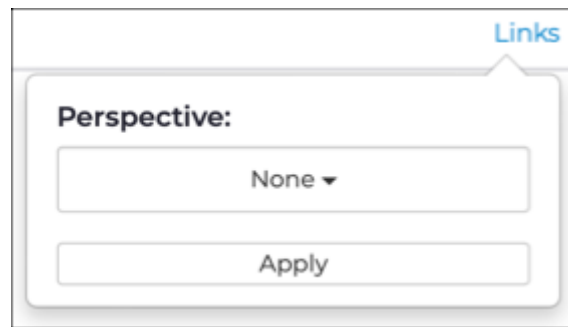

This dropdown lets you configure visualization options.

Layout

This dropdown lets you select a layout for the graph. For more details, see [Layout \(on page 201\)](#).

Play-pause

The play-pause  icon lets you pause, or restart the motion of the graph.

Increase-Decrease icon size

The increase  and decrease  icons lets you change the size of the icons in the graph.

Assets

The **Assets** page shows linked assets as graph vertices when available, and defaults to node display when no asset is associated. This view provides a contextual representation of asset relationships within the network topology.

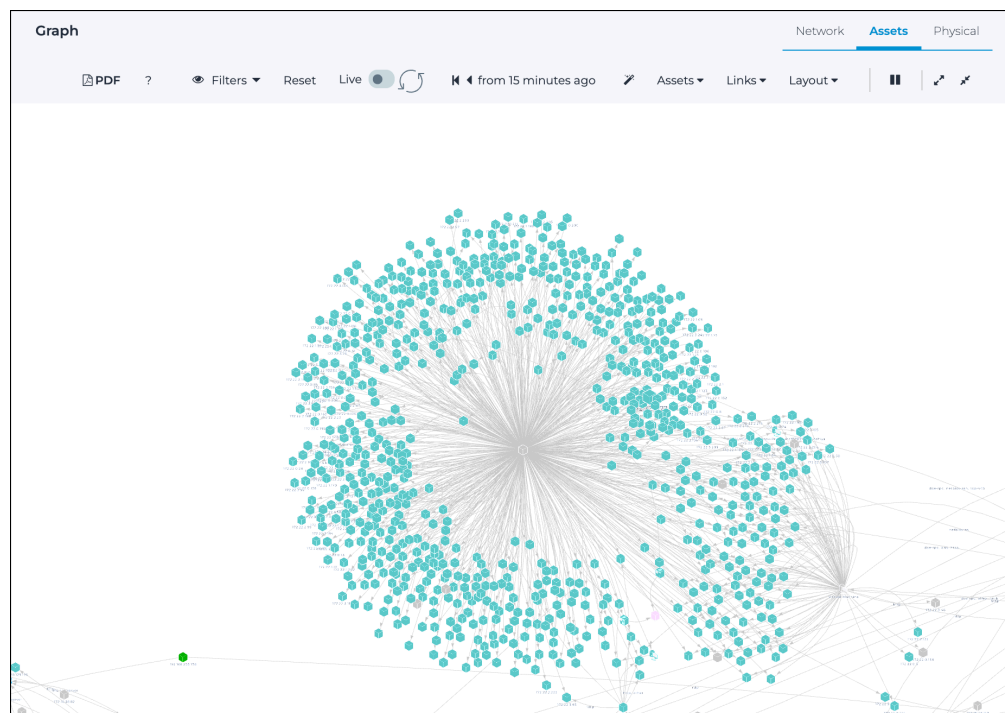


Figure 63. Assets page

Overview

The asset graph groups nodes by asset when possible, unlike the standard network graph. For example, if an asset includes two nodes, the network graph displays two separate icons, one for each node, while the asset graph displays a single icon that represents the asset.

In the case that a node does not belong to an asset then the asset graph shows the node itself.

Generate PDF report

The generate PDF  icon lets you create a [PDF](#) report of the selected item, which will show in the **Reports** page when it is ready.

Filters

This indicates active graph filtering, when present. Filters can be from the filter bar (see R and S below), or activated from the zone/topology graph when you select a link/node in the zone/topology graphs. Once a filter is enabled with a value, the graph is automatically updated. If more than one filter is enabled, then a logical and criteria is applied. Only nodes that satisfy all of the specified filters are shown.

**Note:**

If a node passes the filters, then all of the directly connected nodes are shown in the graph. For example if a specific [IP](#) filter is used, then the specified node is shown along with all the nodes connected to it.

Reset


This resets customizations and reloads the data.

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Time

These icons let you select an activity time range.

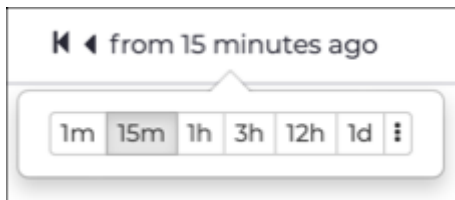

For more details, [Magic wand \(on page 203\)](#).

Nodes

This dropdown lets you select node visualization configuration options.

Nodes ▼

Perspective:

Roles ▼

Roles:

Choose a role ▼

Exclude IDs:

192.168.1.1,192.168.1.2,...

ID filter:

☐ Exact match

10.197.2,192.168.1.2,...

Display:

ID (label) ▼

☐ Show broadcast

☒ Only confirmed nodes

Apply

Links

Links

Perspective:

None ▼

Apply

This dropdown lets you configure visualization options.

Layout

This dropdown lets you select a layout for the graph. For more details, see [Layout \(on page 201\)](#).

Play-pause

The play-pause  icon lets you pause, or restart the motion of the graph.

Increase-Decrease icon size

The increase  and decrease  icons lets you change the size of the icons in the graph.

Physical

The **Physical** page displays a real-time interactive map of all physical device connections in the network. Nodes are shown only if a physical link has been detected for them. The graph, shows how devices connect at the cable level. It is a live, visual way to understand your physical network layout down to the port.



Figure 64. Physical page

Overview

The Physical graph view provides a visual representation of cable-level connections between devices in the network. It uses data collected through Smart Polling and system integrations to display physical links in a dynamic topology graph that reflects actual hardware wiring, including switch port details.

This view supplements logical graphs by showing real-time or historical physical connectivity between assets. Devices are positioned based on link data, with visual indicators that show port assignments and device types. Use the Physical graph to examine network structure, trace physical paths, and identify connectivity changes.

Generate PDF report

The generate PDF  icon lets you create a [PDF](#) report of the selected item, which will show in the **Reports** page when it is ready.

Filters

This indicates active graph filtering, when present. Filters can be from the filter bar (see R and S below), or activated from the zone/topology graph when you select a link/node in the zone/topology graphs. Once a filter is enabled with a value, the graph is automatically updated. If more than one filter is enabled, then a logical and criteria is applied. Only nodes that satisfy all of the specified filters are shown.



Note:

If a node passes the filters, then all of the directly connected nodes are shown in the graph. For example if a specific *IP* filter is used, then the specified node is shown along with all the nodes connected to it.

Reset


This resets customizations and reloads the data.

Live / refresh

The **Live**   icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Time


These icons let you select an activity time range.

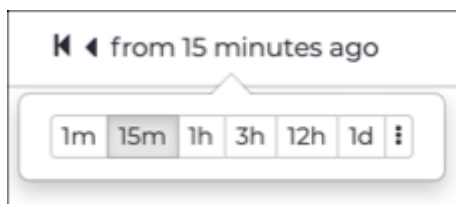

For more details, [Magic wand \(on page 203\)](#).


Nodes

This dropdown lets you select node visualization configuration options.

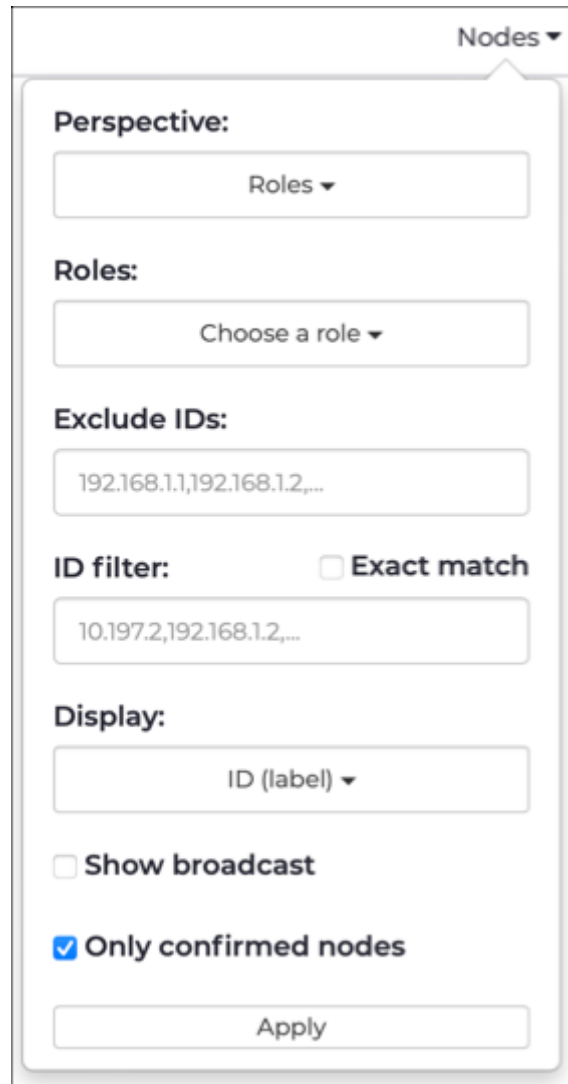

The screenshot shows a configuration panel for 'Nodes' with a title bar 'Nodes' and a dropdown arrow. The panel contains several sections: 'Perspective:' with a 'Roles' dropdown; 'Roles:' with a 'Choose a role' dropdown; 'Exclude IDs:' with a text input containing '192.168.1.1,192.168.1.2,...'; 'ID filter:' with a text input containing '10.197.2,192.168.1.2,...' and an 'Exact match' checkbox; 'Display:' with an 'ID (label)' dropdown, a 'Show broadcast' checkbox, and a checked 'Only confirmed nodes' checkbox; and an 'Apply' button at the bottom.

Links

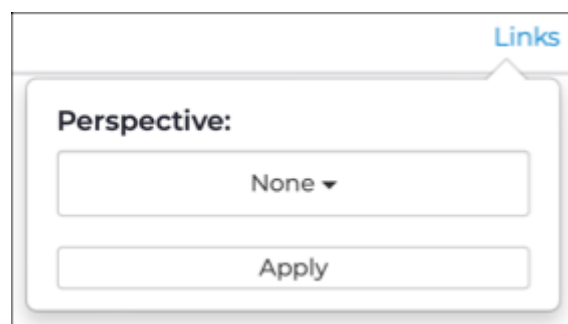

The screenshot shows a configuration panel for 'Links' with a title bar 'Links' and a dropdown arrow. The panel contains two sections: 'Perspective:' with a 'None' dropdown; and an 'Apply' button at the bottom.

This dropdown lets you configure visualization options.

Layout

This dropdown lets you select a layout for the graph. For more details, see [Layout \(on page 201\)](#).

Play-pause

The play-pause  icon lets you pause, or restart the motion of the graph.

Increase-Decrease icon size

The increase  and decrease  icons lets you change the size of the icons in the graph.

Graph controls

A list of the different control options in the graph view.


Move	Click and drag anywhere in the graph other than on a node.
Zoom (mode 1)	With the cursor positioned inside the graph window, scroll the mouse forward or backward. Zoom is centered on the mouse position.
Zoom (mode 2)	With the cursor positioned inside the graph window, press Z on the keyboard and move the mouse up or down. Zoom is centered on the mouse position.
Increase icon and text size.	Select the  icon.
Decrease icon and text size.	Select the  icon.
View detailed information for a node or link in the information pane.	Select a node or link with a single click
Show a new window with additional information for a node	Select a node with a double click
Show a node or link	Move your mouse over the node or link
Show a node or link, and the elements directly connected to it	Click and hold your mouse button on a node or link without releasing it

Layout

The **Layout** dropdown lets you select a layout for the graph.

The options are:

- [Standard \(on page 202\)](#)
- [Purdue model \(on page 202\)](#)
- [Grouped \(on page 202\)](#)
- [Clustered \(on page 203\)](#)

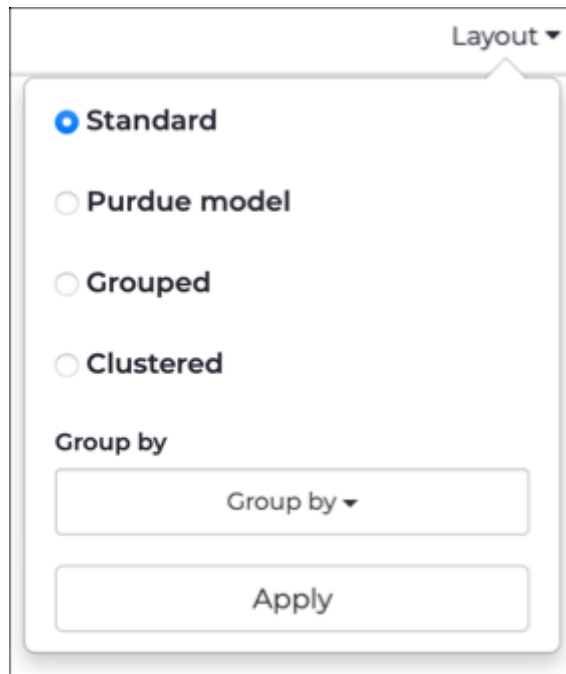

Standard

This is the default layout. The type of visualization depends on the criteria defined in [Group by \(on page 203\)](#):

- [Group by \(on page 203\)](#) not defined: All of the nodes and links are shown
- [Group by \(on page 203\)](#) defined: Nodes that belong to the same group (based on the defined criteria) are collapsed into a single node

Purdue model

Nodes are arranged in separate rows, according to their level. You can distinguish the levels and isolate potential communication problems that cross two or more levels.

Grouped

Nodes are grouped according to the criteria defined in [Group_by](#). The graph is visualized as follows:

- [Group by \(on page 203\)](#) not defined: All nodes and links are shown.
- [Group by \(on page 203\)](#) defined: Nodes that belong to the same group are shown and are placed inside a circle that represents the group. Links between nodes within the same group are shown. However, links between groups are replaced with lines that connect the circles

Clustered

Nodes are clustered according to the criteria below. Once nodes are clustered, a single circle represents the node cluster. Upon zoom-in, the circle expands and the internal nodes display. A cluster may contain multiple subclusters. This layout is useful when visualizing large graphs because it provides an overview of the graph, along with sufficient details.

Nodes are clustered depending on the values defined by Group_by:

- [Group by \(on page 203\)](#) not defined: Nodes are clustered based on connections. Nodes with a large number of links act as a cluster center with neighboring nodes assigned to the same cluster
- [Group by \(on page 203\)](#) defined: At the highest level, a cluster is created for each group. Inside each high level cluster are subclusters created around nodes with a high number of links. For example, if Group_by=Zones, then a cluster is created for each zone, and inside each zone other subclusters may be created around nodes with a high number of links

Group by

This dropdown lets you define the group used for Standard, Grouped, and Clustered layouts. Nodes with the chosen property, such as zone or subnet, are assigned to the same group. The group displays depending on the selected layout.

The **Group by** dropdown lets you select from:

- Asset
- Cluster
- Level
- Roles
- Subnet
- Type
- Zone
- Site
- Host

Magic wand

The magic wand icon opens a wizard to help filter the graph and view only the desired information to help you reduce visualized data from large graphs.

The graph wizard gives hints to help you improve the graph performance. Settings that are annotated with an orange exclamation point are considered suboptimal. Settings annotated with green thumbs are considered helpful.

Graph filters to go faster

! Use Google Chrome/Chromium for better performance

 ☐ **Show broadcast**
Hide broadcast nodes to display a simpler graph

! ☐ **Only with confirmed data**
Show only links with confirmed data to display a simpler graph

 ☒ **Only confirmed nodes**
Show only confirmed nodes to display a simpler graph

! ☐ **Exclude tangled nodes**
Tangled nodes will be excluded from graph, they can be reincluded by removing their IDs from the nodes options

! **Protocols**

Choose a protocol ▼

OK

Figure 65. Magic wand dialog

Show broadcast

Broadcast addresses are not actual network nodes in that no asset is bound to a broadcast address. They are used to represent communications that a node uses towards an entire subnet. Removing broadcast nodes reduces the complexity of a graph.

Only with confirmed data

You can select this to hide unconfirmed links to reduce the complexity of an entangled graph.

Only confirmed nodes

You can select this to hide unconfirmed nodes to reduce the size of a large graph.

Exclude tangled nodes

To improve the readability of the graph, you can select this to exclude nodes whose connections cause the graph to be too complex.

Protocols

This dropdown lets you filter nodes and edges to show only those items that are communicating with the related protocol(s).

Chapter 10. Process



Process is a set of repeatable functions that a business does to deliver a core value.

Process includes:

- Repeatable tasks
- Data collection
- Resource control in accordance with business policies

Variables model communication between operational devices as they participate in the industrial process.

Individual values within operational devices are represented as variables, and Guardian tracks them over time in **Process**.

The **Process** page has these tabs:

- [List \(on page 208\)](#)
- [Protocol connections \(on page 209\)](#)
- [Settings \(on page 210\)](#)

List

The **List** page shows detailed information about variables in your environment.

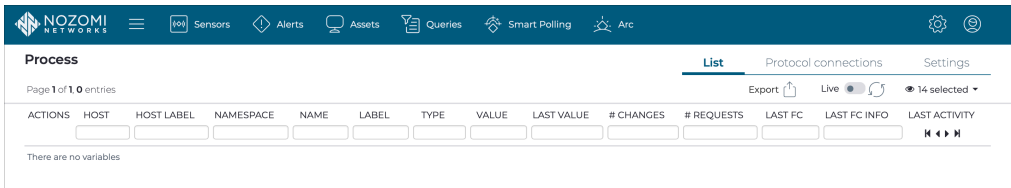


Figure 66. List page

Export

The **Export**  icon lets you export the current list in either [CSV](#) or Microsoft Excel format.

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Protocol connections

The **Protocol connections** page lets you configure the additional parameters necessary to extract information contained inside certain protocols.

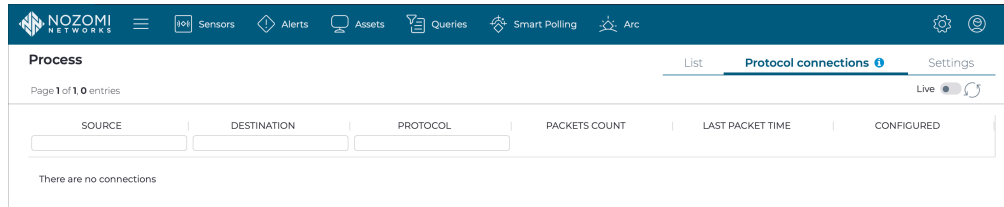


Figure 67. Protocol connections page

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Settings

The **Settings** page lets you configure which strategy to use to extract variables inside the process that are being communicated over different protocols.

Global variables extraction

☐ Disabled

Global variable extraction is disabled. Variables that are already present won't be persisted and will be discarded upon reboots. It prevails over protocol specific settings.

☒ Enabled

Global variable extraction is enabled. Protocol specific settings prevail.

☐ Advanced

Try to extract more variables by applying heuristic techniques to some protocols. Protocol specific settings prevail.

Limit the extraction to the selected zones

Select the zones ▼

Save

Protocol specific variables extraction

Page 1 of 1, 0 entries

Live

ACTIONS ...	PROTOCOL	VARIABLES CO...	LEVEL	ZONES

There is no protocol with at least one variable

Figure 68. Process variable extraction tuning

Disabled

This checkbox lets you disable global variables extraction.

Enabled

This checkbox lets you enable global variables extraction.

Advanced

This checkbox lets you try to apply heuristic techniques to some protocols to extract more variables. Protocol specific settings prevail.

Limit the extraction to the selected zones

This dropdown lets you Limit the extraction to the selected zones.

210

guardian-user v26.5.0 2026-10-01

Configure a variable

The **List** page lets you navigate to related nodes, links, vulnerabilities, or sessions.

Procedure

1. In the top navigation bar, select  icon > **Process**.

Result: The **Process** page opens.

2. Select **List**.

Result: The **List** page opens.

3. To the left of the applicable *variable*, select the configure  icon.

Result: A dialog shows.

4. In the **Label** field, enter a label for the *Variable*.

Configure 192.168.45.159/0/ptp_time ×

Label

☐ **Enable history**
Permits to enable history for this variable.

☐ **Last activity check**

Raise an alert when the variable is not updated for more than the specified amount of seconds

☐ **Invalid quality check**

Raise an alert when the variable keeps the invalid quality for more than the specified amount of seconds

☐ **Disallowed qualities check**

Raise an alert when the variable has one of the specified qualities. Possible values are: invalid, not topical, blocked, substituted, overflow, reserved, questionable, out of range, bad reference, oscillatory, failure, inconsistent, inaccurate, test, alarm. Multiple values can be separated by comma.

Unit

The unit of measurement of the variable value

Scale

A constant value multiplied to the variable value

Offset

A constant value added to the variable value

5. **Optional:** If necessary, select the **Enable history**.

**Note:**

This lets you enable [Variable](#) history.

6. **Optional:** If necessary, select the **Last activity check**.

**Note:**

This triggers an alert when the [Variable](#) is not updated for more than the specified amount of seconds.

7. **Optional:** If necessary, select the **Invalid quality check**.

**Note:**

This triggers an alert when the [Variable](#) keeps the invalid quality for more than the specified amount of seconds.

8. **Optional:** If necessary, select the **Disallowed qualities check**.

**Note:**

This triggers an alert when the [Variable](#) has one of the listed qualities. You can use a comma to separate values.

9. In the **Unit** field, enter a value.
10. In the **Scale** field, enter a value.
11. In the **Offset** field, enter a value.

Results


The [Variable](#) has been configured.

View the details of a variable

The **List** page lets you view the details of a variable.

Procedure

- 1. In the top navigation bar, select  icon > **Process**.
Result: The **Process** page opens.
- 2. Select **List**.
Result: The **List** page opens.
- 3. To the left of the applicable **Variable**, select the search  icon.
Result: The Variables details window opens.
- 4. **Optional:**
To open the chart in another window, select the  icon.

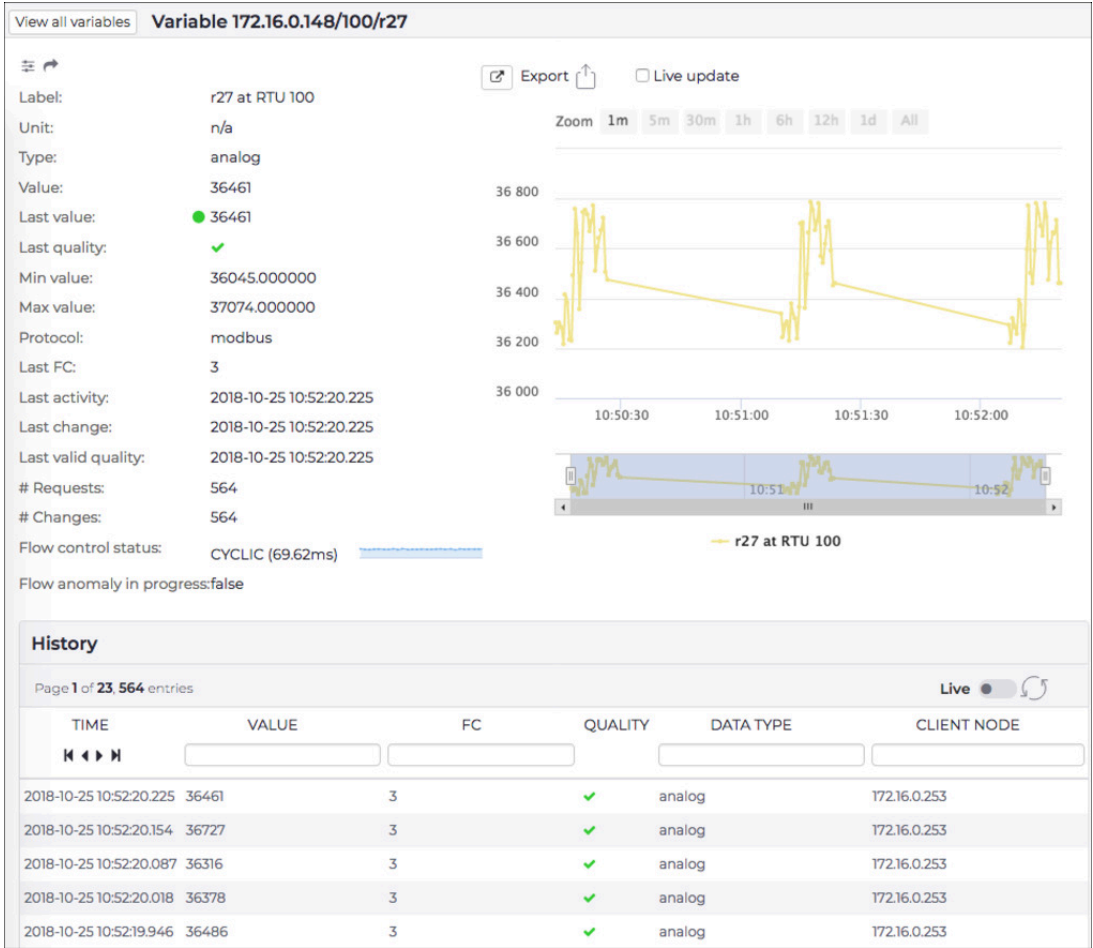

5. **Optional:** To export the results, select **Export** 
6. **Optional:** To update the chart to real-time, select **Live update**.

Favorite a variable

The **List** page lets you add a [Variable](#) to the favorite variables.

Procedure

1. In the top navigation bar, select  icon > **Process**.

Result: The **Process** page opens.

2. Select **List**.

Result: The **List** page opens.

3. To the left of the applicable [Variable](#), select the search  icon.

Result: The [Variable](#) is added to the Favorite variables list.

Navigate from a variable

The **List** page lets you navigate to related nodes, links, vulnerabilities, or sessions.

Procedure

1. In the top navigation bar, select  icon > **Process**.

Result: The **Process** page opens.

2. Select **List**.

Result: The **List** page opens.

3. To the left of the applicable variable, select the navigate  icon.

Result: A dialog shows.

4. Select the desired link.

Go to **192.168.45.159** [host Node]

Go to **ptpv2-ip** [Protocol]

Go to **192.168.45.159 / Any / ptpv2-ip** [Link]

Go to **Any / 192.168.45.159 / ptpv2-ip** [Link]

Go to **192.168.45.159** [Vulnerabilities]

Go to **192.168.45.159 / Any / ptpv2-ip** [Sessions]

Go to **Any / 192.168.45.159 / ptpv2-ip** [Sessions]



Chapter 11. Reports



The **Reports** page lets you manage, generate, schedule and view reports.

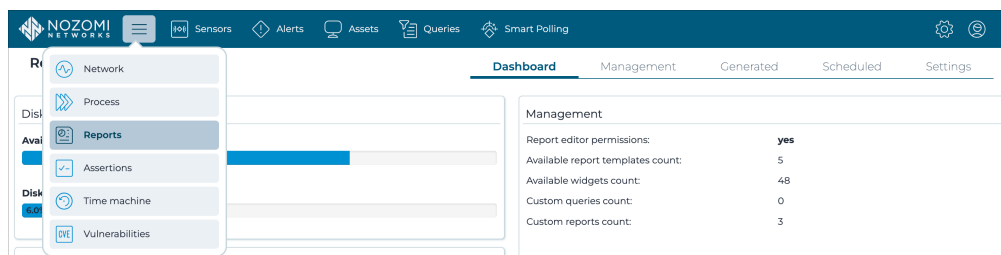


Figure 69. Reports page

The **Reports** page has these tabs:

- [Dashboard](#) (on page 222)
- [Management](#) (on page 223)
- [Generated](#) (on page 226)
- [Scheduled](#) (on page 227)
- [Settings](#) (on page 228)

Dashboard

The Dashboard page shows an overview of information related to reports, which includes disk availability, report settings, generated reports, report management, and scheduled reports.

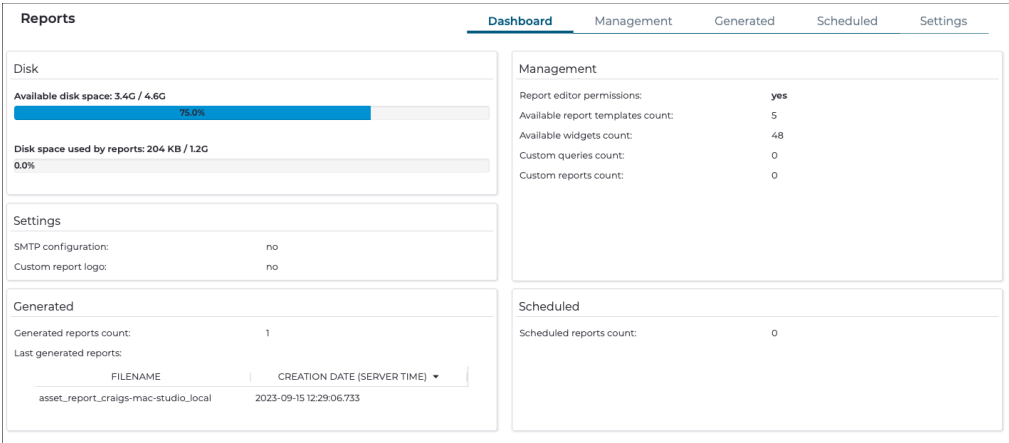


Figure 70. Dashboard page

Disk

This section shows:

- Available disk space
- Disk space used by reports

Management

This section shows a summary of information from the [Management \(on page 223\)](#) page.

Settings

This section shows a summary of information from the [Settings \(on page 228\)](#) page.

Generated

This section shows a summary of information from the [Generated \(on page 226\)](#) page.

Scheduled

This section shows a summary of information from the [Scheduled \(on page 227\)](#) page.

Management

The **Management** page lets you manage all your reports.

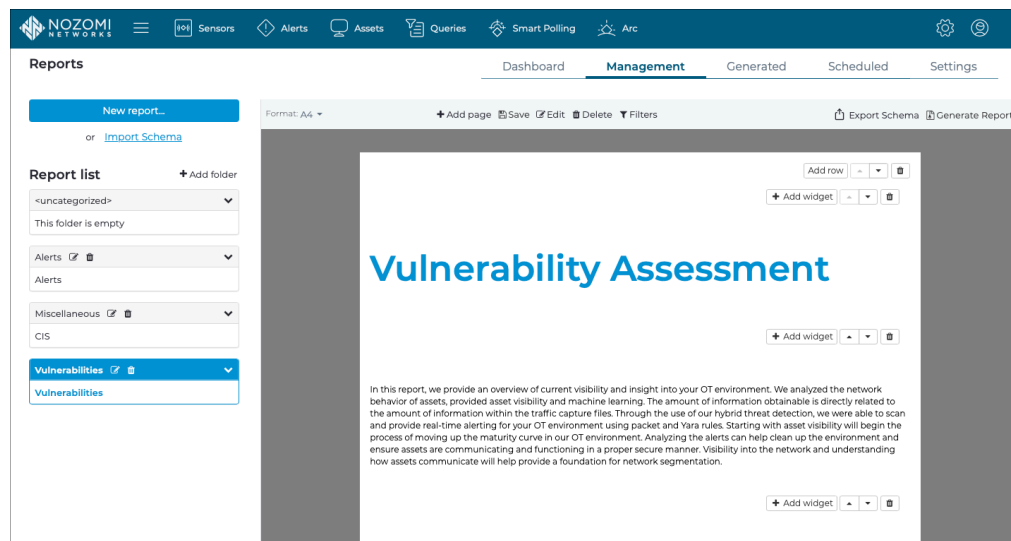


Figure 71. Management page

New report

This button lets you [Create a report \(on page 229\)](#).

Import schema

This button lets you [Import a schema \(on page 236\)](#).

Report list

This section shows a list of created and saved reports. You can [add folders \(on page 234\)](#) to group the reports in.

Add page

This button lets you add a page to the bottom of the current report.

Save

This button lets you save the changes to the current report.

Edit

This button lets you edit the current report.

Delete

This button lets you delete the current report.

Filters

This button lets you filter the contents of the current report.

Edit filters for report 'Alerts'

Filter on assets

where device_id = yyy

Filter on alerts

where id = 1

Filter on nodes

where ip = 192.168.1.12

Filter on node_cpes

where node_id = 1.1.1.2

Filter on links

where protocol = smb

Filter on node_cves

where node_id = 192.168.1.12

Filter on captured_urls

where url = www.youtube.com

Filter on captured_logs

where id_src = 192.168.1.12

These filters will not work on the widgets: CISControl_7, CISControl_12, Vulnerability scoring overview, Evidences, Vendors, Vulnerability key findings

Ok

Cancel

Figure 72. Filter dialog

Export schema

This button lets you [export a schema \(on page 237\)](#) for the current report in *JavaScript Object Notation (JSON)* format.

Generate report

The generate report  icon lets you [generate a report \(on page 231\)](#) in one of these formats:

- [PDF](#)
- [CSV](#)
- Microsoft Excel

Generated

The **Generated** page lets you view, download, edit, and delete generated reports.

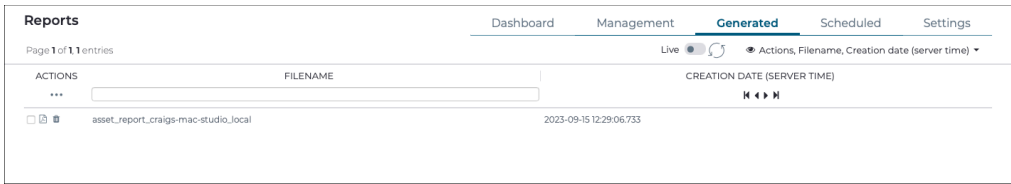


Figure 73. Generated page

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Scheduled

The **Scheduled** page lets you view, download, edit, and delete scheduled reports.

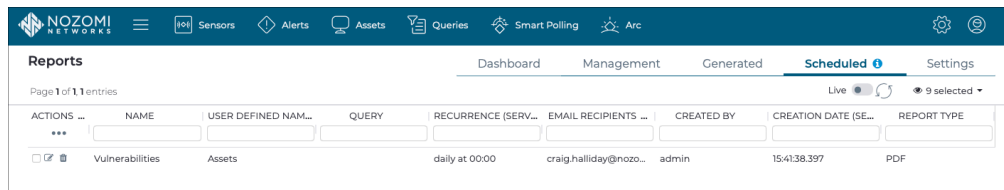


Figure 74. Scheduled page

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection  icon lets you choose which columns to show or hide.

Settings

The **Settings** page lets you change report settings, upload custom logos, and configure simple mail transfer protocol (SMTP) settings.

Reports Dashboard Management Generated Scheduled **Settings**

Custom logo

Report custom logo not yet uploaded.

Drop an image here or click to upload

Supported formats: JPG, PNG and GIF. Logo ideal sizes: 360x90 or bigger. Logo ideal ratio: 4:1 or similar

SMTP Server

☐ An SMTP server is required to send scheduled reports by email at each recurrence (if the 'Email recipients' field is set)

ON | OFF

To URI

HOST[:PORT]/[ID]

Sender

☐ STARTTLS

Authentication Mechanism:

Username

Password

Save

Figure 75. Settings page

Custom logo

This section lets you [upload a custom logo \(on page 238\)](#) that will show in your reports.

SMTP server

If you want to send emails that contain scheduled reports, you need to [configure \(on page 240\)](#) the *simple mail transfer protocol (SMTP)* server settings.

Create a report

The **Management** page lets you create a new report.

Procedure

1. In the top navigation bar, select  icon > **Reports**.


Result: The **Reports** page opens.

2. Select **Management**.

3. In the section on the left, select **New report**.

Result: A dialog shows.

4. In the **Name** field, enter a name for the report.

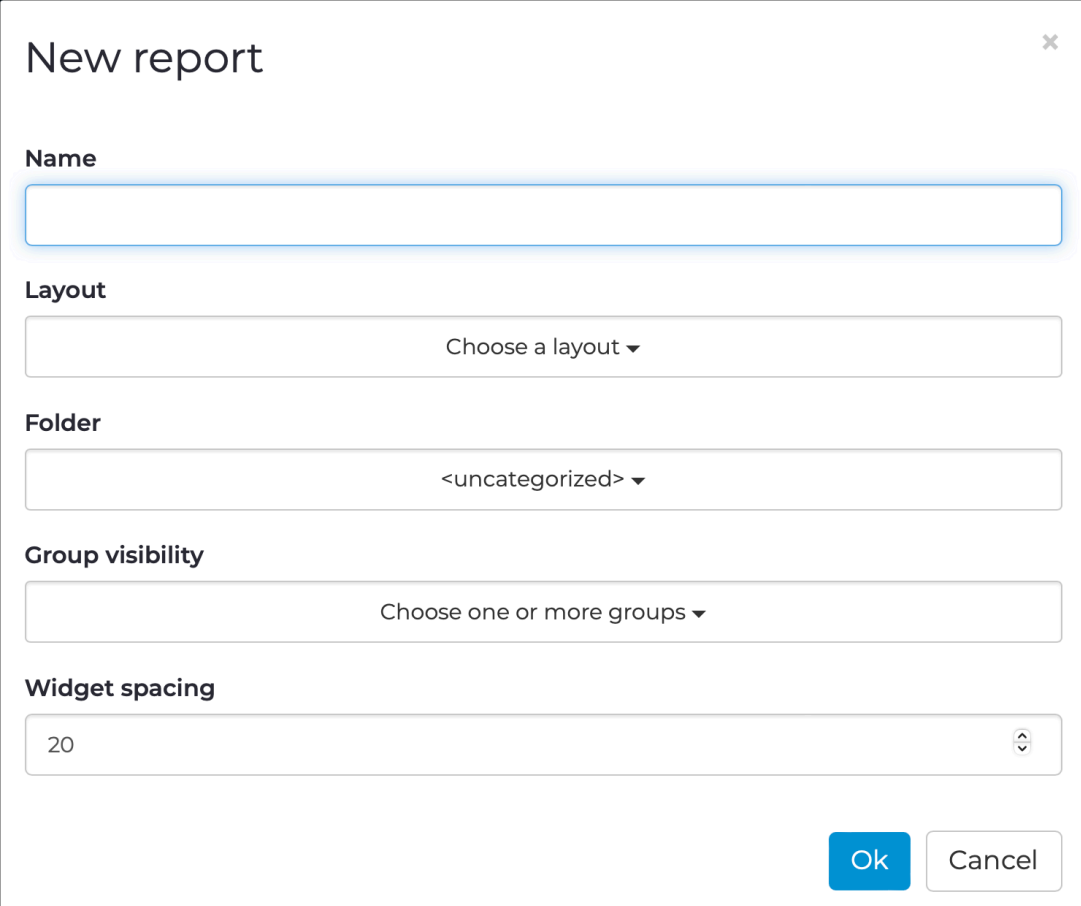

The dialog box is titled "New report" and has a close button (X) in the top right corner. It contains five sections, each with a label and a corresponding input field or dropdown menu:

- Name:** A text input field with a blue border.
- Layout:** A dropdown menu with the text "Choose a layout ▼".
- Folder:** A dropdown menu with the text "<uncategorized> ▼".
- Group visibility:** A dropdown menu with the text "Choose one or more groups ▼".
- Widget spacing:** A text input field containing the number "20" and a spinner control on the right.

At the bottom right of the dialog are two buttons: "Ok" (blue) and "Cancel" (white with a grey border).

5. From the **Layout** dropdown, select a layout for the report.
6. From the **Folder** dropdown, select a folder for the report.
7. From the **Group visibility** dropdown, select the group(s) that will be able to view the report.

8. From the **Widget spacing** dropdown, enter a value.
9. Select **Ok**.

Results

The report has been created.

Generate a report

You can generate both scheduled, or on-demand, reports, in multiple file formats.

Procedure

1. In the top navigation bar, select  icon > **Reports**.

Result: The **Reports** page opens.


2. Select **Management**.
3. In the section on the left, select the report that you want to generate.
4. In the top right, select **Generate Report**.

Result: A dialog shows.

5. In the **Report type** section, choose a format for the report:

Choose from:

- [PDF](#)
- [CSV](#)
- Excel

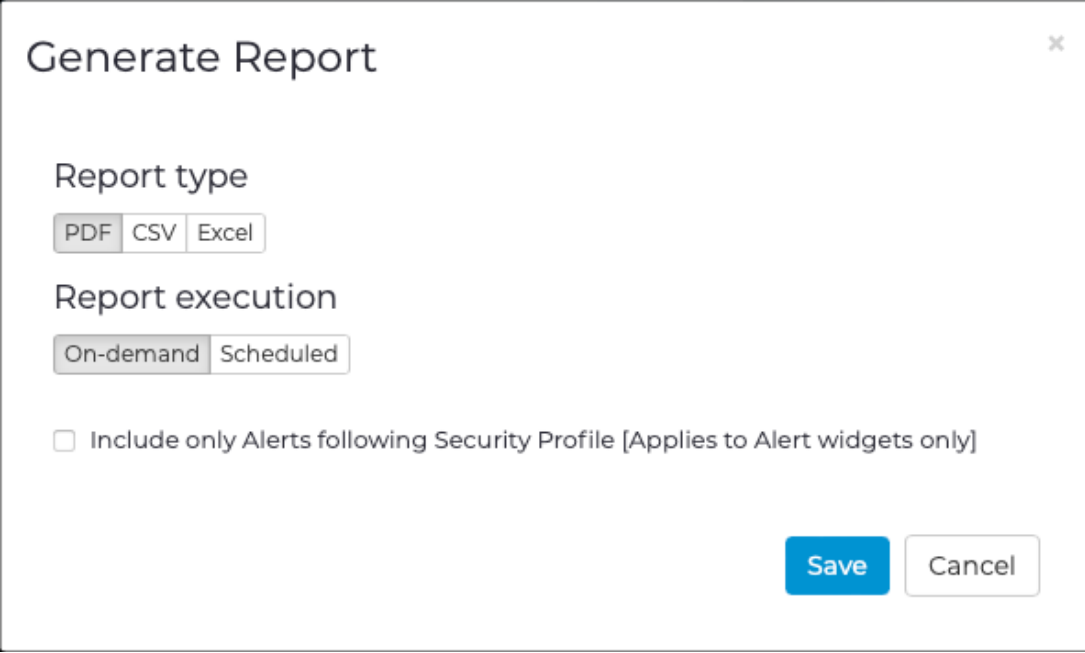

The dialog box is titled "Generate Report" with a close button (X) in the top right corner. It contains two sections: "Report type" and "Report execution". The "Report type" section has three buttons: "PDF", "CSV", and "Excel". The "Report execution" section has two buttons: "On-demand" and "Scheduled". Below these sections is a checkbox labeled "Include only Alerts following Security Profile [Applies to Alert widgets only]". At the bottom right are "Save" and "Cancel" buttons.

6. In the **Report execution** section, choose the type of execution:

Choose from:

- On-demand
- Scheduled

7. If you chose **On-demand**, select **Save**.

Result: The report starts to generate. When the generation is complete, the report will show in the [Generated \(on page 226\)](#) page.

8. If you chose **Scheduled**, do the steps below.

a. In the **Recurrence (server time)** section, enter the settings that you want.

Generate Report

Report type

PDF CSV Excel

Report execution

On-demand Scheduled

Schedule report creation

Recurrence (server time)

Daily Weekly Monthly

Hours 0 Minutes 0

ⓘ

 Schedule occurrences will be relative to server time (current server time: 13:40:14.751 [-2 hours])

User defined name

Email recipients (comma separated)

☐ Include only Alerts following Security Profile [Applies to Alert widgets only]

Save

Cancel

b. **Optional:** In the **User defined name** field, enter a name for the report.

c. **Optional:** In the **Email recipients (comma separated)** field, enter the email addresses of the people that you would like to receive the reports.

d. **Optional:** If necessary, select the **Include only Alerts following Security Profile [Applies to widgets only]** checkbox.

Results

The report has been generated, or scheduled, as applicable.

Download a report

The **Generated** page lets you download reports.

Procedure

1. In the top navigation bar, select  icon > **Reports**.
Result: The **Reports** page opens.
2. Select **Generated**.
3. To the left of the applicable report, select the download  icon.
Result: The download starts.

Results

The report has been downloaded to your downloads folder.

Delete a report

The **Generated** page lets you delete generated reports.

Procedure

1. In the top navigation bar, select  icon > **Reports**.
Result: The **Reports** page opens.
2. Select **Generated**.
3. To the left of the applicable report, select the download  icon.

Results

The report has been deleted.

Add a folder

The **Management** page lets you add folders for you to organize your reports.

Procedure

1. In the top navigation bar, select  icon > **Reports**.


Result: The **Reports** page opens.

2. Select **Management**.

3. In the **Reports list** section on the left, select **Add folder**.

Result: A dialog shows.

4. In the **Name** field, enter a name for the folder.

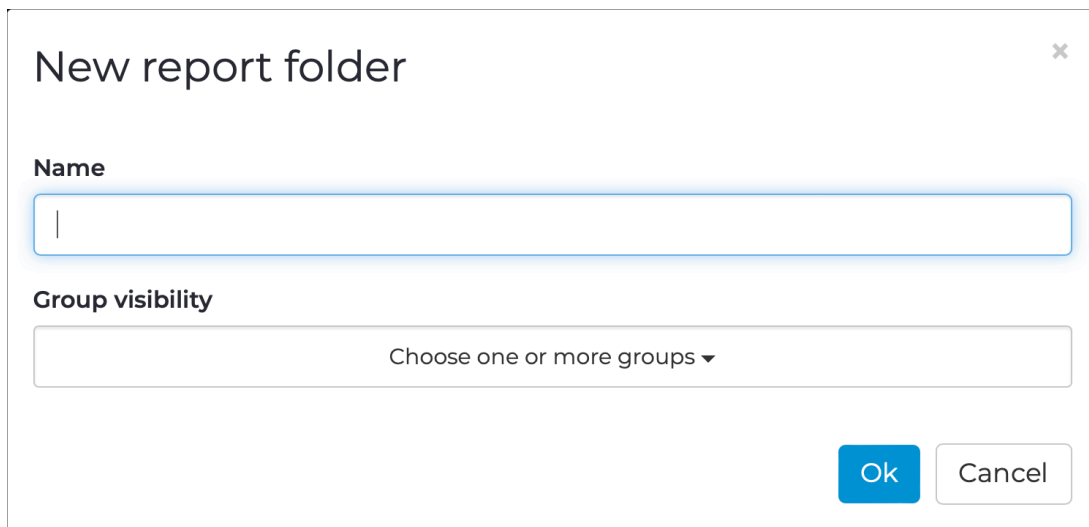

The dialog box is titled "New report folder" and has a close button (X) in the top right corner. It contains two main sections: "Name" and "Group visibility". The "Name" section has a text input field with a vertical cursor. The "Group visibility" section has a dropdown menu with the text "Choose one or more groups" and a downward arrow. At the bottom right, there are two buttons: "Ok" (blue) and "Cancel" (white with a grey border).

5. From the **Group visibility** dropdown, select the group(s) that will be able to view the reports.
6. Select **Ok**.

Results

The folder has been added.

Edit a folder

The **Management** page lets you delete reports.

Procedure

1. In the top navigation bar, select  icon > **Reports**.

Result: The **Reports** page opens.


2. Select **Management**.

3. In the section on the left, to the right of the applicable folder's name, select the download  icon.

Result: A dialog shows.

4. **Optional:**

If necessary, in the **Name** field, edit the name of the folder.

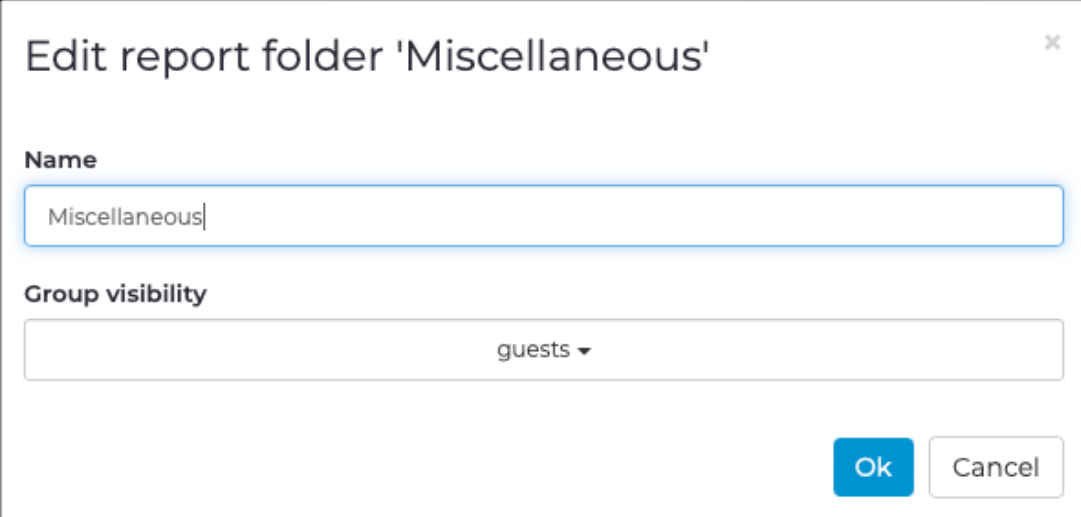

The screenshot shows a dialog box titled "Edit report folder 'Miscellaneous'". It has a close button (X) in the top right corner. Inside the dialog, there are two sections: "Name" and "Group visibility". The "Name" section has a text input field containing the word "Miscellaneous". The "Group visibility" section has a dropdown menu currently showing "guests". At the bottom right of the dialog are two buttons: "Ok" (in blue) and "Cancel" (in white with a grey border).

5. **Optional:** If necessary, in the **Group visibility** field, edit the visibility of the folder.
6. Select **Ok**.

Results

The report has been edited.

Delete a folder

The **Management** page lets you delete reports.

Procedure

1. In the top navigation bar, select  icon > **Reports**.
Result: The **Reports** page opens.
2. Select **Management**.
3. In the section on the left, to the right of the applicable folder's name, select the download  icon.

Results

The report has been deleted.

Import a schema

The **Management** page lets you import a schema that has previously been exported.

Procedure

1. In the top navigation bar, select  icon > **Reports**.
Result: The **Reports** page opens.
2. Select **Management**.
3. In the section on the left, select **Import Schema**.
4. Select the schema to import.

Results

The schema has been imported.

Export a schema

The **Management** page lets you export a schema.

Procedure


1. In the top navigation bar, select  icon > **Reports**.

Result: The **Reports** page opens.

2. Select **Management**.
3. In the top right, select **Export Schema**.

Result: A dialog shows.

4. In the **Export file name** field, enter a name for the schema.

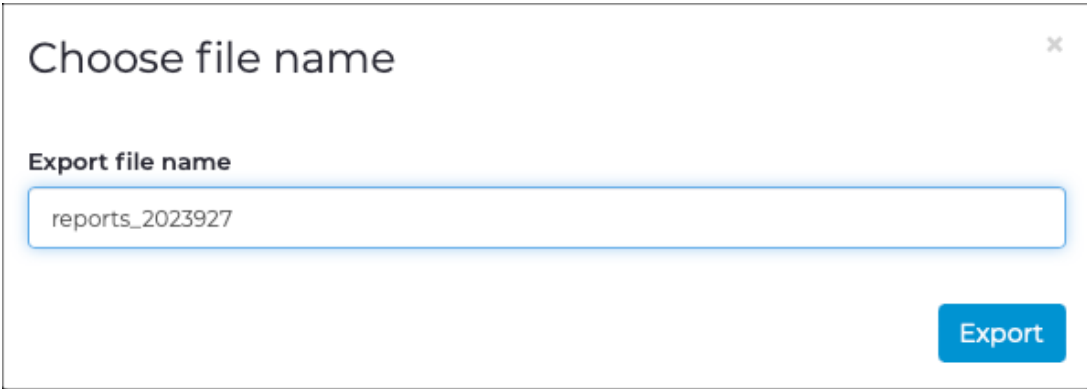

Choose file name ×

Export file name

reports_2023927

Export

5. Select **Export**.

Results

The schema has been exported in **JSON** format.

Upload a custom logo

You can add a custom logo that will show in your reports.

Procedure

1. In the top navigation bar, select  icon > **Reports**.

Result: The **Reports** page opens.

2. Select **Settings**.

Result: The [Settings \(on page 228\)](#) page opens.

3. Choose a method to upload a custom logo:

Choose from:

- Drag your image file into the **Drop an image here or click to upload** field
- Click in the **Drop an image here or click to upload** field

4. If you chose the second method, select the correct file to upload.

Custom logo

Report custom logo not yet uploaded.

Drop an image here or click to upload

Supported formats: JPG, PNG and GIF. Logo ideal sizes: 360x90 or bigger. Logo ideal ratio: 4:1 or similar



Note:

Logos should be 360x90 pixels or bigger, with an ideal aspect ratio of 4:1, or similar.



Note:

Supported formats are:

- *graphics interchange format (GIF)*
- *joint photographic experts group (JPEG)*
- *portable network graphics (PNG)*

5. Wait for the file to upload.

6. Select **Save**.

Results

Your custom logo will now be added to your reports.

Configure SMTP settings

If you want to send emails that contain scheduled reports, you need to configure the simple mail transfer protocol (SMTP) server settings.

Procedure


1. In the top navigation bar, select  icon > **Reports**.

Result: The **Reports** page opens.

2. Select **Settings**.

Result: The [Settings \(on page 228\)](#) page opens.

3. In the **SMTP Server** section, set the toggle to **ON**.

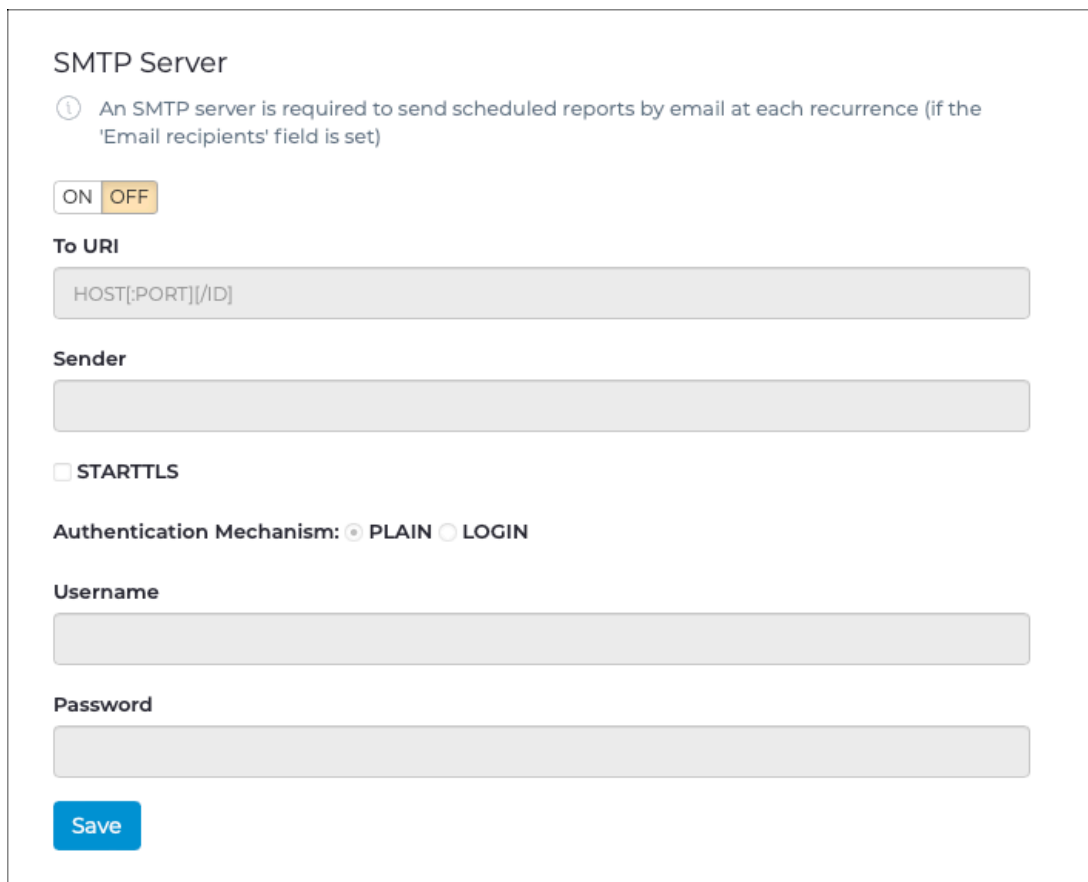

The screenshot shows the 'SMTP Server' configuration section. At the top, there is a title 'SMTP Server' and an information icon with a note: 'An SMTP server is required to send scheduled reports by email at each recurrence (if the 'Email recipients' field is set)'. Below this is a toggle switch currently set to 'OFF'. The 'To URI' field contains the placeholder text 'HOST[:PORT][ID]'. The 'Sender' field is empty. There is a checkbox for 'STARTTLS' which is unchecked. The 'Authentication Mechanism' has two radio buttons: 'PLAIN' (selected) and 'LOGIN'. Below these are 'Username' and 'Password' fields, both empty. At the bottom left of the form is a blue 'Save' button.

4. In the **To URI** field, enter the host URI information. For example, **HOST[:PORT][ID]**
5. In the **Sender** field, enter the sender identification information.

6. To use encryption, select the **STARTTLS** checkbox.

**Note:**

If you do not select this option, reports will be sent without encryption.

7. To start the authentication process, choose an Authentication Mechanism:

Choose from:

- **PLAIN**
- **LOGIN**

**Note:**

The default setting is **PLAIN**.

8. If you chose **LOGIN**, enter your credentials.
- a. In the **Username** field, enter your username.
 - b. In the **Password** field, enter your password.
9. Select **Save**.

Results

Emails for scheduled reports that have email recipients will now be sent at the next scheduled occurrence.

Filter a report globally

You can filter a report globally, which is the default filter. This lets you use a specific category to apply filters to the entire report.

Procedure

1. In the top navigation bar, select  icon > **Reports**.

Result: The **Reports** page opens.

2. Select **Management**.

Result: The [Management \(on page 223\)](#) page opens.

3. In the top section, select  **Filters**.

Result: A dialog shows.

4. Select the category on which to filter, then enter your filter query in the related field.

Edit filters for report 'Alerts'

Filter on assets

where device_id = yyy

Filter on alerts

where id = 1

Filter on nodes

where ip = 192.168.1.12

Filter on node_cpes

where node_id = 1.1.1.2

Filter on links

where protocol = smb

Filter on node_cves

where node_id = 192.168.1.12

Filter on captured_urls

where url = www.youtube.com

Filter on captured_logs

where id_src = 192.168.1.12

 These filters will not work on the widgets: CISControl_7, CISControl_12, Vulnerability scoring overview, Evidences, Vendors, Vulnerability key findings

Ok

Cancel

5. Select **Ok**.



Note:

At the bottom of the dialog is a list of widgets on which filters will not work.

Results


The filter(s) has (have) been applied to the report.

Add a widget to a report

The **Management** page lets you add widgets to reports.

Procedure

1. In the top navigation bar, select  icon > **Reports**.
Result: The **Reports** page opens.
2. Select **Management**.
Result: The [Management \(on page 223\)](#) page opens.
3. In the **Reports list** section on the left, select the applicable report.
Result: The report opens.
4. On the right side of the report, choose the section that you want to add the widget to. Select **Add widget**.
Result: A dialog shows.
5. In the left pane, choose the type of widget that you want to add.

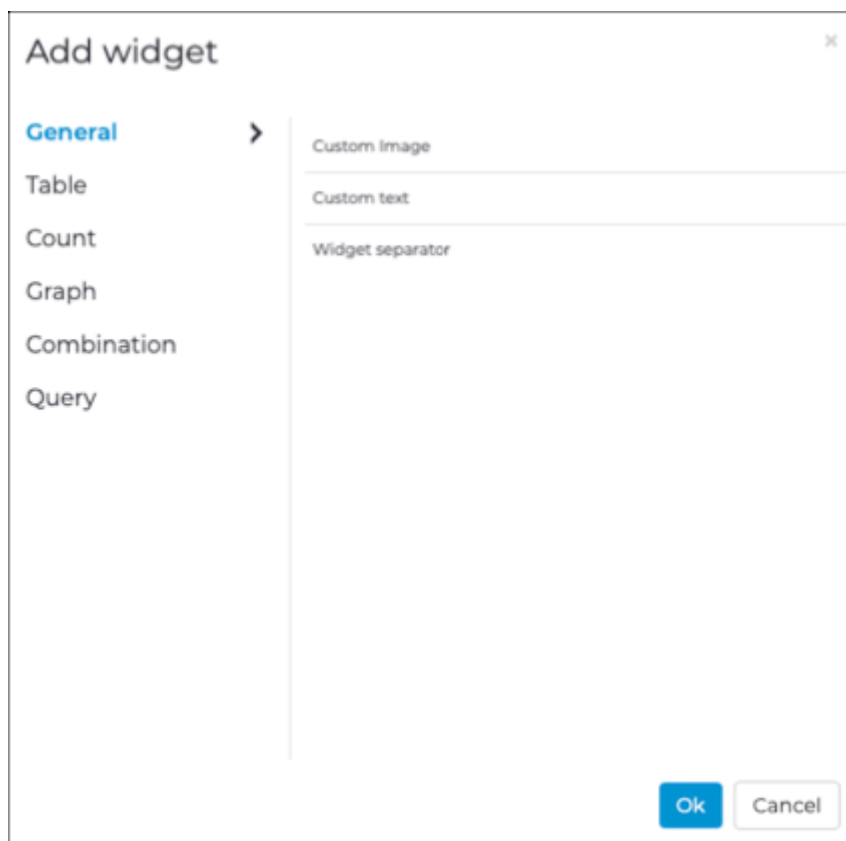

6. From the list, select the widget that you want.

Results

The widget has been added to the report.

Filter a report with a widget

You can use widgets to filter a report.

Procedure

1. In the top navigation bar, select  icon > **Reports**.

Result: The **Reports** page opens.

2. Select **Management**.

Result: The [Management \(on page 223\)](#) page opens.


3. In the **Reports list** section on the left, select the applicable report.

Result: The report opens.

4. Find the widget that you would like to use and hover your mouse over it.

Result: At the top of the widget, more buttons show.

5. Select **Edit filter**.

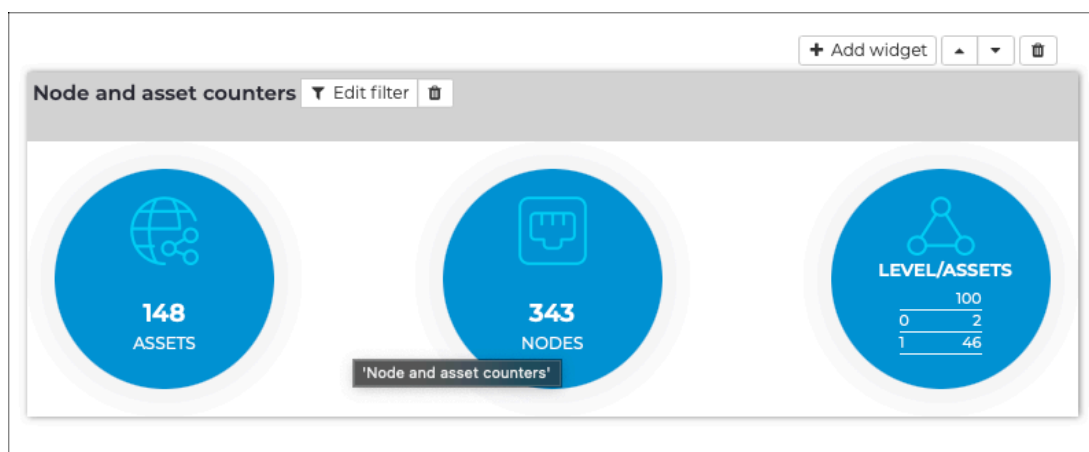

6. Select the category on which to filter, then enter your filter query in the related field.

Edit filters for widget 'Node and asset counters' ✕

Filter on assets

where device_id = yyy

Filter on nodes

where ip = 192.168.1.12

 These filters will not work on the widgets: CISControl_7, CISControl_12, Vulnerability scoring overview, Evidences, Vendors, Vulnerability key findings

Ok

Cancel

7. Select **Ok**.

**Note:**

At the bottom of the dialog is a list of widgets on which filters will not work.

Results

The filter(s) has (have) been applied to the report.

Chapter 12. Assertions



The **Assertions** page shows all the assertions and lets you configure them.

A valid assertion is a normal query with a special command appended at the end. Assertions can be saved in a specific order and can be continuously executed in the system.

Queries are based on the [N2QL](#), which you can use to ensure that certain conditions are met on the observed system. An assertion is typically either an empty value, or a specific value. When an unexpected value appears, or when the value is different than the expected, the system alerts the user.

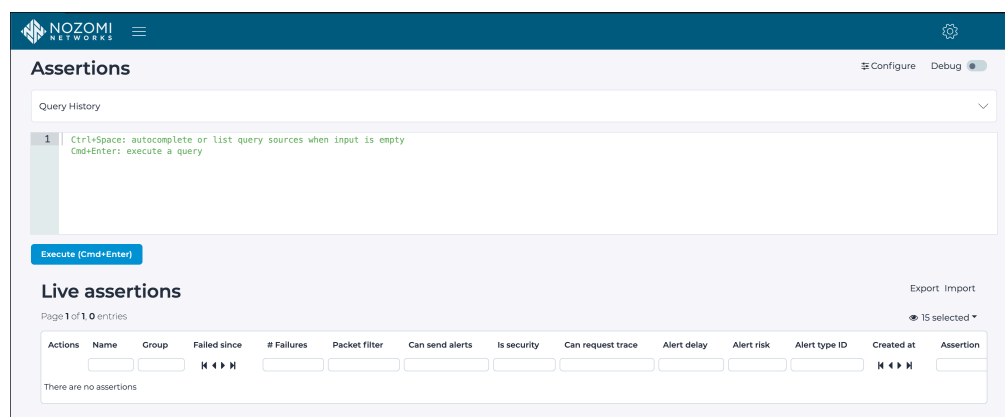


Figure 76. Assertions page

Configure

This lets you configure the execution interval in seconds.

History button

This button shows a history of the previous queries that have been entered in the query field.

Query field

This field is where you enter your query.

Debug button

Because assertions with logical operators and brackets can quickly become complex, the debug icon decomposes the query, and executes each part to show intermediate results.



Figure 77. Complex assertion being debugged

Export

This lets you export assertion groups in *JSON* format.

Import

This lets you import assertion groups in *JSON* format.

Assertion operators

Table 2. Assertion operators

Operator	Description
<code>assert_all <field> <op> <value></code>	The assertion is satisfied when each element in the query result set matches the given condition.
<code>assert_any <field> <op> <value></code>	The assertion is satisfied when at least one element in the query result set matches the given condition.
<code>assert_empty</code>	The assertion is satisfied when the query returns an empty result set.
<code>assert_not_empty</code>	The assertion is satisfied when the query returns a non-empty result set.

Save an assertion

You can save assertions to have them continuously executed in the system.

Procedure


1. In the top navigation bar, select  icon > **Assertions**.

Result: The **Assertions** page opens.

2. In the query field, enter a query.
3. Select **Enter**.
4. To save the assertion, select **Save**.

Result: A dialog shows.

5. In the **Name** field, enter a name for the query.

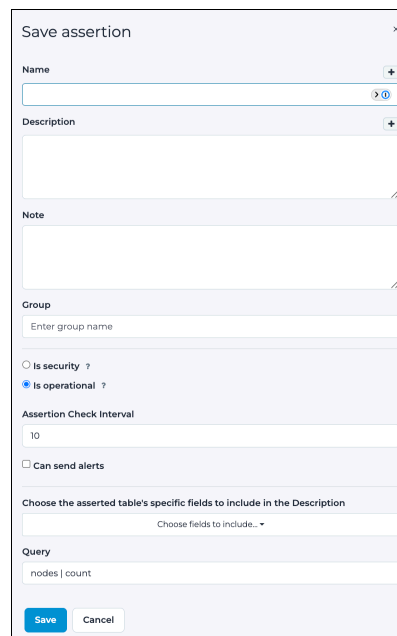

The 'Save assertion' dialog box contains the following fields and options:

- Name:** A text input field with a placeholder and a clear button.
- Description:** A text input field with a placeholder and a clear button.
- Note:** A text input field with a placeholder and a clear button.
- Group:** A text input field with a placeholder 'Enter group name'.
- Is security ?** and **Is operational ?** radio buttons, with 'Is operational ?' selected.
- Assertion Check Interval:** A text input field with a value of '10'.
- Can send alerts:** A checkbox that is currently unchecked.
- Choose the asserted table's specific fields to include in the Description:** A dropdown menu with the text 'Choose fields to include...'.
- Query:** A text input field with the value 'nodes | count'.
- Buttons:** 'Save' and 'Cancel' buttons at the bottom.



Note:

You can use field placeholders to include dynamic values from your query results. For more details, see [Customize assertion name and description \(on page 256\)](#).

6. In the **Description** field, enter a description.

**Note:**

You can use field placeholders to include dynamic values from your query results. For more details, see [Customize assertion name and description \(on page 256\)](#).

7. In the **Group name** field, enter a group name for the assertion.
8. Choose from one of these options:
Choose from:
 - **Is security ?**
 - **Is operational ?**
9. In the **Assertion Check Interval** field, choose the interval in seconds at which the assertion will be rechecked.

**Note:**

You can select an interval between 10 seconds and 1 day.

10. **Optional:** If you want the assertion to trigger an alert, select the **Can send alerts** checkbox.
11. From the **Choose the asserted table's specific fields to include in the Description** dropdown, select the fields to include in the assertion description.
12. In the **Query** field, enter the assertion query.
13. Select **Save**.

Result: The saved assertion will be listed at the bottom of the page with a green or red color to indicate the result.

Customize assertion name and description

You can customize assertion names and descriptions with dynamic field values using string interpolation.

About this task

When saving an assertion, you can use field placeholders in the name and description fields. These placeholders are replaced with actual values from your query results when alerts are generated. This lets you create more descriptive and context-aware assertion names and alert descriptions.

Procedure

1. In the top navigation bar, select  icon > **Assertions**.

Result: The **Assertions** page opens.

2. In the query field, enter a query.
3. Select **Enter**.
4. Select **Save**.

Result: A dialog shows.

5. In the **Name** field, enter a name for the assertion. To insert a field value from your query, select the plus icon button next to the field.

Result: A placeholder `{{FIELD_NAME}}` is inserted into the field with **FIELD_NAME** highlighted. Replace it with the actual field name from your query.



Tip:

Field names must match the fields returned by your query. For example, if your query returns **host**, **name**, or **ip** fields, you can use `{{host}}`, `{{name}}`, or `{{ip}}`.

6. In the **Description** field, enter a description. You can also use field placeholders here by selecting the plus icon button.

Example: The sensor `{{host}}` with model `{{model}}` has been offline for more than 15 minutes

7. Complete the remaining fields in the dialog and select **Save**.

Results

When the assertion generates an alert, the placeholders in the name and description are replaced with the actual values from the query results.

Example

If you save an assertion with the following configuration:

- Name: **Sensor offline:** `{{host}}`
- Description: The sensor `{{host}}` with model `{{model}}` has not synchronized in the last 15 minutes
- Query: `sensors | where minutes_ago(last_sync) > 15 | assert_empty`

When a sensor with `host = nozomi-guardian` and `model = V-SERIES` fails the assertion, the generated alert will display:

- Name: **Sensor offline:** `nozomi-guardian`
- Description: The sensor `nozomi-guardian` with model `V-SERIES` has not synchronized in the last 15 minutes

Edit an assertion

This lets you edit the details for an existing assertion.

Procedure

- 1. In the top navigation bar, select  icon > **Assertions**.
Result: The **Assertions** page opens.
- 2. In the query field, enter a query.
- 3. To execute the query, elect **Enter**.

 **Note:**
You can use the logical operators && (and) and || (or) to combine multiple assertions. Round brackets () change the logical grouping as in a mathematical expression.

- 4. **Optional:** To the right of the query field, select the debug  icon.

 **Note:**
Because assertions with logical operators and brackets can quickly become complex, the debug icon decomposes the query, and executes each part to show intermediate results.



Result: The debug section shows.

Configure an assertion

This lets you configure the execution interval of the assertions, in seconds.

Procedure


1. In the top navigation bar, select  icon > **Assertions**.

Result: The **Assertions** page opens.

2. In the top right, select **Configure**.

Result: A dialog opens.

3. In the **Execution interval (seconds)** field, enter an interval.

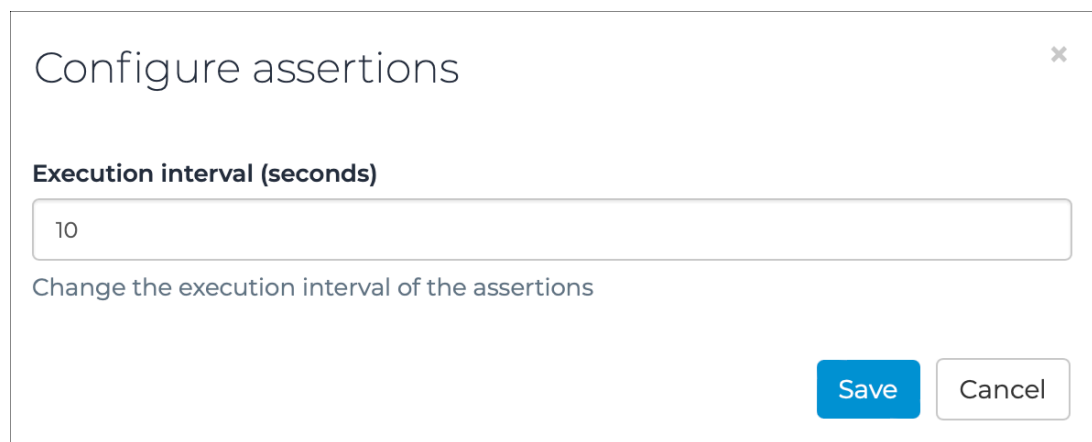

Configure assertions ×

Execution interval (seconds)

10

Change the execution interval of the assertions

Save **Cancel**

4. Select **Save**.

Configure an assertion on links

This lets you configure the scope of the assertion for the related links.

Procedure

1. In the top navigation bar, select  icon > **Network**.

Result: The **Network** page opens.

2. Select **Links**.

Result: The **Links** page opens.

3. To the left of the applicable link, select the configure  icon.

Result: A dialog opens.

4. **Optional:**

Select **Is persistent**.

Configure 192.168.68.52-255.255.255.255/other 

☐ **Is persistent**

Raise an alert when a new TCP handshake is detected on this link

☐ **Alert on SYN**

Raise an alert when a TCP SYN packet is detected on this link

☐ **Track availability (seconds)**

Notify the link events when the link communication is interrupted or resumed

☐ **Last activity check (seconds)**

Raise an alert when the link become inactive for more than the specified amount of seconds

Save

Cancel



Note:

When selected, this check raises a new alert whenever a [TCP](#) handshake is successfully completed on the link.

5. **Optional:** Select **Alert on SYN**.



Note:

When selected, this check raises a new alert whenever a client sends a TCP SYN on the link.

6. **Optional:** Select **Track availability (seconds)**.



Note:

When selected, a link is considered non-functioning if it is unresponsive for the specified time.

7. **Optional:** Select **Last activity check (seconds)**.



Note:

When selected, this check raises an alert when the link is not receiving data for more than the specified time.

8. Select **Save**.

Results

The assertion has been configured.

Configure an assertion on variables

This lets you configure the scope of the assertion for the related variables.

Procedure

1. In the top navigation bar, select  icon > **Process**.

Result: The **Process** page opens.

2. Select **List**.

Result: The **List** page opens.

3. To the left of the applicable link, select the configure  icon.

Result: A dialog opens.

4. Optional:

In the **Label** field, enter a label for the assertion.

Configure 10.168.1.54/1/ir9

Label

ir9 at RTU 1

History size

0

Set the variable history size. When size is 0, history is disabled. When is higher than 0, it is enabled and the size value suggests the system how many values should be kept, according to resources availability.

☐ **Last activity check**

Raise an alert when the variable is not updated for more than the specified amount of seconds

☐ **Invalid quality check**

Raise an alert when the variable keeps the invalid quality for more than the specified amount of seconds

☐ **Disallowed qualities check**

Raise an alert when the variable has one of the specified qualities. Possible values are: invalid, not topical, blocked, substituted, overflow, reserved, questionable, out of range, bad reference, oscillatory, failure, inconsistent, inaccurate, test. Multiple values can be separated by comma.

5. Optional: In the **History size** field, enter a value.

**Note:**

This sets the [Variable](#) history size. When the size is 0, history is disabled. When it is higher than 0, it is enabled, and the size value suggests how many values that the system should keep, depending on the available resources.

6. **Optional:** In the **Last activity check** field, enter a value.



Note:

When selected, this check raises an alert when the [Variable](#) is either not measured or is changed for more than the specified number of seconds.

7. **Optional:** In the **Invalid quality check** field, enter a value.



Note:

When selected, this check raises an alert when the [Variable](#) maintains an invalid quality for more than the specified amount of seconds.

8. **Optional:** In the **Disallowed quality check** field, enter a value.



Note:

When selected, this check raises an alert when the [Variable](#) gains one of the specified qualities.

9. Select **Save**.


Results

The assertion has been configured.

Chapter 13. Time machine



Time machine lets you load a snapshot, which is a previously saved state, and go back in time, to analyze the data from a past situation. You can load a single snapshot and use the platform as usual or load two snapshots and compare the user interface to highlight changes.

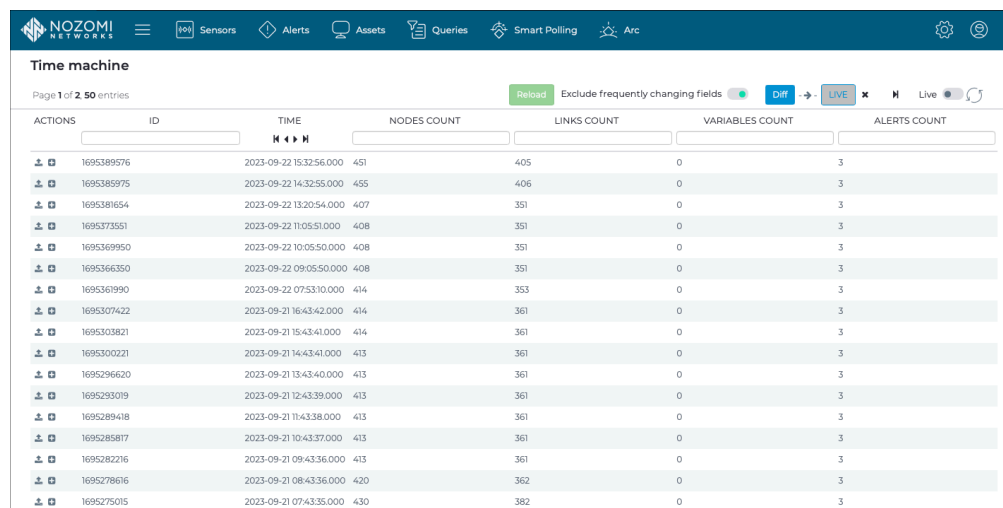

ACTIONS	ID	TIME	NODES COUNT	LINKS COUNT	VARIABLES COUNT	ALERTS COUNT
	1695389576	2023-09-22 15:32:56.000	451	405	0	3
	1695385975	2023-09-22 14:32:55.000	455	406	0	3
	1695381654	2023-09-22 13:20:54.000	407	351	0	3
	1695373551	2023-09-22 11:05:51.000	408	351	0	3
	1695369950	2023-09-22 10:05:50.000	408	351	0	3
	1695366350	2023-09-22 09:05:50.000	408	351	0	3
	1695361990	2023-09-22 07:53:10.000	414	353	0	3
	1695307422	2023-09-21 16:43:42.000	414	361	0	3
	1695303821	2023-09-21 15:43:41.000	414	361	0	3
	1695300221	2023-09-21 14:43:41.000	413	361	0	3
	1695296620	2023-09-21 13:43:40.000	413	361	0	3
	1695293019	2023-09-21 12:43:39.000	413	361	0	3
	1695289418	2023-09-21 11:43:38.000	413	361	0	3
	1695285817	2023-09-21 10:43:37.000	413	361	0	3
	1695282216	2023-09-21 09:43:36.000	413	361	0	3
	1695278616	2023-09-21 08:43:36.000	420	362	0	3
	1695275015	2023-09-21 07:43:35.000	430	382	0	3

Figure 78. Time machine page

Reload

If you initiate a diff and then navigate to another area of the software, when you return to this page you might not see the progress of the diff. The **Reload** button lets you either:

- Reload the progress bar (if the diff is still in progress)
- View the results (if the process has finished)

Exclude frequently changing fields

You can select the **Exclude frequently changing fields** toggle to on to exclude the fields that change frequently. This excludes the diff all fields that are affected from normal traffic handling. Examples of frequently changing fields are the number of bytes received / sent, and the last activity time.

Diff

The **Diff** button starts the diff process. The system evaluates the diff baseline - target files and estimates how **CPU** / memory intensive the diff operation is going to be. If there is not enough free memory at the moment, the diff will be aborted with the appropriate message. If the diff is estimated to take more than a few minutes, a warning will show and a confirmation dialog will show.

 
Live

The **LIVE** button lets you choose the current view as part of the diff.

Step forward

The step forward  icon lets you go back to the present time view after you have viewed a snapshot.

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Load snapshot

The load snapshot  icon lets you select a historical snapshot.

Select for diff

The select for diff  icon to choose the related snapshot as part of the diff.

Time machine diffs

You can use time machine to view diffs between historical snapshots, or an historical snapshot and the current live view.

Snapshots

When you view a snapshot, the [graphical user interface \(GUI\)](#) will change to gray.



The graph view and the use of color let you quickly see the nodes, or links, that have been added, removed, or changed:

- Added items are green
- Removed items are red
- Changed items are blue

Diff views

Changes for 172.20.10.2			
Field	Before	After	
created_at	2023-07-25 12:32:20.138	12:07:05.787	+5441685649
device_id	f2:c9:98:64:c3:f3c:e9:f7:5e:31:f	f23c:e9e9:98f7:645e:c331:5bfc	
label	iPhone-106.local	PTNB08.local	iPhone-106PTNB08.local
mac_address	f2:c9:98:64:c3:f3c:e9:f7:5e:31:f	f23c:e9e9:98f7:645e:c331:5bfc	
mac_vendor	Private Address	Intel Corporate	PrivateIntel AddressCorporate
product_name	iPhone		iPhone
type	mobile_phone -		mobile_phone-
vendor	Apple	Intel Corporate	AppleIntel Corporate

Figure 79. Table view

In the graph view, you can select a link or node to see more information in the pane on the right side.

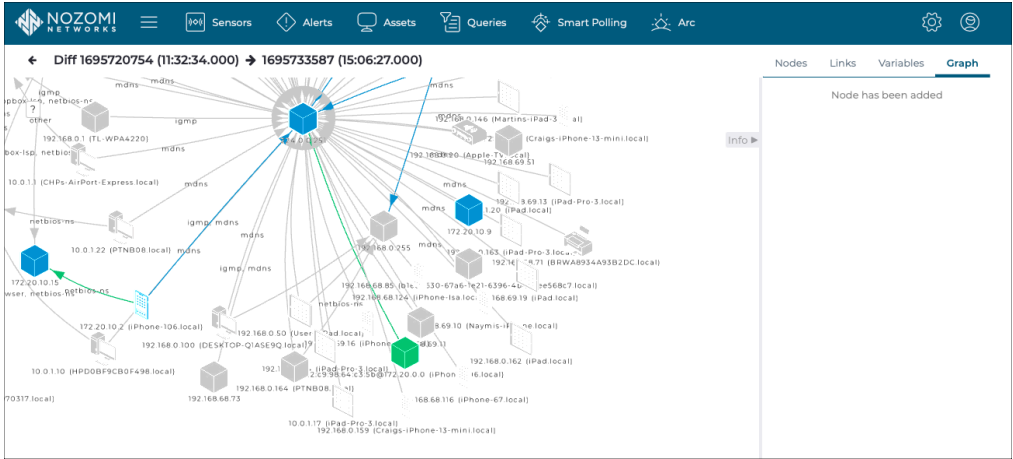


Figure 80. Graph view

Load a snapshot

To create a diff, you must first load a snapshot.

Procedure

1. In the top navigation bar, select  icon > **Time machine**.

Result: The **Time machine** page opens.

2. To the left of the applicable snapshot, select the load snapshot  icon.

Result: The user interface turns gray to highlight that you are viewing a static snapshot.



3. To return to the present time view, select the  icon.

Request a diff

The time machine lets you create a diff between two historical snapshots, or a snapshot and the current view.

Procedure

1. In the top navigation bar, select  icon > **Time machine**.

Result: The **Time machine** page opens.

2. To select the baseline of the diff, to the left of the applicable snapshot, select the select for diff  icon.

Result: At the top of the table, the details of the snapshot are loaded next to the **Diff** icon.

3. Choose a target for the diff:

Choose from:

- To select another snapshot from the past, to the left of the applicable snapshot, select the load snapshot  icon
- To select the current, live environment, at the top of the table, select the **LIVE** icon

4. **Optional:** Select the **Exclude frequently changing fields** toggle to on.
5. Now that the baseline and the target have been set, select the **Diff** icon.

Result: The system evaluates the diff baseline / target files and estimates how **CPU** / memory intensive the diff operation is going to be. If there is not enough free memory at the moment, the diff will be aborted with the appropriate message. If the diff is estimated to take more than a few minutes, a warning will show and a confirmation dialog will show.

6. As soon as the diff operation starts, a dialog shows the progress. To stop the diff operation, select **Abort**.

Results

After the diff has been computed, the diff results show.

Reload the diff operation progress

Diff operations can take a long time to conclude. While an operation is in progress, you can continue to use the software as normal.

Procedure

1. In the top navigation bar, select  icon > **Time machine**.

Result: The **Time machine** page opens.

2. At the top of the table, select **Reload**.

Result: If the diff operation is still in progress, the progress dialog shows. If the operation has finished, the diff results show.

View a diff from an alert

This automatic feature will use the previous and subsequent snapshots according to the time of the alert.

Procedure

1. In the top navigation bar, select **Alerts**.

Result: The **Alerts** page opens.

2. Choose a method to open the actions menu.

Choose from:

- In the table, select the hyperlink to open the details page. Select **Actions**
- In the table, select the  icon

3. Select **Time machine diff**.

Result: The time diff shows.

4. To see more details on the right side of the graph, select the applicable node or link.

Chapter 14. Vulnerabilities



The Nozomi Networks software continuously discovers vulnerabilities in monitored assets.

The Nozomi Networks software continuously discover vulnerabilities. To do this, it matches the [Common Platform Enumeration \(CPE\)](#) of a device with the [National Vulnerability Database](#), and other data sources.

The Vulnerabilities page has these tabs:

- [Assets \(on page 278\)](#)
- [List \(on page 279\)](#)
- [Stats \(on page 280\)](#)

Assets

The **Assets** page shows a list of assets with known vulnerabilities, along with a summary of the severity of the vulnerability.

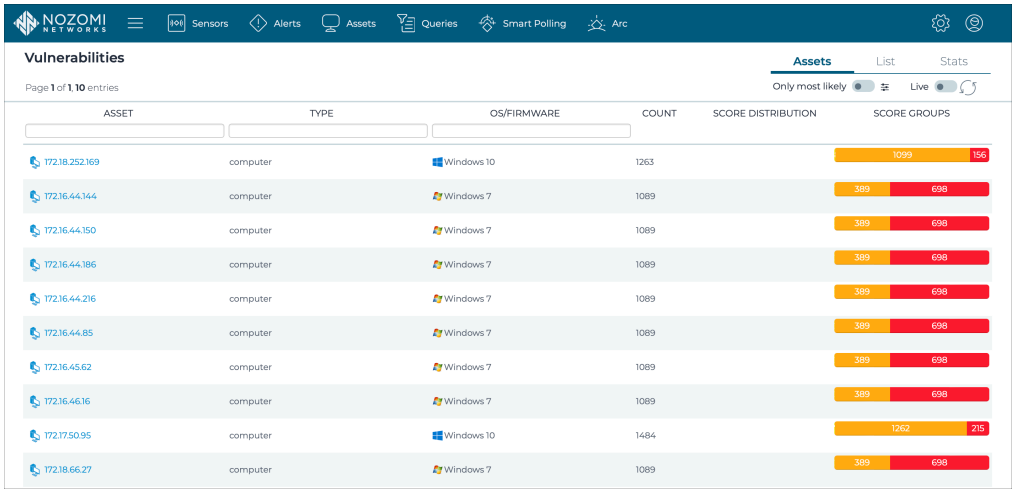


Figure 81. Assets page

Only most likely

 
This toggle lets you filter the view to show only the assets the match the criteria that you have set for likelihood threshold.

Likelihood threshold settings

Likelihood threshold is a value between 0.1 and 1.0 where 1.0 represents the maximum likelihood of the *Common Vulnerabilities and Exposures (CVE)* to be present. Likelihood is the confidence of the software's correct assignment of a *CPE* to the hardware of the monitored asset. The higher the likelihood, the higher the software's confidence that the vulnerabilities assigned to an asset are in fact are relevant to that asset. **Likelihood threshold** is the minimum likelihood a vulnerability needs in order for it to be shown in this page when the **Only most likely** toggle is set to on. As a guideline, we suggest that you use:

- 0.8 for a high level of confidence
- 0.5 for a medium level of confidence
- 0.3 for a low level of confidence

Live / refresh

The **Live**  icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

List

The **List** page shows a comprehensive list of vulnerabilities in the environment. This lets you perform global, in-depth analysis.

ACTIONS	CVE	NODE	SCORE	CWE	CWE NAME	CVE CREATION DATE	DISCOVERY DATE
	CVE-2003-0904	172.16.37.24	6	200	Exposure of Sensitive Information to an Unauthorized Actor	2004-01-20 06:00:00.000	2023-09-11 12:20:20.513
	CVE-2004-0119	172.16.37.24	7.5	476	NULL Pointer Dereference	2004-06-01 06:00:00.000	2023-09-11 12:20:20.799
	CVE-2004-0840	172.16.37.24	10	20	Improper Input Validation	2004-11-03 06:00:00.000	2023-09-11 12:20:20.805
	CVE-2005-1987	172.16.37.24	7.5	120	Buffer Copy without Checking Size of Input ('Classic Buffer Overflow')	2005-10-13 12:02:00.000	2023-09-11 12:20:20.802
	CVE-2005-3921	6c:41:5a:60:99:23	2.6	79	Improper Neutralization of Input During Web Page Generation ('Cross-site Scripting')	2005-11-30 12:03:00.000	2023-09-11 12:17:58.491
	CVE-2006-4950	6c:41:5a:60:99:23	10	20	Improper Input Validation	2006-09-23 12:07:00.000	2023-09-11 12:17:58.491
	CVE-2007-0066	172.16.37.24	7.1	20	Improper Input Validation	2008-01-08 21:46:00.000	2023-09-11 12:20:20.510
	CVE-2007-0199	6c:41:5a:60:99:23	5	20	Improper Input Validation	2007-01-11 12:28:00.000	2023-09-11 12:17:58.496
	CVE-2007-2587	6c:41:5a:60:99:23	6.3	20	Improper Input Validation	2007-05-10 02:19:00.000	2023-09-11 12:17:58.497
	CVE-2007-3034	172.16.37.24	9.3	189	Numeric Errors	2007-08-14 23:17:00.000	2023-09-11 12:20:20.512
	CVE-2007-3898	172.16.37.24	6.4	16	Configuration	2007-11-14 02:46:00.000	2023-09-11 12:20:20.796
	CVE-2007-5133	172.16.37.24	7.1	189	Numeric Errors	2007-09-27 21:17:00.000	2023-09-11 12:20:20.511
	CVE-2008-1436	172.16.37.24	9	264	Permissions, Privileges, and Access Controls	2008-04-21 19:05:00.000	2023-09-11 12:20:20.486
	CVE-2008-1441	172.16.37.24	5.4	20	Improper Input Validation	2008-06-12 04:32:00.000	2023-09-11 12:20:20.803
	CVE-2008-1454	172.16.37.24	9.4	20	Improper Input Validation	2008-07-09 01:41:00.000	2023-09-11 12:20:20.551
	CVE-2008-2249	172.16.37.24	9.3	189	Numeric Errors	2008-12-10 15:00:00.000	2023-09-11 12:20:20.552
	CVE-2008-2250	172.16.37.24	7.2	264	Permissions, Privileges, and Access Controls	2008-10-15 02:12:00.000	2023-09-11 12:20:20.552
	CVE-2008-2251	172.16.37.24	7.2	399	Resource Management Errors	2008-10-15 02:12:00.000	2023-09-11 12:20:20.553

Figure 82. List page

Export

The **Export** icon lets you export the current list in either [CSV](#) or Microsoft Excel format.

Only resolved

This lets you show only **Unresolved** vulnerabilities. Vulnerability status options are:

- Unresolved
- Mitigated
- Accepted

Mitigated and **Accepted** lead to a resolution status that equals true.

Live / refresh

The **Live** icon lets you change live view on, or off. When live mode is on, the page will refresh approximately every five seconds.

Column selection

The columns selection icon lets you choose which columns to show or hide.

Stats

The **Stats** page shows high level information in a graphical format that shows the top common platform enumerations (CPEs), common vulnerabilities and exposures (CVEs), and common weakness enumerations (CWEs).

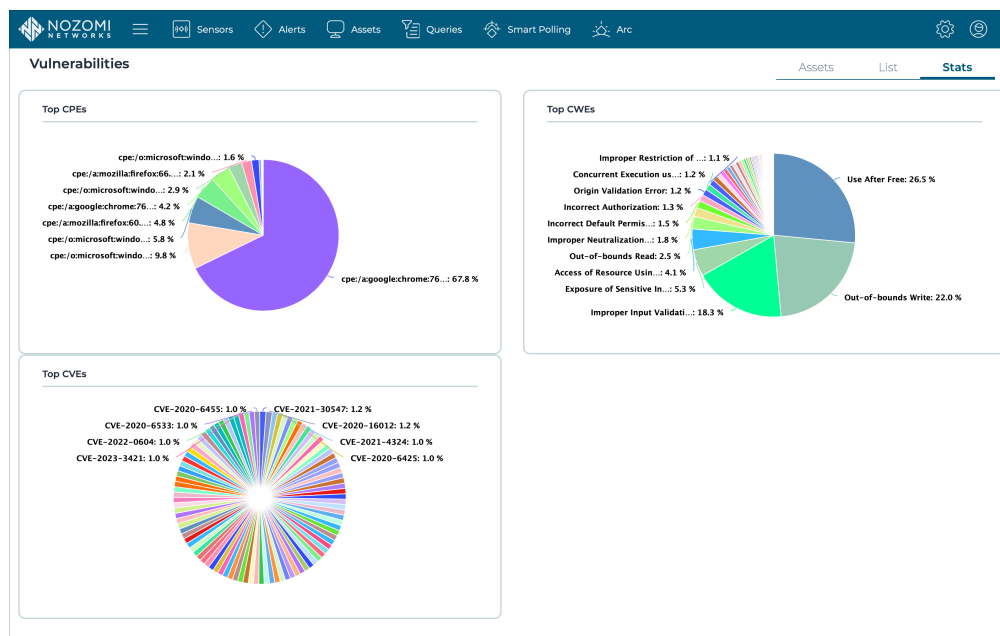


Figure 83. Stats page

Top CPEs

This section shows the:

- Title of vulnerability
- Percentage of the total vulnerabilities
- Actual count of that vulnerability

Top CWEs

This section shows the:

- Title of vulnerability
- Percentage of the total vulnerabilities
- Actual count of that vulnerability

Top CVEs

This section shows the:

- Title of vulnerability
- Date of vulnerability type
- Percentage of the total vulnerabilities
- Actual count of that vulnerability

Details page

The details page shows you all the details for the related vulnerability.

Details for CVE-2001-0131	
Node:	204.93.163.124
Score:	3.3
EPSS score:	
CVE source:	NVD
CWE name:	Improper Link Resolution Before File Access (Link Following)
CWE:	59
Matching CPEs:	cpe:/a:apache:http_server:2.*
CVE creation date:	2001-03-12 06:00:00.000
CVE update date:	2020-10-09 19:52:00.000
Discovery date:	2023-09-25 08:25:49.018
Summary:	htpasswd and htdigest in Apache 2.0a9, 1.3.14, and others allows local users to overwrite arbitrary files via a symlink attack.
References:	Source "DEBIAN", Type "VENDOR_ADVISORY" DSA-021 Source "BUGTRAQ", Type "VENDOR_ADVISORY" 20010110:immunix.Org Security update for lots of temp file problems Source "XF", Type "VENDOR_ADVISORY" linux.apache-symlink(5926)

Figure 84. Details page



Chapter 15. Administration



Administration page

The administration page lets a user with administrator privileges configure settings and do other tasks.

For more details, see the **Guardian - Administrator Guide**.



Chapter 16. Personal settings



The personal settings page lets you do actions that are specific to your profile.

General

You can select the  icon to access the personal settings menu.

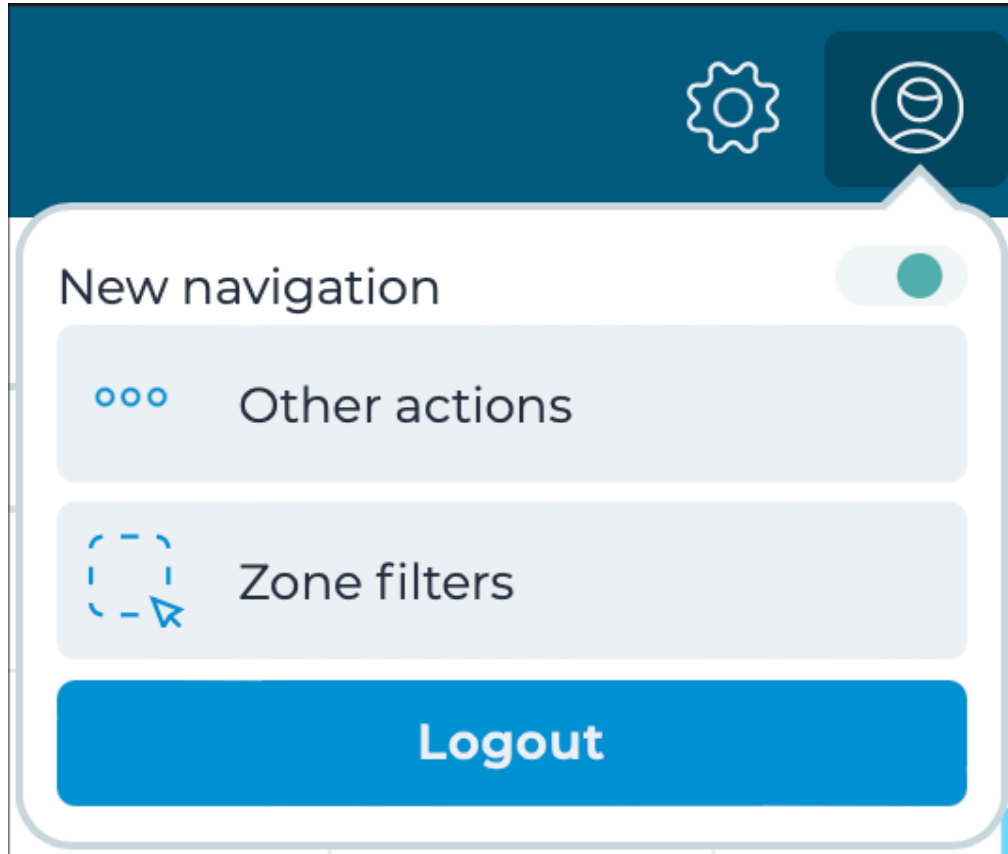


Figure 85. Personal settings menu

The personal settings page has these two sections:

- [Other actions](#) (on page 290)
- [Zone filters](#) (on page 301)

Logout

A button in the personal settings menu lets you log out of the software.

Other actions

The **Other actions** page provides access to essential user settings, including options to clear personal settings, manage trace requests, and customize the UI theme with Auto, Light, or Dark modes.

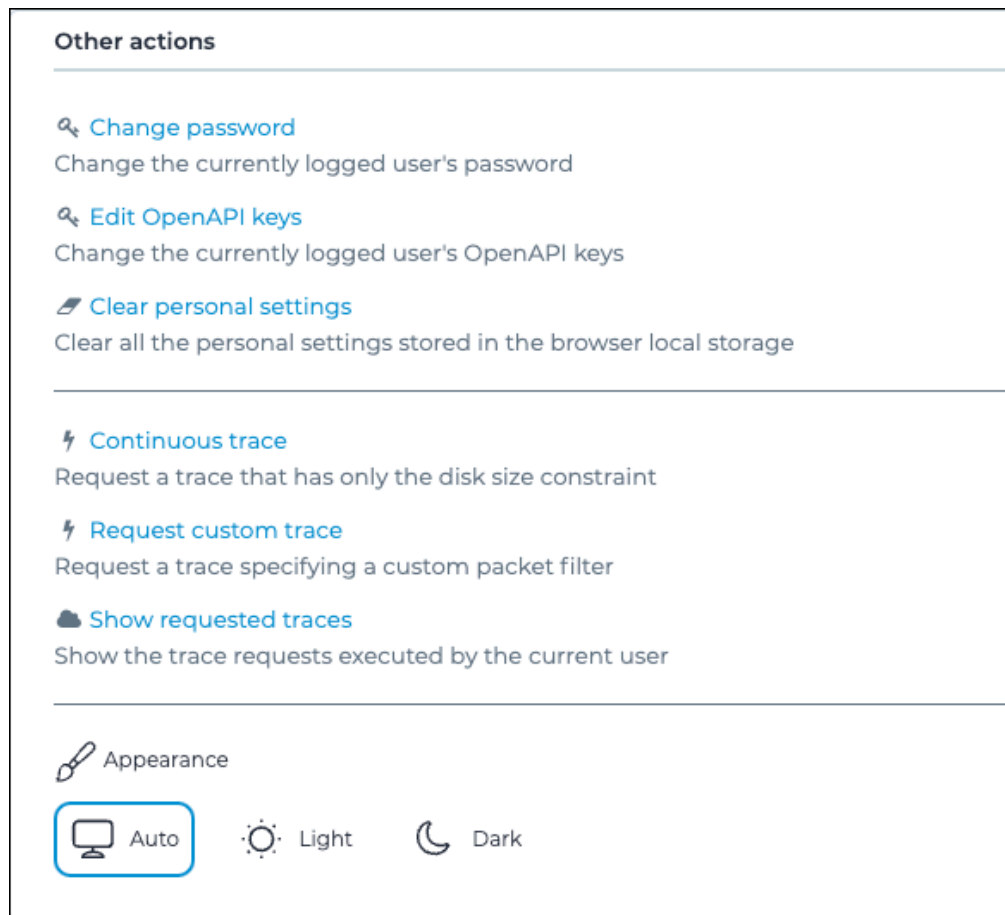


Figure 86. Other actions page

The other actions page lets you access these options:

- [Change your password \(on page 291\)](#)
- [Edit an OpenAPI key \(on page 292\)](#)
- [Clear your personal settings \(on page 295\)](#)
- [Request a continuous trace \(on page 296\)](#)
- [Request a custom trace \(on page 297\)](#)
- [Show requested traces \(on page 299\)](#)

The **Appearance** section lets you customize the visual appearance of the [UI](#). You can choose one of these themes:

- Auto: Automatically adjusts the theme based on system settings
- Light: Uses a bright interface for better visibility in well-lit environments
- Dark: Uses a dark interface for reduced eye strain in low-light environments

Change your password

The profile settings menu lets you change your password.

Procedure

1. In the top navigation bar, select 

Result: A menu shows.

2. Select **Other actions**.
3. Select **Change password**.

Result: A dialog shows.

4. In the **Password** field, enter a new password.

Update password to guarantee your security please change your password.

Password

Password must be minimum of 12 characters and must contain at least 1 digit, 1 lowercase char, 1 uppercase char

Password confirmation

5. In the **Password confirmation** field, enter the password again.
6. Select **Update and proceed**.

Results

Your password has been changed.

Edit an OpenAPI key

The profile settings menu lets you edit your OpenAPI keys.

Procedure

- 1. In the top navigation bar, select 

Result: A menu shows.

- 2. Select **Other actions**.
- 3. Select **Edit OpenAPI keys**.

Result: A dialog shows.

- 4. Edit the OpenAPI keys as necessary.

Edit OpenAPI keys

Page 1 of 1,0 entries

Live ☒  + Generate

ACTIONS	NAME	DESCRIPTION	ALLOWED IPS	LAST SIGN IN IP	LAST SIGN IN TIME	REVOKE TIME

Close

- 5. Select **Close**.

Results

Your OpenAPI keys have been edited.

Generate an OpenAPI key

The profile settings menu lets you generate an OpenAPI key.

Procedure

1. In the top navigation bar, select 


Result: A menu shows.

2. Select **Other actions**.

3. Select **Edit OpenAPI keys**.


Result: A dialog shows.

4. In the top right, select **+ Generate**.

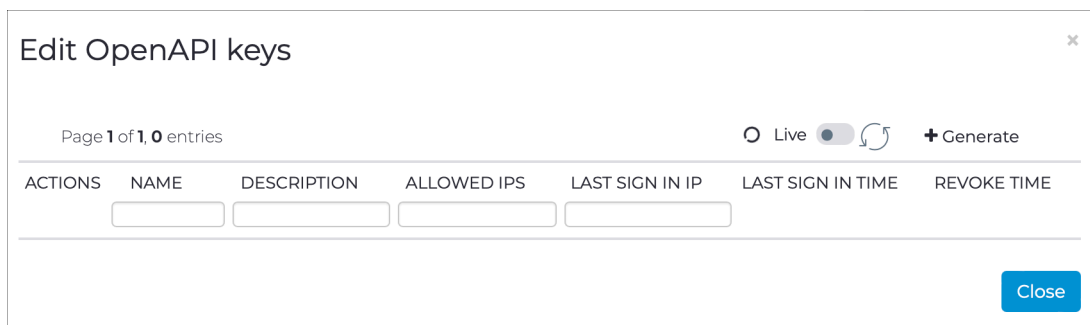

Result: A dialog shows.

5. In the **Description** field, enter a description for the OpenAPI key.

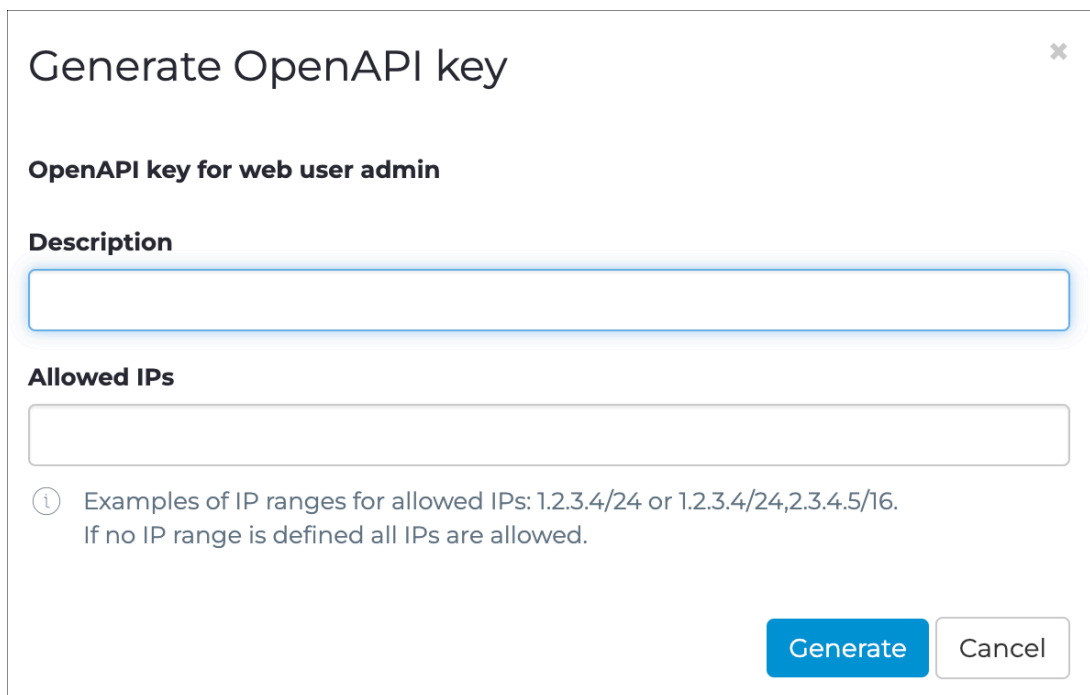

6. In the **Allowed IPs** field, enter the details of the allowed *IP* addresses.

7. Select **Generate**.

Results

Your OpenAPI key has been generated.

Clear your personal settings

The profile settings menu lets you clear your personal settings that are stored in the local browser local.

Procedure

1. In the top navigation bar, select 

Result: A menu shows.

2. Select **Other actions**.
3. Select **Clear personal settings**.

Result: A dialog shows.

4. Select **OK**.

Are you sure?
Cancel OK

Results

Your personal settings have been cleared from the local browser.

Request a continuous trace

The profile settings menu lets you request a trace that has only the disk size constraint.

About this task


The maximum count of packets, and the run time, constrain regular traces. For example, being constrained to capture at most 1000 packets in no more than one minute. A continuous trace does not have such limits. It collects packets without constraints, as long as the disk has free space to store the captured traffic. The packets are then saved as individual files that are 100 *MB* in size.

Procedure

1. In the top navigation bar, select 

Result: A menu shows.
2. Select **Other actions**.
3. Select **Continuous trace**.

Result: A dialog shows.
4. In the **Packet filter** field, enter a *BPF* filter.

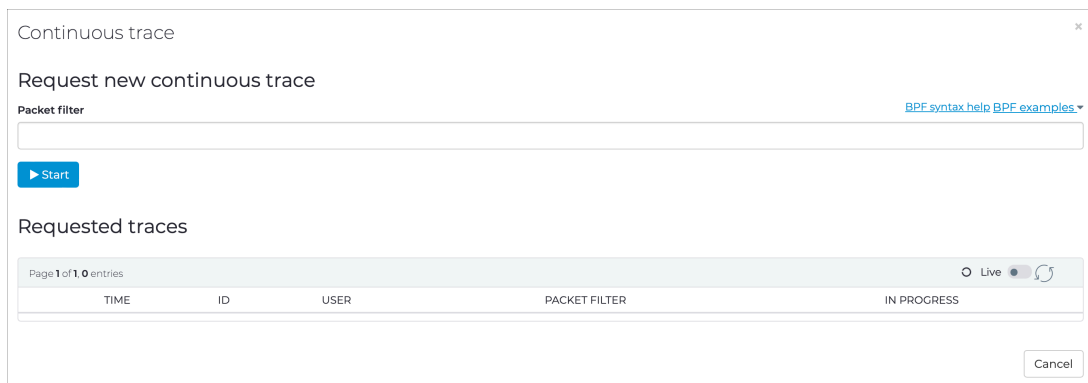

5. Select **Start**.

Results

The trace has been requested.

Request a custom trace

The profile settings menu lets you request a trace specifying a custom packet filter.

Procedure


1. In the top navigation bar, select 

Result: A menu shows.

2. Select **Other actions**.
3. Select **Request custom trace**.

Result: A dialog shows.

4. To set the maximum packet size, in the **Trace max size (packets)** field, enter a value.

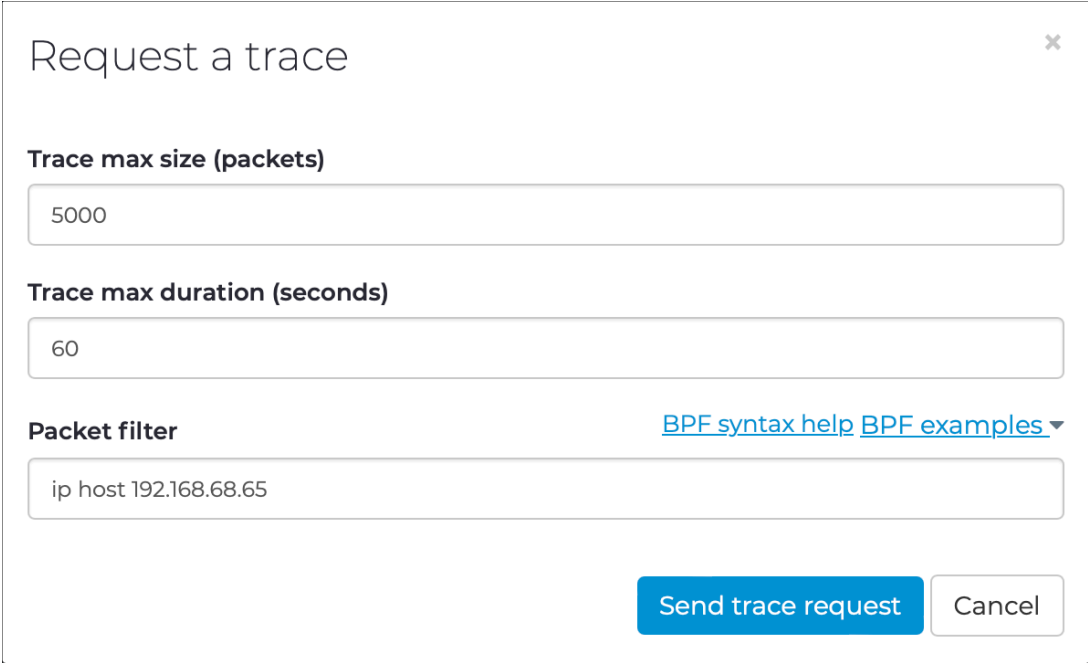

Note:

The default size is 5000 packets.

5. To set the maximum duration of the trace, in the **Trace max duration (seconds)** field, enter a value.



Note:

The default value is 60 seconds.

6.

**Note:**

The **Packet filter** field is automatically populated with a [BPF](#) that captures the packets to/from the selected node, but you can customize this.

If necessary, customize this field.

**Note:**

You can select **BPF syntax help** to show more information on [BPF](#) syntax.

**Note:**

You can select **BPF examples** to see some examples.

7. Select **Send trace request**.

Results

The trace has been requested.

Show requested traces

The profile settings menu lets you show all the traces that you have requested.

Procedure

1. In the top navigation bar, select 
Result: A menu shows.
2. Select **Other actions**.
3. Select **Show requested traces**.

Results

All your requested traces show.

Download a requested trace

Once you have requested a trace, and it is ready, you can download it.

Procedure

- 1. In the top navigation bar, select 
Result: A menu shows.
- 2. Select **Other actions**.
- 3. Select **Show requested traces**.
Result: All your requested traces show.
- 4. For the applicable trace, select **Download trace**.

Requested traces 			
TIME	ID	USER	PACKET FILTER
10:59:40.013	 Download trace bb7e1fee	admin	not ip

Results

The trace has been downloaded.

Zone filters

The personal settings menu lets you filter zones.

Zone filters

Only the zones listed here will be visible (BETA)

All | None

☐ Broadcast

☐ Loopback

☐ Internet

☐ Test Zone 1

☐ Layer2

☐ Multicast

☐ Undefined

☐ kmkHHz-test-guardian

☐ Link-local

☐ Unspecified

☐ TEstingtesting

☐ testing scope

Apply

Figure 87. Zone filters page



Glossary



Address Resolution Protocol

ARP is a communication protocol that is used to discover the link layer address, such as a [MAC address](#), that is associated with a given internet layer address. This is typically an IPv4 address.

Amazon Machine Image

An AMI is a type of virtual appliance that is used to create a virtual machine for the Amazon Elastic Compute Cloud (EC2), and is the basic unit of deployment for services that use EC2 for delivery.

Amazon Web Services

AWS is a subsidiary of the Amazon company that provides on-demand cloud computing platforms governments, businesses, and individuals on a pay-as-you-go basis.

Application Programming Interface

An API is a software interface that lets two or more computer programs communicate with each other.

Assertion Consumer Service

An ACS is a version of the SAML standard that is used to exchange authentication and authorization identities between security domains.

Asset Intelligence™

Asset Intelligence is a continuously expanding database of modeling asset behavior used by N2OS to enrich asset information, and improve overall visibility, asset management, and security, independent of monitored network data.

Berkeley Packet Filter

The BPF is a technology that is used in some computer operating systems for programs that need to analyze network traffic. A BPF provides a raw interface to data link layers, permitting raw link-layer packets to be sent and received.

Central Management Console

The Central Management Console (CMC) is a Nozomi Networks product that has been designed to support complex deployments that cannot be addressed with a single sensor. A central design principle behind the CMC is the unified experience, that lets you access information in a similar way as on the sensor.

Central Processing Unit

The main, or central, processor that executes instructions in a computer program.

Certificate Authority

A certificate, or certification authority (CA) is an organization that stores, signs, and issues digital certificates. In cryptography, a digital certificate certifies the ownership of a public key by the named subject of the certificate.

Classless Inter-Domain Routing

CIDR is a method for IP routing and for allocating IP addresses.

Command-line interface

A command-line processor uses a command-line interface (CLI) as text input commands. It lets you invoke executables and provide information for the actions that you want them to do. It also lets you set parameters for the environment.

Comma-separated Value

A CSV file is a text file that uses a comma to separate values.

Common Event Format

CEF is a text-based log file format that is used for event logging and information sharing between different security devices and software applications.

Common Platform Enumeration

CPE is a structured naming scheme for information technology (IT) systems, software, and packages. CPE is based on the generic syntax for Uniform Resource Identifiers (URI) and includes a formal name format, a method for checking names against a system, and a description format for binding text and tests to a name.

Common Vulnerabilities and Exposures

CVEs give a reference method information-security vulnerabilities and exposures that are known to the public. The United States' National Cybersecurity FFRDC maintains the system.

Common Weakness Enumeration

CWE is a category system for software and hardware weaknesses and vulnerabilities. It is a community project with the aim to understand flaws in software and hardware and create automated tools that can be used to identify, fix, and prevent those flaws.

Configuration file

A CFG file is a configuration, or config, file. They are files that are used to configure the parameters and initial settings for a computer program.

cURL

cURL is a command-line tool and library used to transfer data to or from a server. It supports many protocols, including HTTP, HTTPS, FTP, and more. In API contexts, curl is commonly used to test and interact with endpoints by sending requests and receiving responses.

Domain Name Server

The DNS is a distributed naming system for computers, services, and other resources on the Internet, or other types of Internet Protocol (IP) networks.

ESXi

VMware ESXi (formerly ESX) is an enterprise-class, type-1 hypervisor developed by VMware for deploying and serving virtual computers. As a type-1 hypervisor, ESXi is not a software application that is installed on an operating system (OS). Instead, it includes and integrates vital OS components, such as a kernel.

Extensible Markup Language

XML is a markup language and file format for the storage and transmission of data. It defines a set of rules for encoding documents in a format that is both human-readable and machine-readable.

Federal Information Processing Standards

FIPS are publicly announced standards developed by the National Institute of Standards and Technology for use in computer systems by non-military American government agencies and government contractors.

File Allocation Table

FAT is a file system architecture used in computers for managing disk space. It maintains a table to track the allocation of files on a disk, supporting efficient data storage, access, and management.

File Transfer Protocol

FTP is a standard communication protocol that is used for the transfer of computer files from a server to a client on a computer network. FTP is built on a client-server model architecture that uses separate control and data connections between the client and the server.

Fully qualified domain name

An FQDN is a complete and specific domain name that specifies the exact location in the hierarchy of the Domain Name System (DNS). It includes all higher-level domains, typically consisting of a host name and domain name, and ends in a top-level domain.

Garbage Collector

The Garbage Collector is a system process that discards nodes, assets, and links that are no longer useful, saving system resources.

Gigabit per second

Gigabit per second (Gb/s) is a unit of data transfer rate equal to: 1,000 Megabits per second.

Gigabyte

The gigabyte is a multiple of the unit byte for digital information. One gigabyte is one billion bytes.

Graphical User Interface

A GUI is an interface that lets humans interact with electronic devices through graphical icons.

Graphics Interchange Format

GIF is a bitmap image format that is widely used on the internet.

High Availability

High Availability is a mode that permits the CMC to replicate its own data on another CMC.

Host-based intrusion-detection system

HIDS is an internal Nozomi Networks solution that uses sensors to detect changes to the basic firmware image, and record the change.

Hypertext Markup Language

Hypertext Markup Language (HTML) is the standard markup language used to structure and display content on the web. It defines the structure of web pages using elements represented by tags.

Hypertext Transfer Protocol

HTTP is an application layer protocol in the Internet protocol suite model for distributed, collaborative, hypermedia information systems. HTTP is the foundation of data communication for the World Wide Web, where hypertext documents include hyperlinks to other resources that the user can easily access, for example by a mouse click or by tapping the screen in a web browser.

Hypertext Transfer Protocol Secure

HTTPS is an extension of the Hypertext Transfer Protocol (HTTP). It is used for secure communication over a computer network, and is widely used on the Internet. In HTTPS, the communication protocol is encrypted using Transport Layer Security (TLS) or, formerly, Secure Sockets Layer (SSL). The protocol is therefore also referred to as HTTP over TLS, or HTTP over SSL.

Identifier

A label that identifies the related item.

Identity Provider

An IdP is a system entity that creates, maintains, and manages identity information. It also provides authentication services to applications within a federation, or a distributed network.

Industrial Control Systems

An ICS is an electronic control system and related instrumentation that is used to control industrial processes.

Industrial Internet of Things

The IIoT is a name for interconnected devices, sensors, instruments, which are networked together with industrial applications. This connectivity allows for analysis and data collection, which can facilitate improvements in efficiency and productivity.

Information Object Addresses

An Information Object Address (IOA) is a unique identifier used in IEC 60870-5-101 and IEC 60870-5-104 protocols to specify individual data points, such as sensors or actuators, within a telecontrol system. The IOA format can vary and is configurable, typically appearing as either a 1-byte–2-byte or a 1-byte–1-byte–1-byte structure, depending on the system requirements.

Information Technology

IT is the use of computers to process, create, store, and exchange data and information.

Internet Control Message Protocol

ICMP is a supporting protocol in the internet protocol suite. Network devices use it to send error messages and operational information to indicate success or failure when communicating with another IP address. ICMP differs from transport protocols such as TCP and UDP in that it is not typically used to exchange data between systems.

Internet of Things

The IoT describes devices that connect and exchange information through the internet or other communication devices.

Internet Protocol

An Internet Protocol address, or IP address, identifies a node in a computer network that uses the Internet Protocol to communicate. The IP label is numerical.

Intrusion Detection System

An intrusion detection system (IDS), which can also be known as an intrusion prevention system (IPS) is a software application, or a device, that monitors a computer network, or system, for malicious activity or policy violations. Such intrusion activities, or violations, are typically reported either to a system administrator, or collected centrally by a security information and event management (SIEM) system.

IPv6

Internet Protocol version 6 is the most recent version of the Internet Protocol, designed to replace IPv4. It uses 128-bit numerical addresses to identify devices, allowing for a vastly larger address space.

JavaScript Object Notation

JSON is an open standard file format for data interchange. It uses human-readable text to store and transmit data objects, which consist of attribute–value pairs and arrays.

Joint Photographic Experts Group

JPEG, or JPG, is a method of lossy compression that is used for digital images. The degree of compression can be adjusted, allowing a selectable tradeoff between storage size and image quality.

Lightweight Directory Access Protocol

LDAP is an open, vendor-neutral, industry standard application protocol that lets you access and maintain distributed directory information services over an internet protocol (IP) network.

Lightweight Directory Access Protocol Secure

LDAP over SSL or Secure LDAP is the secure version of LDAP.

Link Layer Discovery Protocol

LLDP is a vendor-neutral link layer protocol used by network devices for advertising identity, capabilities, and neighbors on a local area network.

Managed Security Service Provider

In computing, MSSP are network security services that have been outsourced to a service provider. A company that provides this type of service is known as an MSSP.

Management Information Base

An MIB is a collection of definitions that specify the properties of the managed resources within a network device (like routers or switches) and how they can be accessed using SNMP (Simple Network Management Protocol).

Media Access Control

A MAC address is a unique identifier for a network interface controller (NIC). It is used as a network address in network segment communications. A common use is in most IEEE 802 networking technologies, such as Bluetooth, Ethernet, and Wi-Fi. MAC addresses are most commonly assigned by device manufacturers and are also referred to as a hardware address, or physical address. A MAC address normally includes a manufacturer's organizationally unique identifier (OUI). It can be stored in hardware, such as the card's read-only memory, or by a firmware mechanism.

Megabyte

The megabyte is a multiple of the unit byte for digital information. One megabyte is one million bytes.

Message Queuing Telemetry Transport

Message Queuing Telemetry Transport is a lightweight, publish-subscribe network protocol designed for constrained devices and low-bandwidth, high-latency, or unreliable networks. It is commonly used in Internet of Things (IoT) applications.

Mobile Device Management

This is the administration of mobile devices, such as tablet computers, laptops, and smartphones. It is often implemented with a third-party product with features for specific vendors of mobile devices.

National Institute of Standards and Technology

NIST is an agency of the United States Department of Commerce. NIST's mission is to promote American innovation and industrial competitiveness.

National Vulnerability Database

The National Vulnerability Database (NVD) is the U.S. government repository of standards-based vulnerability management data represented using the Security Content Automation Protocol (SCAP). This data enables automation of vulnerability management, security measurement, and compliance. NVD includes databases of security checklists, security related software flaws, misconfigurations, product names, and impact metrics.

Network Address Translation

NAT is a method of mapping an internet protocol (IP) address space into another one. This is done by modifying network address information in the IP header of packets while in transit across a traffic routing device.

Network-Attached Storage

NAS is a dedicated file storage system that provides local-area network (LAN) users with centralized, shared access to data through standard protocols such as NFS or SMB.

Network Interface Controller

A network interface controller (NIC), sometimes known as a network interface card, is a computer hardware component that lets a computer connect to a computer network.

Network Time Protocol

The NTP is a networking protocol to synchronize clocks between computer systems over variable-latency, packet-switched data networks.

Newline Delimited JSON

NDJSON is a data format where each line is a valid JSON value, used for streaming or storing structured records efficiently.

Nozomi Networks Operating System

N2OS is the operating system that the core suite of Nozomi Networks products runs on.

Nozomi Networks Query Language (N2QL)

N2QL is the language used in queries in Nozomi Networks software.

Open Virtual Appliance

An OVA file is an open virtualization format (OVF) directory that is saved as an archive using the .tar archiving format. It contains files for distribution of software that runs on a virtual machine. An OVA package contains a .ovf descriptor file, certificate files, an optional .mf file along with other related files.

Operating System

An operating system is computer system software that is used to manage computer hardware, software resources, and provide common services for computer programs.

Operational Technology

OT is the software and hardware that controls and/or monitors industrial assets, devices and processes.

Packet Capture

A pcap is an application programming interface (API) that captures live network packet data from the OSI model (layers 2-7).

Packet Capture Next Generation

A pcapNg is the latest version of a pcap file, an application programming interface (API) that captures live network packet data from the OSI model (layers 2-7).

Portable Document Format

PDF is a Adobe file format that is used to present documents. It is independent of operating systems (OS), application software, hardware.

Portable Network Graphics

PNG is a raster graphics file format that supports lossless data compression.PNG was developed as an improved, non-patented replacement for graphics interchange format (GIF).

Privacy-Enhanced Mail

PEM is a standard file format that is used to store and send cryptographic keys, certificates, and other data. It is based on a set of 1993 IETF standards.

Programmable Logic Controller

A PLC is a ruggedized, industrial computer used in industrial and manufacturing processes.

Protected Extensible Authentication Protocol

PEAP is a protocol that encloses the Extensible Authentication Protocol (EAP) within an encrypted and authenticated Transport Layer Security (TLS) tunnel.

Random-access Memory

Computer memory that can be read and changed in any order. It is typically used to store machine code or working data.

Remote Terminal Unit

An RTU is a microprocessor-controlled electronic device that acts as an interface between a SCADA (supervisory control and data acquisition) system, or distributed control system, to a physical object. It transmits telemetry data to a master system, and uses messages from the master supervisory system to control connected objects.

Representational State Transfer

Representational State Transfer (REST) is an architectural style for designing networked applications. It uses stateless, client-server communication via standard HTTP methods (GET, POST, PUT, DELETE) to access and manipulate web resources represented in formats like JSON or XML.

Seamless Message Protocol

Seamless Message Protocol is a communication protocol used primarily in industrial automation for device-level communication. It enables data exchange between controllers and devices over Ethernet networks.

Secure Copy Protocol

SCP is a protocol for the secure transfer of computer files between a local host and a remote host, or between two remote hosts. It is based on the secure shell (SSH) protocol.

Secure Shell

A cryptographic network protocol that let you operate network services securely over an unsecured network. It is commonly used for command-line execution and remote login applications.

Secure Sockets Layer

A secure sockets layer ensures secure communication between a client computer and a server.

Security Assertion Markup Language

SAML is an open standard, XML-based markup language for security assertions. It allows for the exchange of authentication and authorization data different parties such as a service provider and an identity provider.

Security Information and Event Management

SIEM is a field within the computer security industry, where software products and services combine security event management (SEM) and security information management (SIM). SIEMs provide real-time analysis of security alerts.

Server Message Block

Is a communication protocol which provides shared access to files and printers across nodes on a network of systems. It also provides an authenticated interprocess communication (IPC) mechanism.

Simple File Transfer Protocol

SFTP was proposed as an unsecured file transfer protocol with a level of complexity intermediate between TFTP and FTP. It was never widely accepted on the internet.

Simple Mail Transfer Protocol

SMTP is an internet standard communication protocol that is used for the transmission of email. Mail servers and other message transfer agents use SMTP to send and receive mail messages.

Simple Network Management Protocol

SNMP is an Internet Standard protocol for the collection and organization of information about managed devices on IP networks. It also lets you modify that information to change device behavior. Typical devices that support SNMP are: printers, workstations, cable modems, switches, routers, and servers.

Simple Text Oriented Messaging Protocol

STOMP is a simple text-based protocol, for working with message-oriented middleware (MOM). It provides an interoperable wire format that allows STOMP clients to talk with any message broker supporting the protocol.

Single Sign-on

SSO is an authentication method that lets users log in to one or more related, but independent, software systems.

Spanning Tree Protocol

Spanning Tree Protocol is a network protocol that prevents loops in Ethernet networks by creating a spanning tree topology. It selectively blocks redundant paths and ensures a loop-free logical topology.

Structured Threat Information Expression

STIX™ is a language and serialization format for the exchange of cyber threat intelligence (CTI). STIX is free and open source.

Supervisory control and data acquisition

SCADA is a control system architecture which has computers, networked data communications and graphical user interfaces for high-level supervision of processes and machines. It also covers sensors and other devices, such as programmable logic controllers (PLC), which interface with process plant or machinery.

Text-based User Interface

In computing, a text-based (or terminal) user interfaces (TUI) is a retronym that describes a type of user interface (UI). These were common as an early method of human–computer interaction, before the more modern graphical user interfaces (GUIs) were introduced. Similar to GUIs, they might use the entire screen area and accept mouse and other inputs.

Thick Provisioning (Static)

Thick provisioning, also known as fat provisioning, is a method of allocating a fixed amount of physical storage to a virtual disk at creation. The full storage space is reserved immediately, regardless of how much data is actually stored.

Thin Provisioning (Dynamic)

Thin provisioning is a method of allocating storage space on a just-in-time basis as data is written, rather than reserving the full amount upfront. This approach makes more efficient use of available storage capacity.

Threat Intelligence™

Nozomi Networks **Threat Intelligence™** feature monitors ongoing OT and IoT threat and vulnerability intelligence to improve malware anomaly detection. This includes managing packet rules, YARA rules, STIX indicators, Sigma rules, and vulnerabilities. **Threat Intelligence™** allows new content to be added, edited, and deleted, and existing content to be enabled or disabled.

Transmission Control Protocol

One of the main protocols of the Internet protocol suite.

Transport Layer Security

TLS is a cryptographic protocol that provides communications security over a computer network. The protocol is widely used in applications such as: HTTPS, voice over IP, instant messaging, and email.

Uniform Resource Identifier

A URI is a unique string of characters used to identify a logical or physical resource on the internet or local network.

Uniform Resource Locator

An URL is a reference to a resource on the web that gives its location on a computer network and a mechanism to retrieving it.

Uninterruptible Power Supply

A UPS is an electric power system that provides continuous power. When the main input power source fails, an automated backup system continues to supply power.

Universally unique identifier

A UUID is a 128-bit label that is used for information in computer systems. When a UUID is generated with standard methods, they are, for all practical purposes, unique. Their uniqueness is not dependent on an authority, or a centralized registry. While it is not impossible for the UUID to be duplicated, the possibility is generally considered to be so small, as to be negligible. The term globally unique identifier (GUID) is also used in some, mostly Microsoft, systems.

Universal Plug and Play

UPnP is a network protocol that enables devices to automatically discover and communicate with each other using broadcast messages. While it facilitates easy device identification and connectivity, UPnP lacks robust authentication, making it vulnerable to unauthorized access in cybersecurity contexts.

Universal Serial Bus

Universal Serial Bus (USB) is a standard that sets specifications for protocols, connectors, and cables for communication and connection between computers and peripheral devices.

User Datagram Protocol

UDP is a lightweight, connectionless communication protocol used for fast, time-sensitive data transmission, such as video streaming, online gaming, and VoIP. UDP prioritizes speed and low latency over guaranteed delivery or error correction.

User Interface

An interface that lets humans interact with machines.

Variable

In the context of control systems, a variable can refer to process values that change over time. These can be temperature, speed, pressure etc.

Virtual DOM

A virtual DOM, or vdom, is a lightweight JavaScript representation of the Document Object Model (DOM). It is used in declarative web frameworks such as Elm, React, and Vue.js. It enables the updating of the virtual DOM is comparatively faster than updating the actual DOM.

Virtual Hard Disk

VHD is a file format that represents a virtual hard disk drive (HDD). They can contain what is found on a physical HDD, such as disk partitions and a file system, which in turn can contain files and folders. They are normally used as the hard disk of a virtual machine (VM). They are the native file format for Microsoft's hypervisor (virtual machine system), Hyper-V.

Virtual Local Area Network

A VLAN is a broadcast domain that is isolated and partitioned in a computer network at the data link layer (OSI layer 2).

Virtual Machine

A VM is the emulation or virtualization of a computer system. VMs are based on computer architectures and provide the functionality of a physical computer.

Windows Remote Management

Is a Microsoft implementation of Web Services-Management in Windows which lets systems access or exchange management information across a common network. You can utilize the built-in command line tool, or scripting objects, WinRM can be used with remote computers that may have baseboard management controllers (BMCs) to acquire data.

YARA

YARA is a tool designed to help identify and classify malware samples by describing them in terms of textual or binary patterns. YARA rules are used to detect files, processes, or network traffic that match known malware signatures.

ZIP

An archive file format that supports lossless data compression. The format can use a number of different compression algorithms, but DEFLATE is the most common one. A ZIP file can contain one or more compressed files or directories.