

1. Unpacking the slide rail

The following parts are needed to install the rail kit:

- 1x pack of FL001J0-A screws (for securing the sliding rails onto the unit), in the 'pizza box'
- 1x pack with rack mounting ears and screws, in the pizza box
- 2x Slide-Rails
- Philips screwdriver (not included)



PLEASE NOTE: If any component is missing or damaged, please contact your dealer immediately for assistance.

2. Attach ears

Unpack the light blue ears, and six (6) small bugle-headed screws.

On each side of the appliance, match screw and holes.


Attach one (1) ear to the front each side of the appliance using 3 of the provided screws.



3. Attach rail brackets

For both left and right side of the appliance, proceed to:


1. Unpack a slide rail and slide the inner channel to its end.
2. Slide the rail bracket out to its end.
3. Detach the rail bracket from the channel, by locating and pushing the (white) Release Tab on the rail bracket while sliding it out.
4. Align the rail bracket to the side of the chassis (blue tab goes toward the front) and fix it using 4 of the provided flat-head screws.

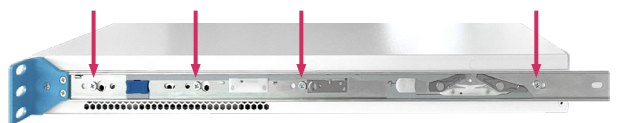

4. Installing the slide rail assemblies

This slide-rail kit does NOT require tools to rack your appliance.

1. Identify an available rack unit and fit the front clamp into the unit's 3 holes. Lock it by clipping the rail's front end to the post, as shown in the image. You should hear a "click" once it is firmly attached.
2. For the rear rack installation, slide the rail to engage rail back side bolts to two (2) holes on the same unit used on the front. Lock it by clipping the rail's rear end to the post, as shown in the image. You should hear a "click" once it is firmly attached.

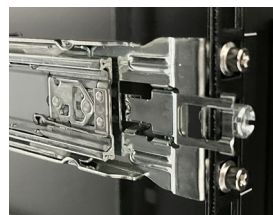


Front




Rear

5. Installing the chassis onto the rack


1. Stretch both inner channels out to their fullest extent. You will hear a “click” when they are fully stretched and locked.

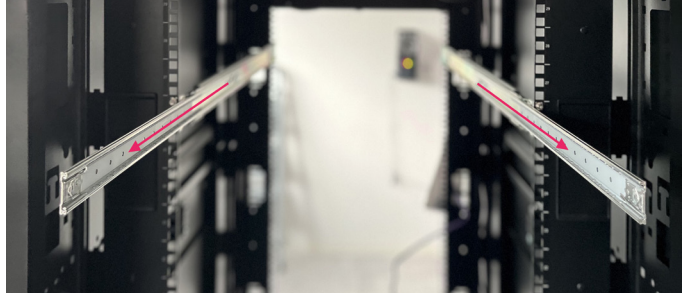

2. Holding the chassis with its front facing you, lift and gently insert it into the rack by aligning both brackets with the slide-rail assemblies, as shown in the image. Then gently push the unit into the cabinet maintaining a straight line.

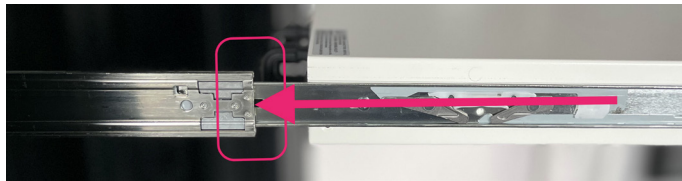

3. To insert the chassis fully into the rack, pull and hold the Rail Lock tab on both sides while sliding the chassis in.

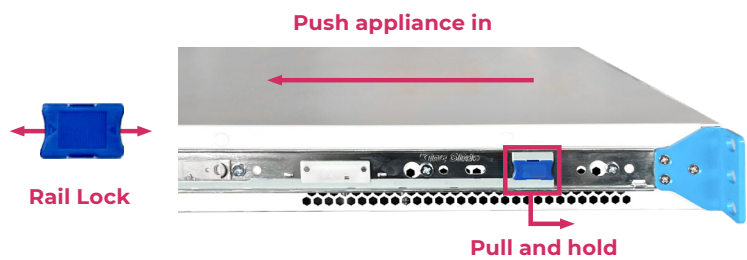

6. Removing the chassis from the rack

To remove the appliance from the rail guides, pull the white release tab on both brackets while pulling the appliance out.

Hold the appliance firmly, not just from the front.

